

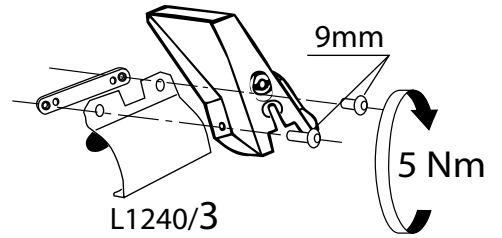
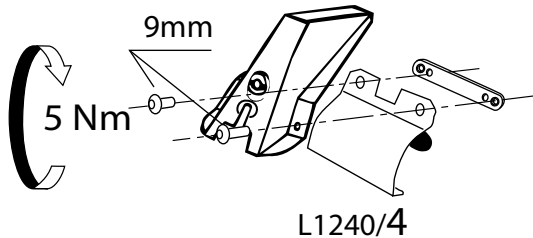
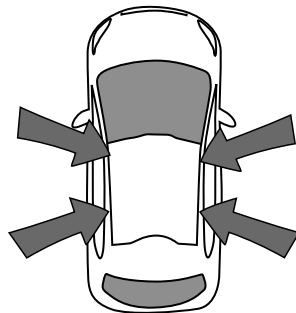
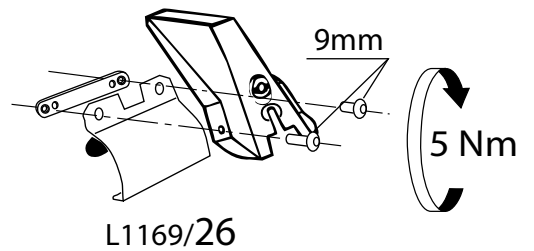
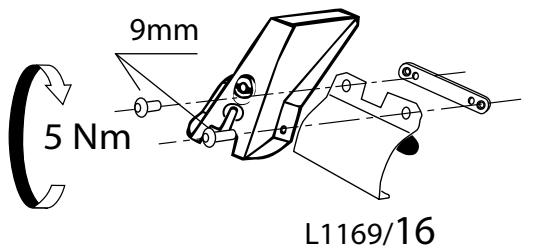


MOCSRR0AC0011 cm 124

MOCSRR0AL0007 cm 124

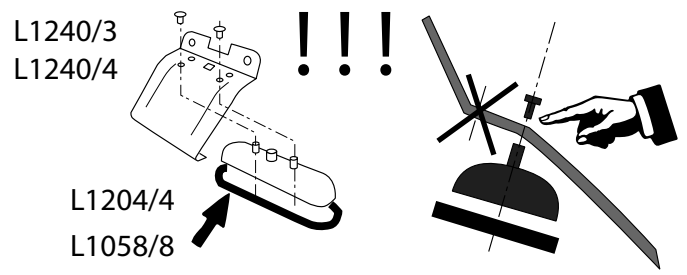







1 - L1169/16 ant. sx	1 - L1240/3 post. dx	4 - L1204/4	8 - RCVM6X9Q
1 - L1169/26 ant. dx	1 - L1240/4 post. sx	4 - L1058/8	4 - RC20200026
			1 - RCBR5

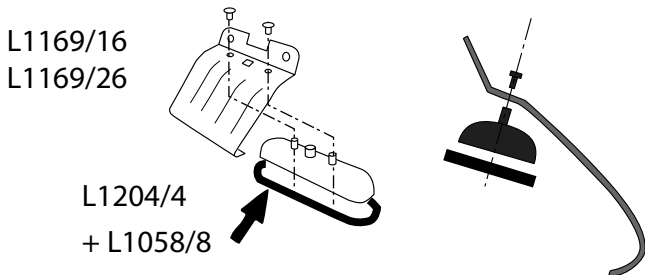

MOCSRR0AC0011 cm 124

MOCSRR0AL0007 cm 124

 anteriore, avant, front,
vorne, delantera

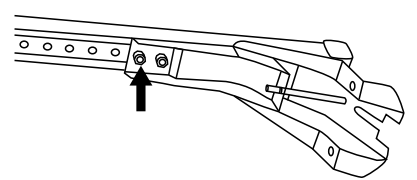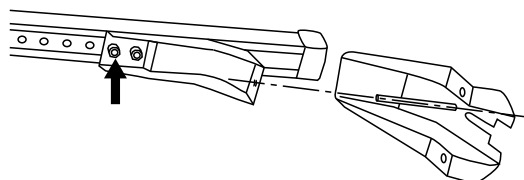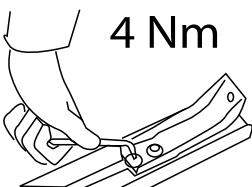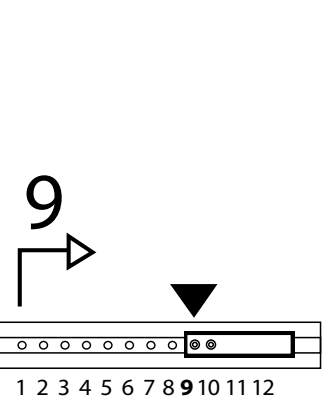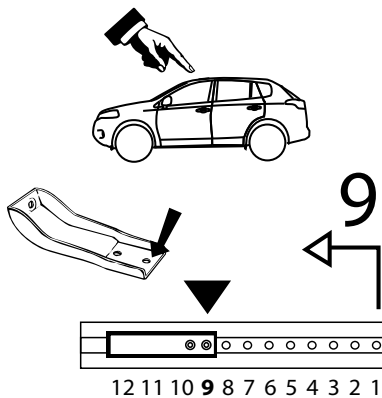


MOCSKT 0435


!!!






MOCSRR0AC0011 cm 124
MOCSRR0AL0007 cm 124

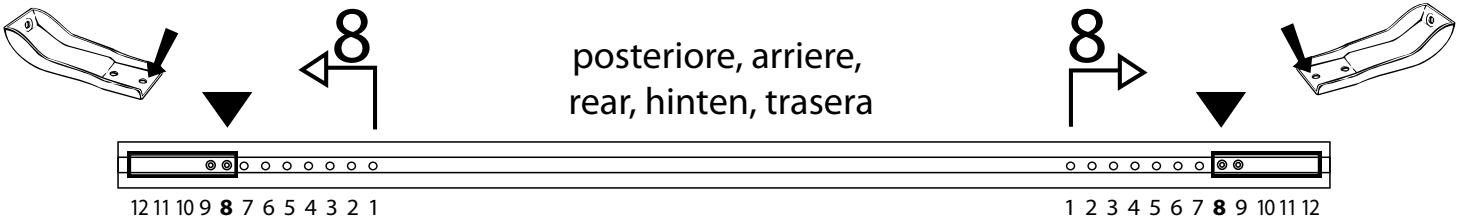


posteriore, arriere,
 rear, hinten, trasera

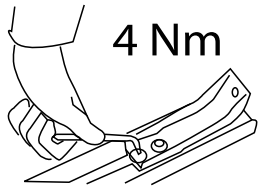


4 Nm

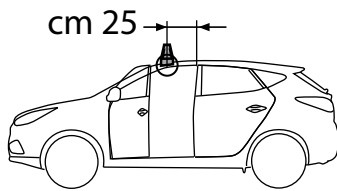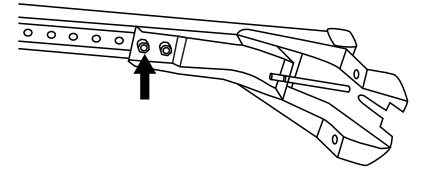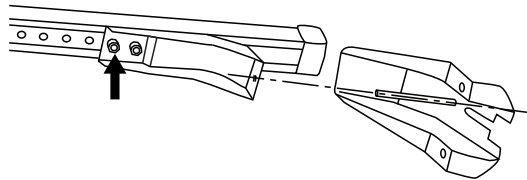

cm 25

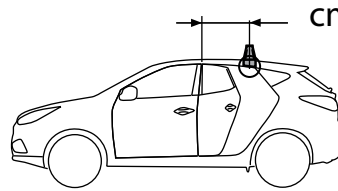


cm 54

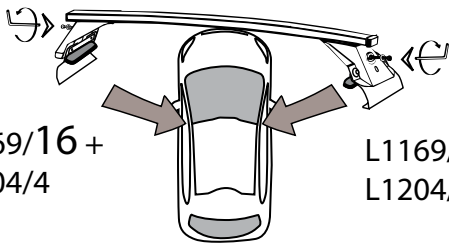


L1169/16 +
 L1204/4

L1169/26 +
 L1204/4

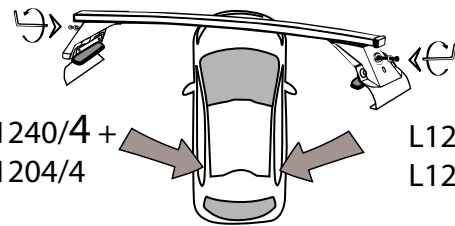

L1240/4 +
 L1204/4

L1240/3 +
 L1204/4

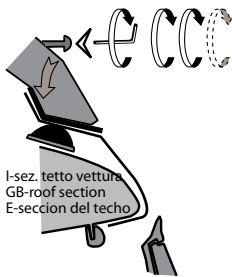

I-sez. tetto vettura
 GB-roof section
 E-seccion del techo



max 4 Nm


I - Per stringere, usare la chiave come indicato nel disegno. (Non si assumono responsabilità per danni causati dall'impiego di chiavi diverse da quella in dotazione al prodotto).

F - Pour serrer, utiliser la clé comme indique ci dessous.

GB - To tighten please use the wrench as per the drawing.

D - Zum Anziehen benutzen Sie bitte den Inbusschlüssel, nur wie auf dem Bild dargestellt.

E - Para el correcto ajuste, utilizar la llave fija tal y como se indica en la imagen

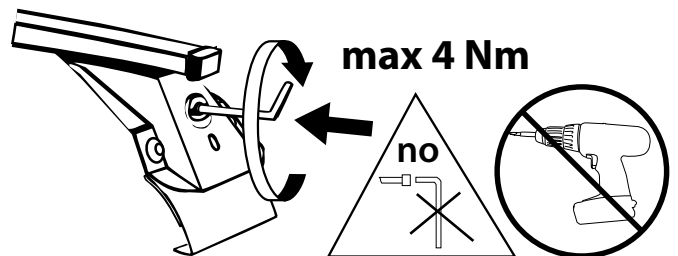

max 4 Nm

no