

Installation Manual



ALFA ROMEO MITO 3DR

AR-MITO-3-A



COMPONENTS INCLUDED

SHADES

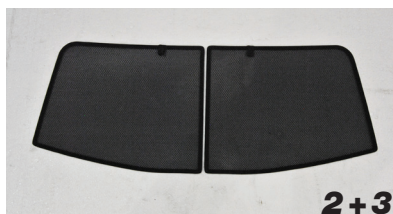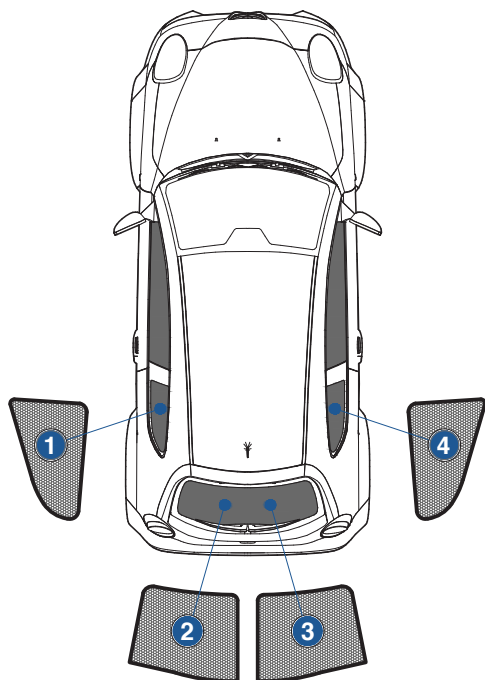

FIXING CLIPS



CL-M02 x 4




CL-M14 x 1



Quarter Light Shade Installation

ALFA ROMEO MITO 3DR
AR-MITO-3-A

COMPONENTS NEEDED:

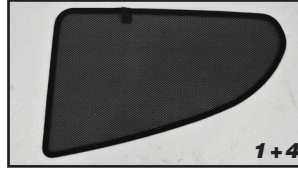

STEP #1

ATTACH CLIPS ON SHADE EDGES




STEP #2

INSERT CLIPS BEHIND INTERIOR TRIM



STEP #3


ENSURE SECURELY FITTED IN PLACE

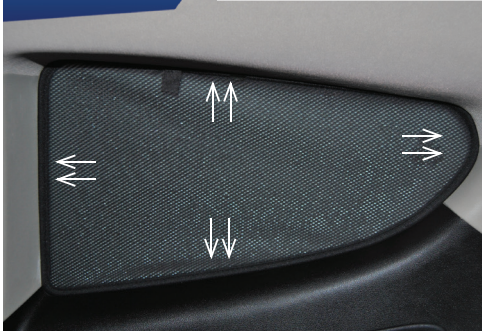

Rear Shade Installation

ALFA ROMEO MITO 3DR
AR-MITO-3-A

COMPONENTS NEEDED:

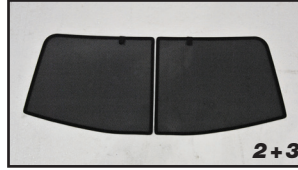


STEP #1

ATTACH CLIPS ON SHADE EDGES



STEP #2

POSITION THE REAR SHADE

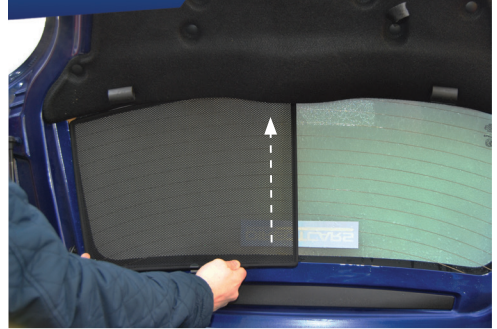


STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM




STEP #4

REPEAT THE PROCESS ON OTHER SHADE

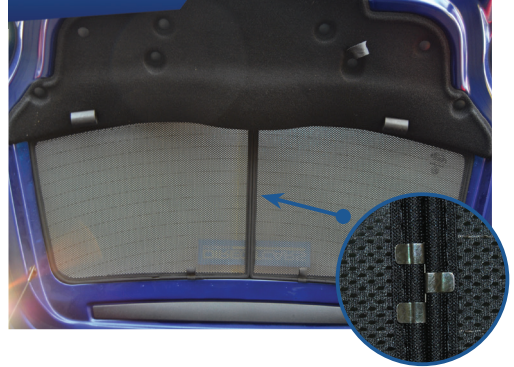

STEP #5

ENSURE SECURELY FITTED IN PLACE

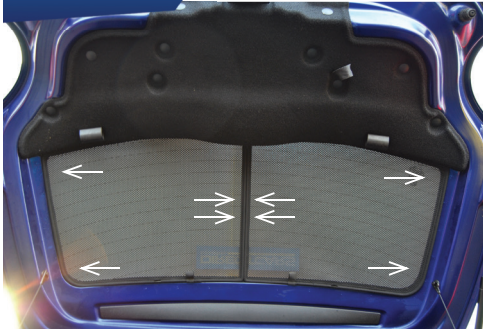

CAR
SHADES