
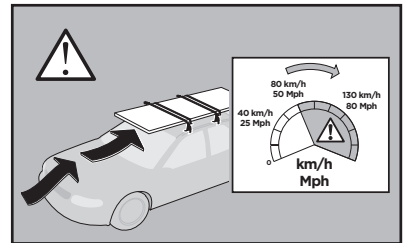
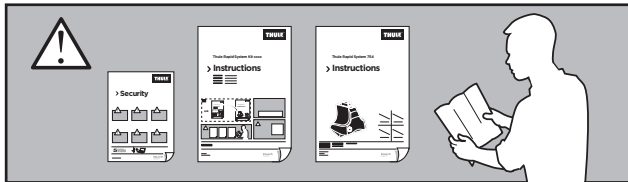
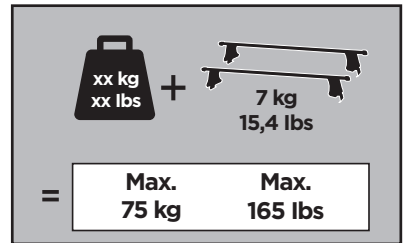


Thule Rapid System Kit 1015

> Instructions

BMW 3-Series, 2-dr Coupé, 92-98 / *92-99

*North America

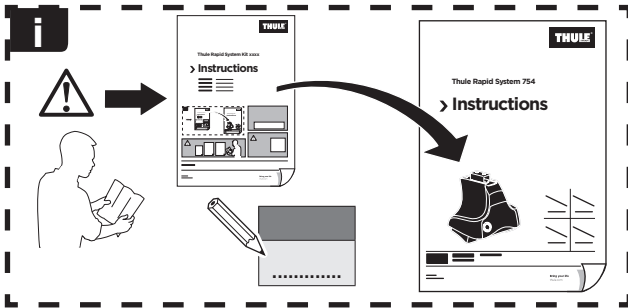

ISO 11154-E

141015


C.20130107
519-1015-02

Bring your life

thule.com




10 x4



11 x4





x1



x1

1



	X (scale)	X (mm)	X (inch)
BMW 3-Series, 2-dr Coupé, 92-98 / *92-99	29,5	946	37 1/4

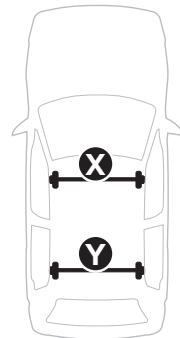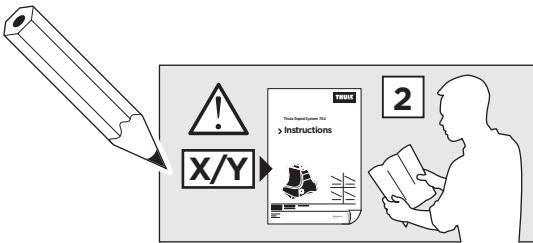


	Y (scale)	Y (mm)	Y (inch)
BMW 3-Series, 2-dr Coupé, 92-98 / *92-99	26,5	916	36 1/8

2

BMW 3-Series, 2-dr Coupé, 92-98 / *92-99

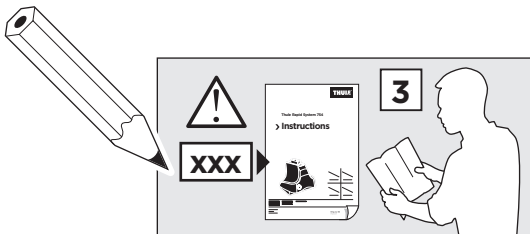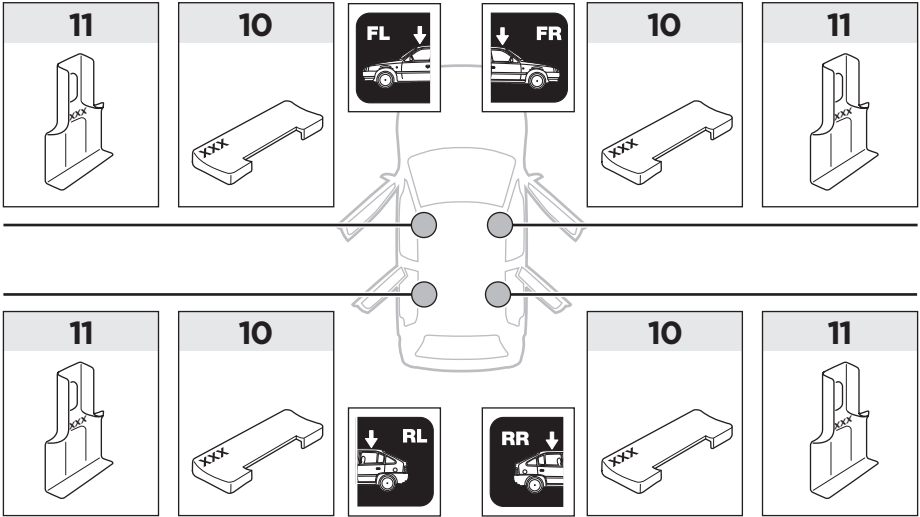

3

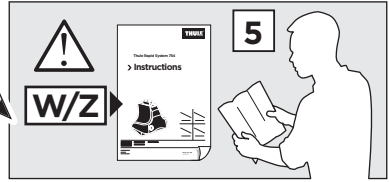

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW 3-Series, 2-dr Coupé, 92-98 / *92-99	250	700	9 7/8	27 1/2

