







Thule Rapid System Kit 1028

> Instructions

SAAB 900, 3-dr Hatchback, 94-97

SAAB 9-3, 3-dr Hatchback, 98-03

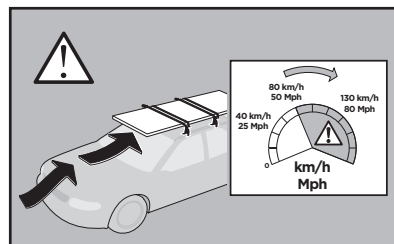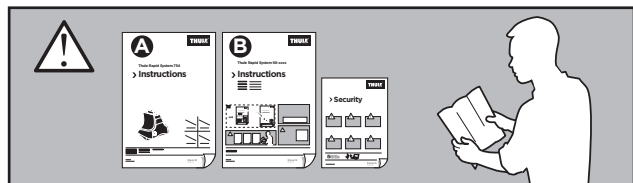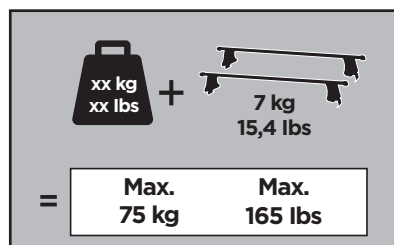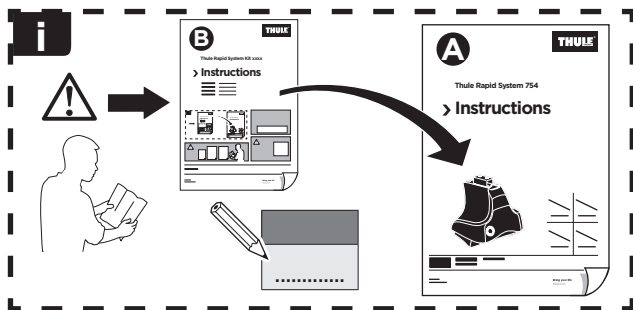

ISO 11154-E


141028

C.20130625
519-1028-01

Bring your life
thule.com



16 x4



05 x2



92 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
SAAB 900 , 3-dr Hatchback, 94-97	23,5	886	34 ⁷ / ₈
SAAB 9-3 , 3-dr Hatchback, 98-03	23,5	886	34 ⁷ / ₈

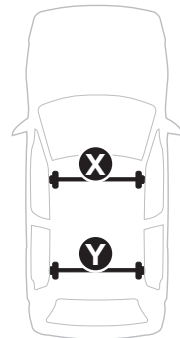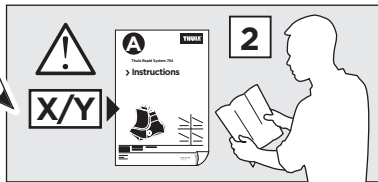
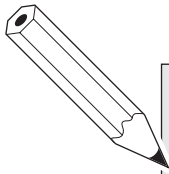


	Y (scale)	Y (mm)	Y (inch)
SAAB 900 , 3-dr Hatchback, 94-97	20	851	33 ¹ / ₂
SAAB 9-3 , 3-dr Hatchback, 98-03	20	851	33 ¹ / ₂


2

SAAB 900, 3-dr Hatchback, 94-97

SAAB 9-3, 3-dr Hatchback, 98-03

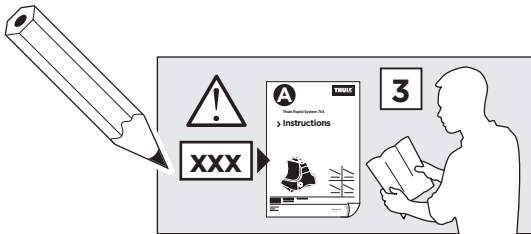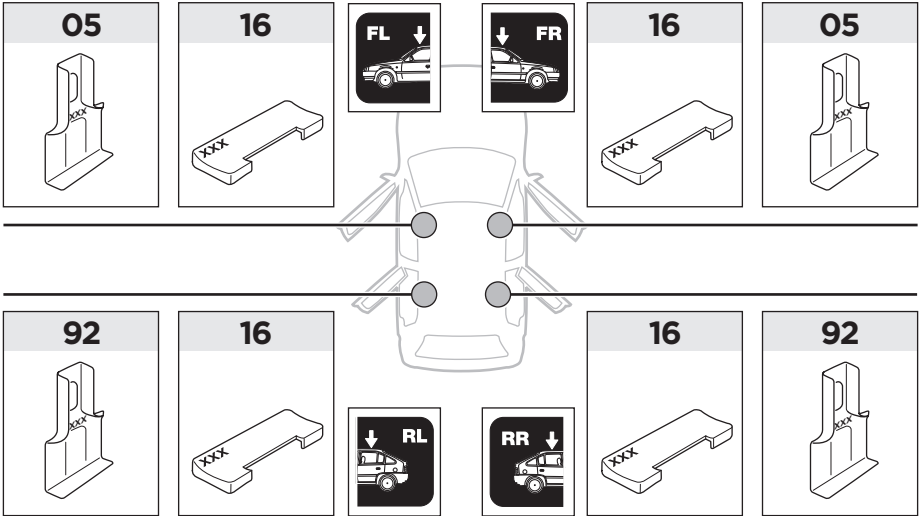

3

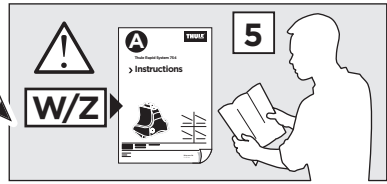

	W (mm)	Z (mm)	W (inch)	Z (inch)
SAAB 900 , 3-dr Hatchback, 94-97	180	730	7 1/8	28 3/4
SAAB 9-3 , 3-dr Hatchback, 98-03	180	730	7 1/8	28 3/4

