

# Thule Rapid System Kit 1039

# > Instructions





**AUDI A6**, 4-dr Sedan, 97-00, 01-03 / \*98-04

**AUDI S6**, 4-dr Sedan, 99-03 / \*98-04

**AUDI A6 Avant**, 5-dr Estate, 98-04

**AUDI A6**, 5-dr Wagon, \*99-05

\*North America

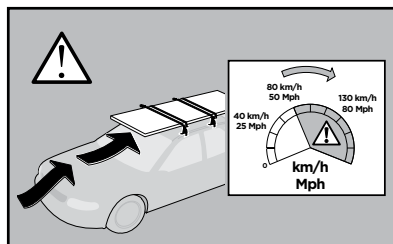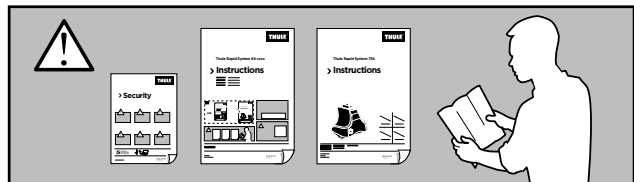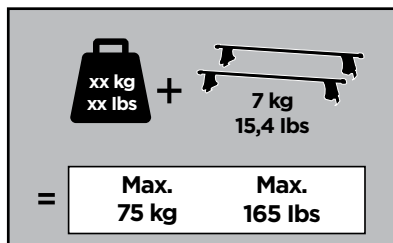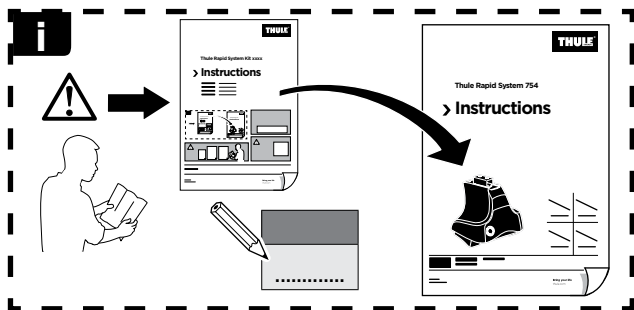


ISO 11154-E

**141039**

C.20121017  
519-1039-03



**Bring your life**

thule.com


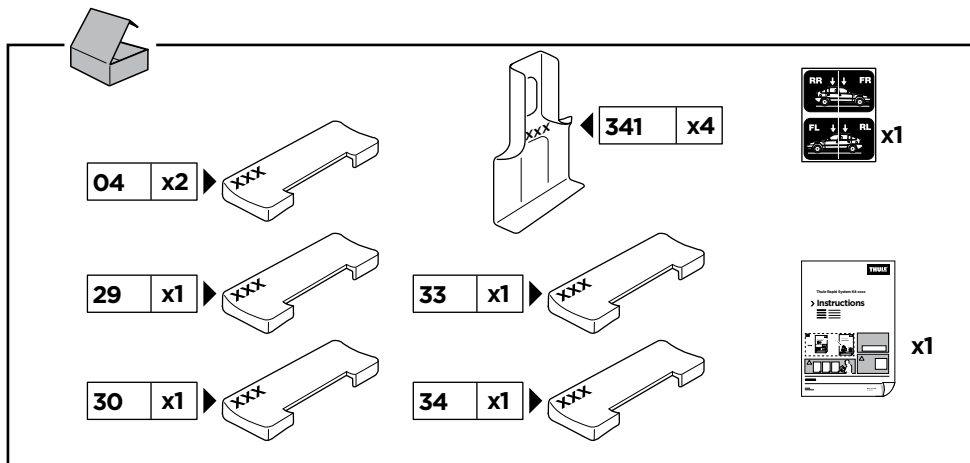


**1**

	X (scale)	X (mm)	X (inch)
<b>AUDI A6</b> , 4-dr Sedan, 97-00, 01-03 / *98-04	<b>34,5</b>	<b>996</b>	<b>39 1/4</b>
<b>AUDI S6</b> , 4-dr Sedan, 99-03 / *98-04	<b>34,5</b>	<b>996</b>	<b>39 1/4</b>
<b>AUDI A6 Avant</b> , 5-dr Estate, 98-04	<b>34</b>	<b>991</b>	<b>39</b>
<b>AUDI A6</b> , 5-dr Wagon, *99-05	<b>34</b>	<b>991</b>	<b>39</b>

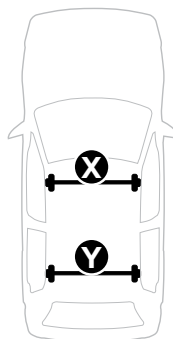
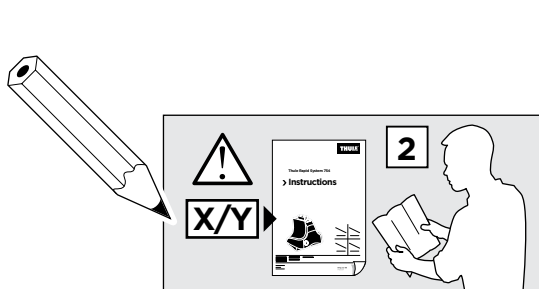


	Y (scale)	Y (mm)	Y (inch)
<b>AUDI A6</b> , 4-dr Sedan, 97-00, 01-03 / *98-04	<b>34,5</b>	<b>996</b>	<b>39 1/4</b>
<b>AUDI S6</b> , 4-dr Sedan, 99-03 / *98-04	<b>34,5</b>	<b>996</b>	<b>39 1/4</b>
<b>AUDI A6 Avant</b> , 5-dr Estate, 98-04	<b>32</b>	<b>971</b>	<b>38 1/4</b>
<b>AUDI A6</b> , 5-dr Wagon, *99-05	<b>32</b>	<b>971</b>	<b>38 1/4</b>

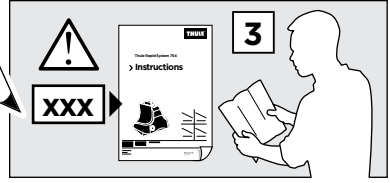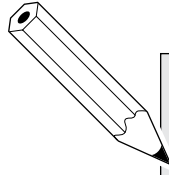**2**



**Audi A6**, 4-dr Sedan, 97-00, 01-03 / \*98-04

**Audi S6**, 4-dr Sedan, 99-03 / \*98-04

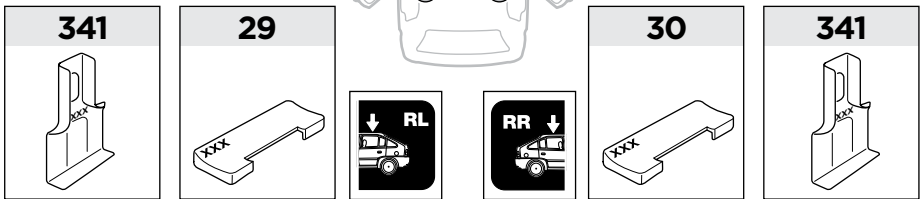
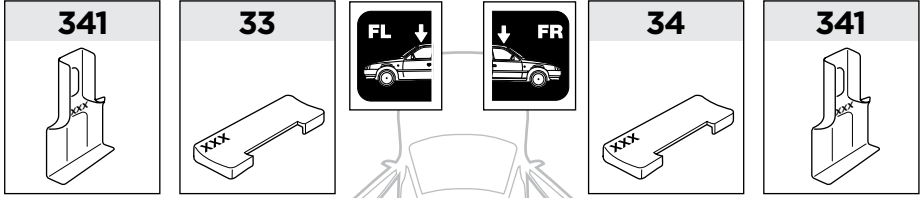


**AUDI A6 Avant**, 5-dr Estate, 98-04

**AUDI A6**, 5-dr Wagon, \*99-05

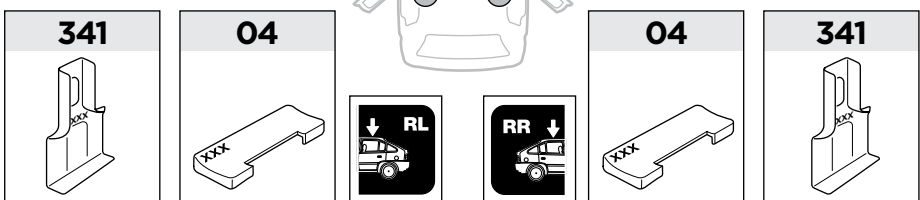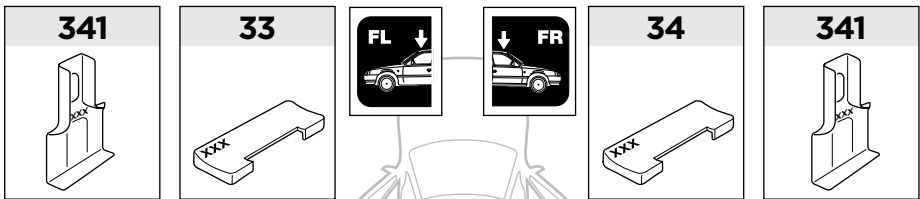

**3**

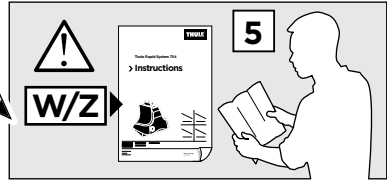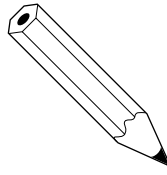

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>AUDI A6</b> , 4-dr Sedan, 97-00, 01-03 / *98-04	i*	i*	i*	i*
<b>AUDI S6</b> , 4-dr Sedan, 99-03 / *98-04	i*	i*	i*	i*
<b>AUDI A6 Avant</b> , 5-dr Estate, 98-04	i*	i*	i*	i*
<b>AUDI A6</b> , 5-dr Wagon, *99-05	i*	i*	i*	i*

**i\* = information**

