



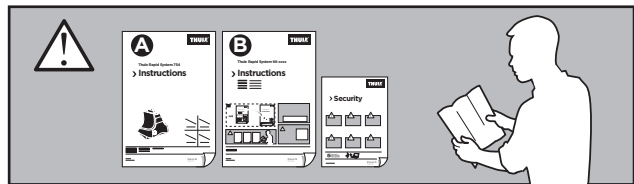

# Thule Rapid System Kit 1042

# > Instructions

TOYOTA Starlet, 5-dr Hatchback, 96-99

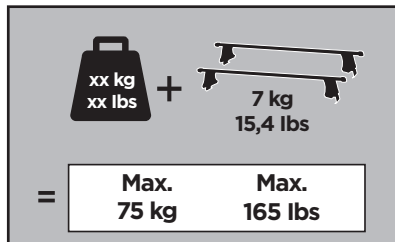

ISO 11154-E


141042

C.20130626  
519-1042-01


Bring your life  
thule.com



02 x2



06 x2



70 x2



107 x2






x1



x1

1


	X (scale)	X (mm)	X (inch)
<b>TOYOTA Starlet</b> , 5-dr Hatchback, 96-99	25,5	906	35 <sup>5</sup> / <sub>8</sub>

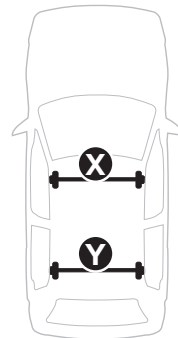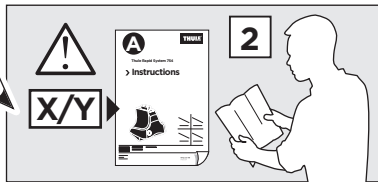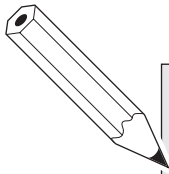


	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Starlet</b> , 5-dr Hatchback, 96-99	23	881	34 <sup>5</sup> / <sub>8</sub>

2

TOYOTA Starlet, 5-dr Hatchback, 96-99

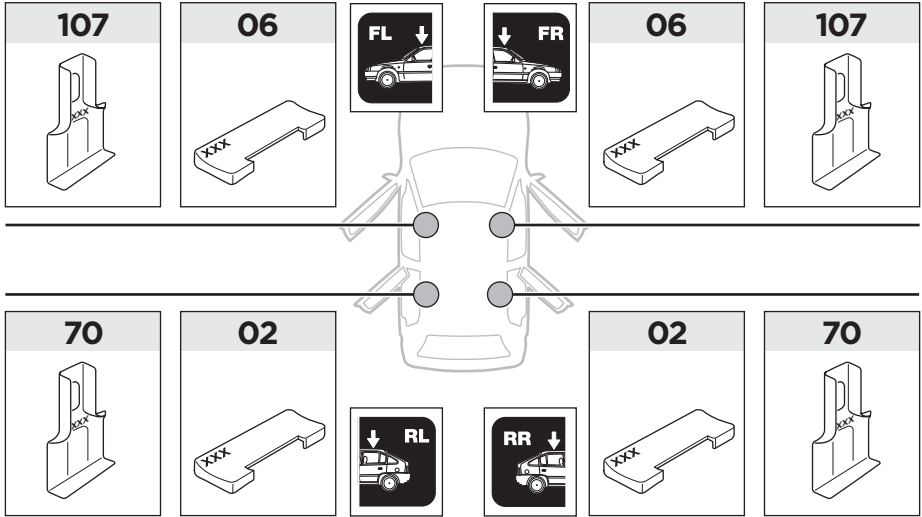

3

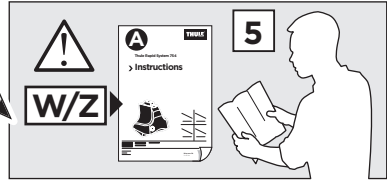

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Starlet, 5-dr Hatchback, 96-99</b>	<b>240</b>	<b>700</b>	<b>9 1/2</b>	<b>27 1/2</b>

