
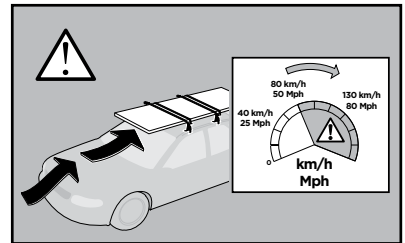
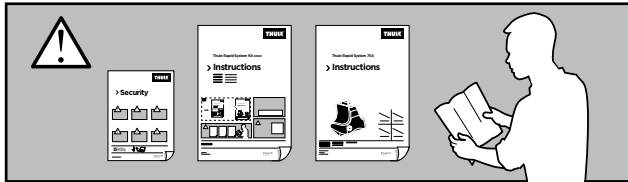
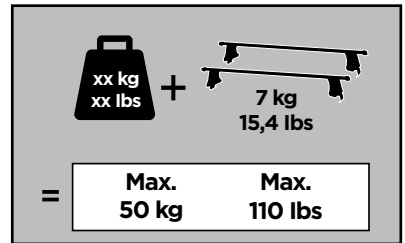


Thule Rapid System Kit 1526

> Instructions

BMW X6, 5-dr SUV, 08- / *09-

*North America

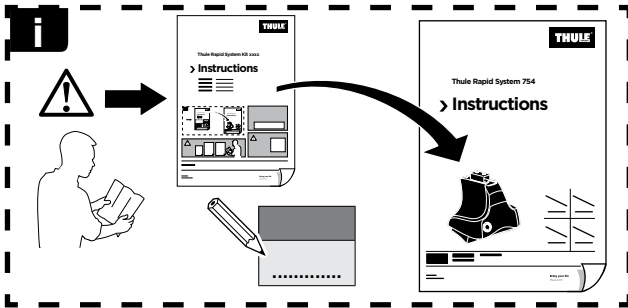

ISO 11154-E

141526


C.20120920
519-1526-02

Bring your life

thule.com



120 x1



121 x1

127 x2




1033 x1

1034 x1

1075 x2





x1



x1

1



	X (scale)	X (mm)	X (inch)
BMW X6 , 5-dr SUV, 08- / *09-	44	1091	43

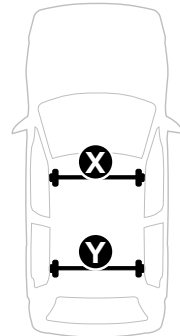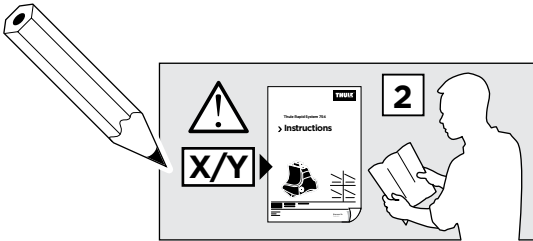


	Y (scale)	Y (mm)	Y (inch)
BMW X6 , 5-dr SUV, 08- / *09-	45,5	1106	43 1/2

2

BMW X6, 5-dr SUV, 08- / *09-

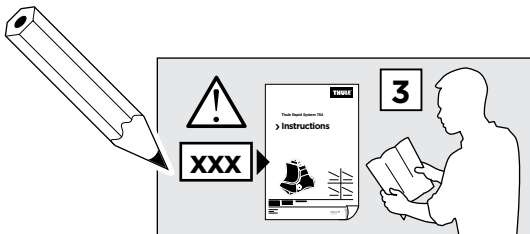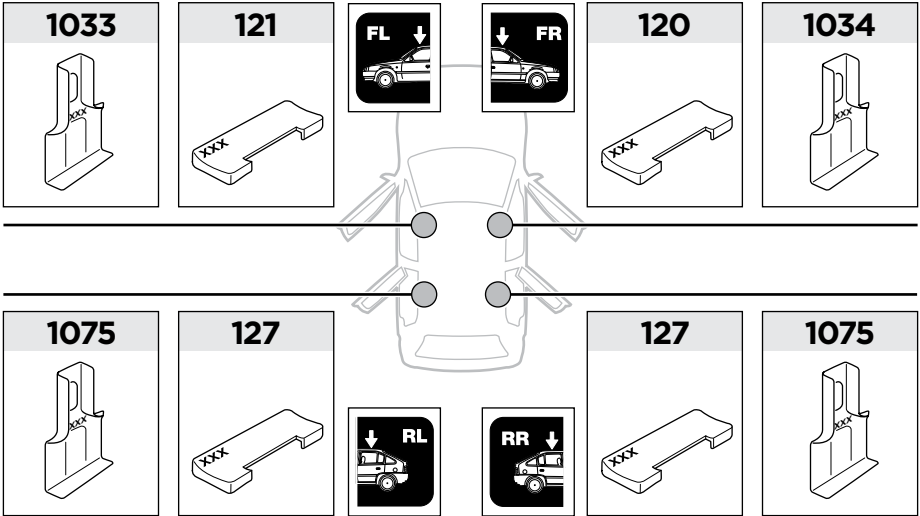

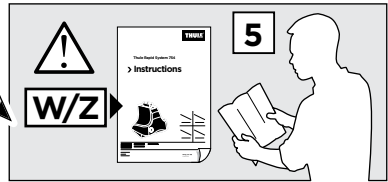3

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW X6, 5-dr SUV, 08- / *09-	230	650	9	25 ⁵/₈

