

# 1










## Kit 187009

VW California T5 & T6, 4-dr Bus, 03-15 / 15-  
 VW Transporter T5 & T6, 4-dr Van, 03-15 / 15-  
 VW Caravelle T5 & T6, 4-dr Bus, 03-15 / 15-  
 VW Shuttle T5 & T6, 4-dr Bus, 03-15 / 15-




ISO 11154-E


This kit is only for vehicles with fixpoint mounting.

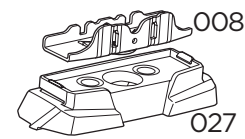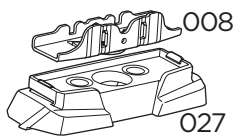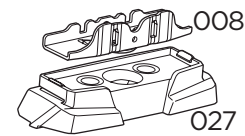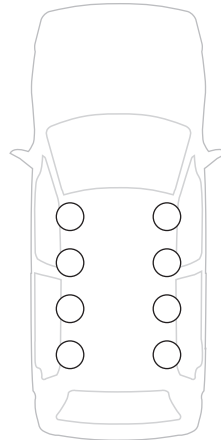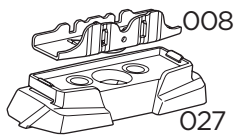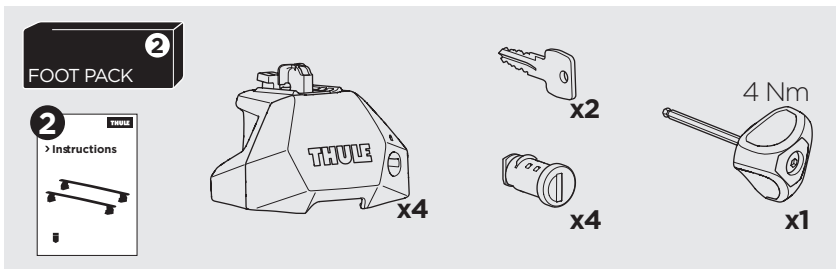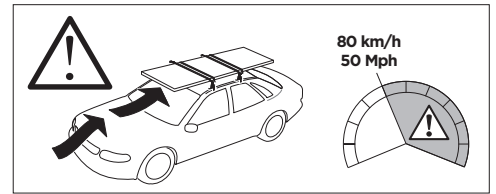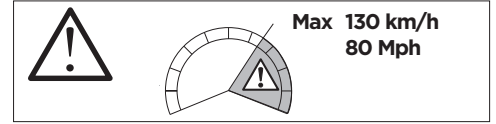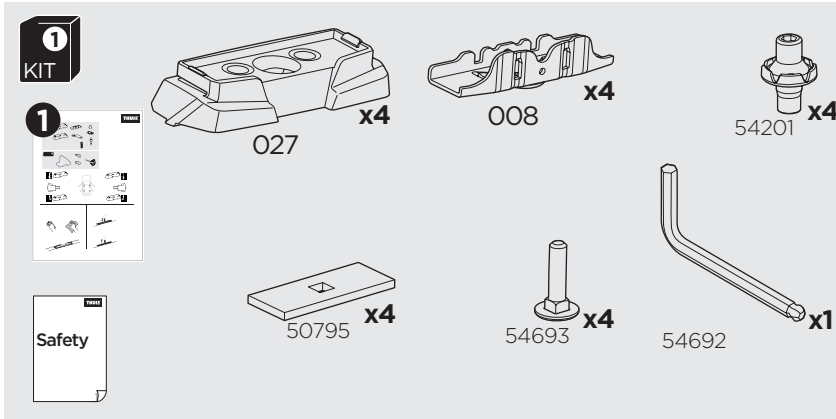


1

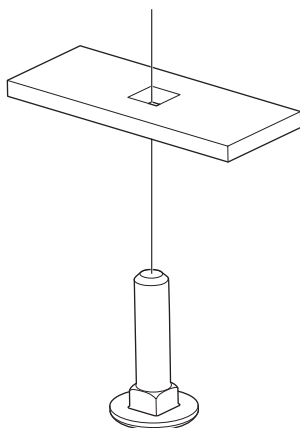


2

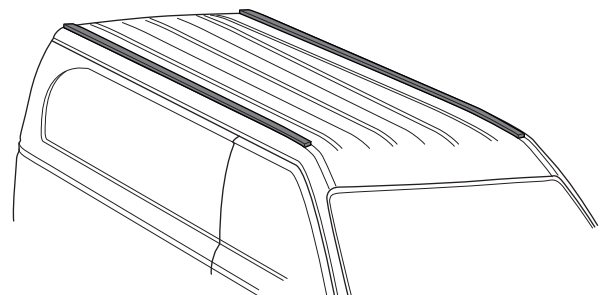


3

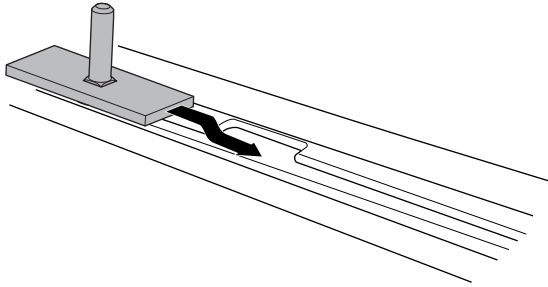


4

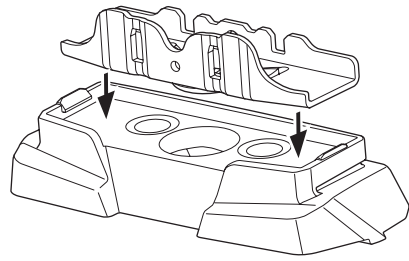

5

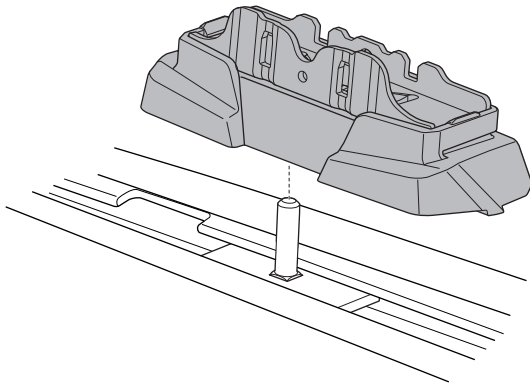

6

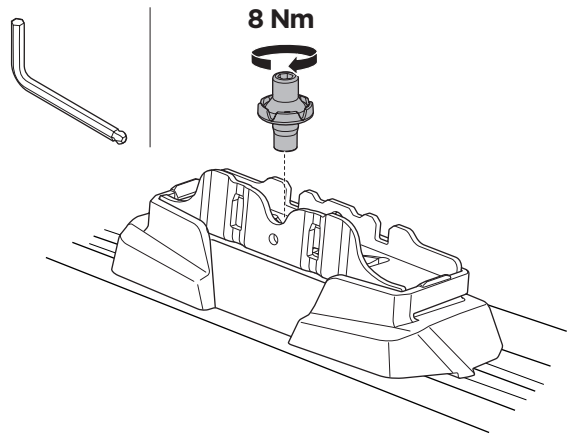

7

