

Opel/Vauxhall ASTRA 94; ASTRA 98;
CORSA 93; CORSA 01; TIGRA 94


MOSKOT 002





MOSRR0AL008 cm 110

MOSRR0AC012 cm 110


4 - L1030/1 	4 - L1030/2 	8- RCVM6X13Q 	8- RCPM6Q 	
		4- RCVM6X20Q 	1 - RCBR5 	
		4- RCRD6/20Q 		

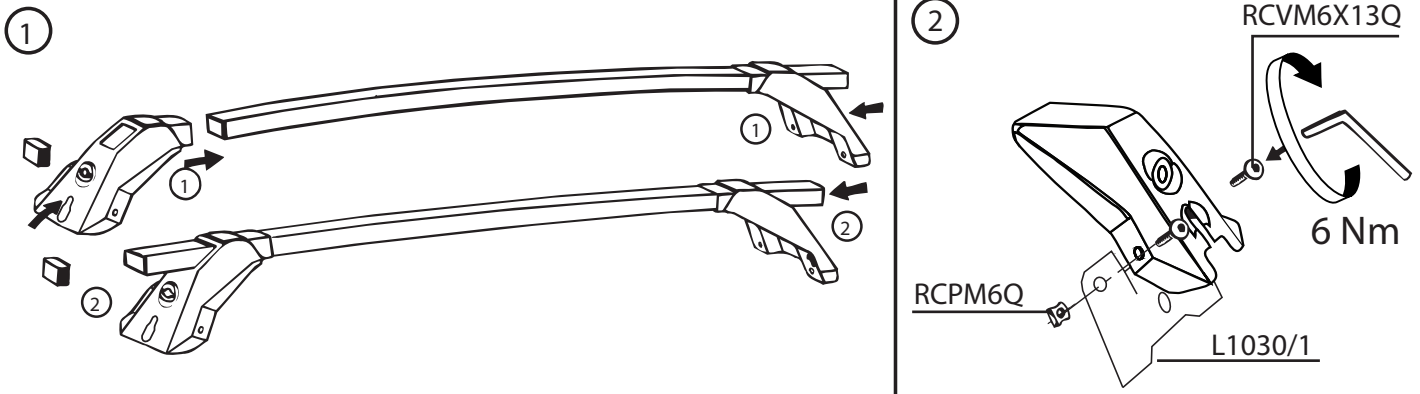

- ③
- I - Montare gli attacchi
 - F - Monter les pattes
 - GB - Attach the clamps
 - E - Colloque las abrazaderas a los soportes.

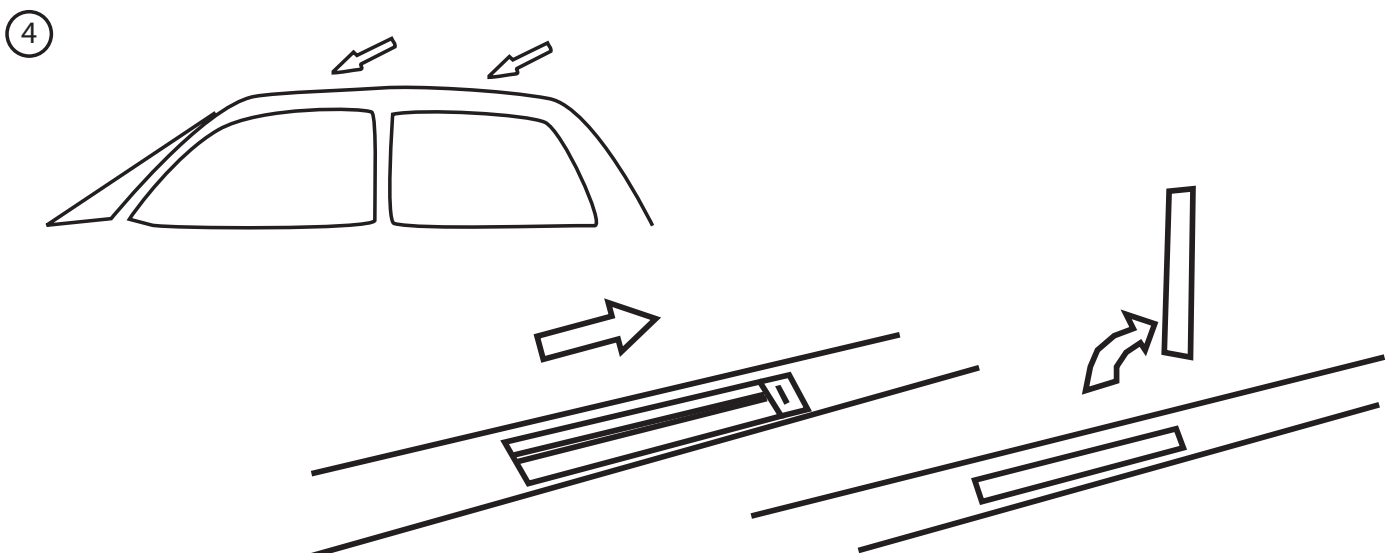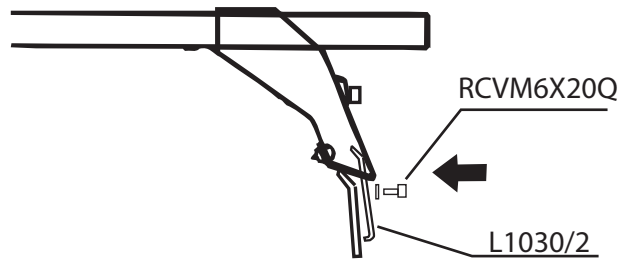

MOCSKT 002

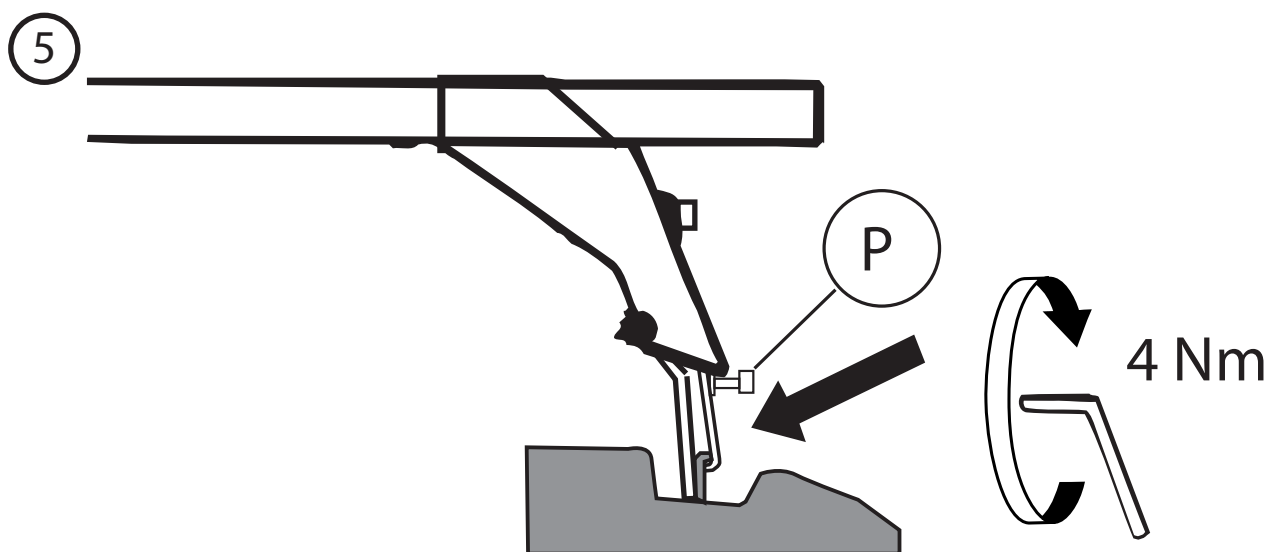

- I -Riposizionare le barre sul tetto; serrare le viti (P).
- F -Placer les barres sur le toit, accrochez les pattes a la fixation et enfin serrer les vis (P).
- GB -Place the bars on the roof, hook the clamps to the fixation point and fully tighten the screws (P).
- E -Colocar las barras en el techo, ajustar las abrazaderas a la fijacion y apretar los tornillos.



MODULA
case system

email: modulacs@modulacs.com
web site: www.modulacs.com

Modula s.r.l.
Loc. Penisola, 20/A
61026 Piandimeleto (PU) ITALY
phone +39 0722/700070
fax +39 0722/720017

18-01-2016