

Alfa Romeo 159 Sport Wagon mod. 2005 MOC SKT 053

MOC SRR0AC010 cm 110

MOC SRR0AL006 cm 110





max
Kg. 60

L2



2 - L1043			
2 - RC1500/60			
2 - RCRD6/20/4			
1 - L1125/3			
1 - L1125/4			
2 - RC1500/95			
6 - RCVM6X9Q			
2 - RCVM6X13Q			
4 - RC20200026			
1 - RCBR5			




MOC SRR0AC010 cm 110
MOC SRR0AL006 cm 110

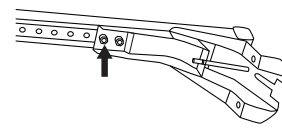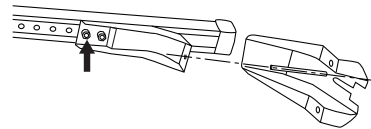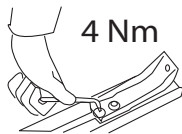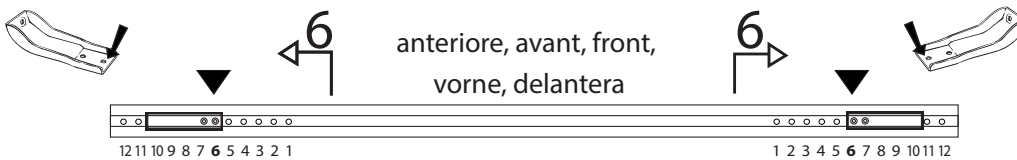

I-montare la barra anteriore.
F-monter la barre avant.
GB-fit the front bar.
D-Die vorderen Träger.
montieren.
E-ajustar la barra frontal.

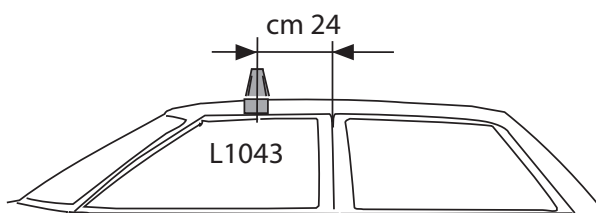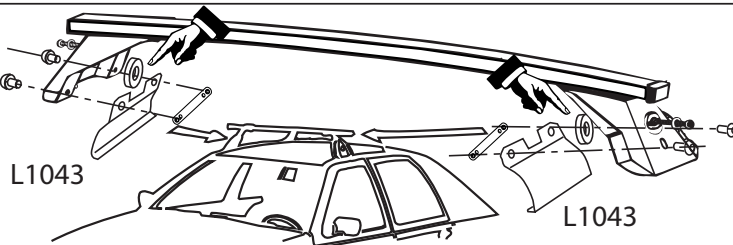

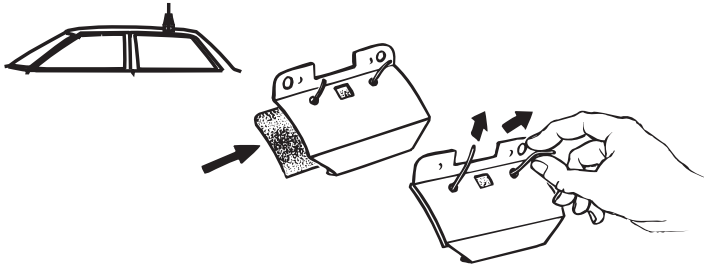


MOCSKT 053

!!!





MOCSRR0AC010 cm 110
MOCSRR0AL006 cm 110



5


posteriore, arriere,
rear, hinten, trasera

5





12 11 10 9 8 7 6 5 4 3 2 1

1 2 3 4 5 6 7 8 9 10 11 12

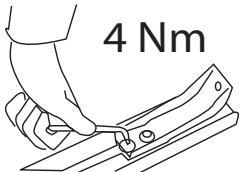


4 Nm

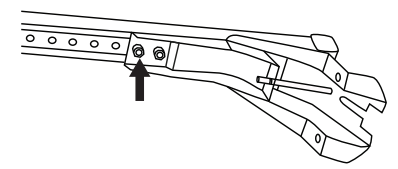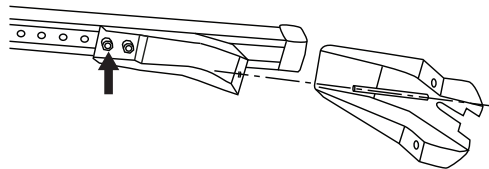


I- montare la barra posteriore.
F- monter la barre arrière.
GB- fit the rear bar.
D- Die hinteren Träger montieren.
E- ajustar la barra trasera.

L1125/3

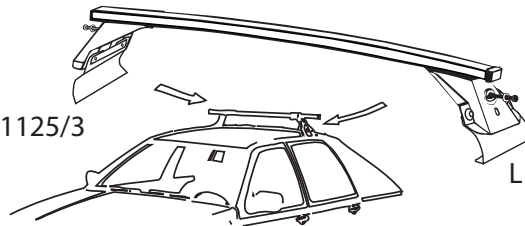

L1125/4

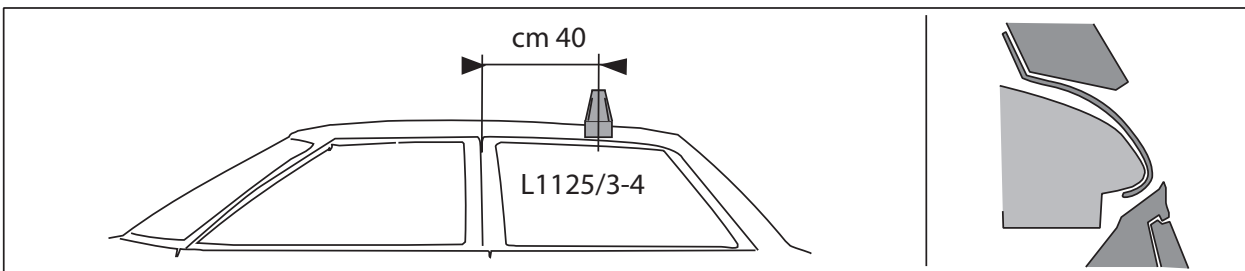

cm 40

L1125/3-4



I- Per stringere, usare la chiave come indicato nel disegno. (Non si assumono responsabilità per danni causati dall'impiego di chiavi diverse da quella in dotazione al prodotto).

F- Pour serrer, utiliser la cle comme indique ci dessus.

GB- For tightening, please use the wrench as per the drawing.

D- Zum Anziehen benutzen Sie bitte den Inbusschlüssel, nur wie auf dem Bild dargestellt.

E- Para el correcto ajuste, utilizar la llave fija tal y como se indica en la imagen.

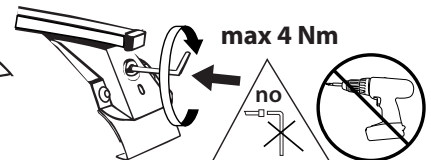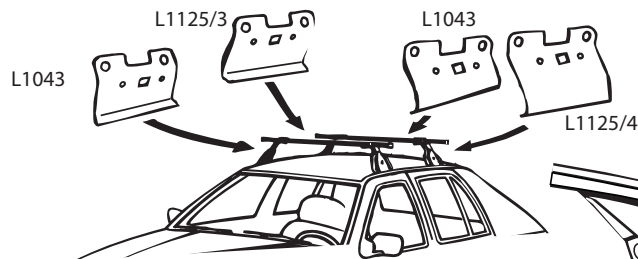

max 4 Nm