
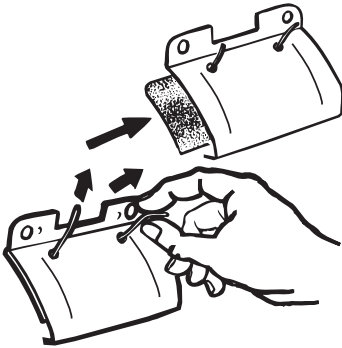
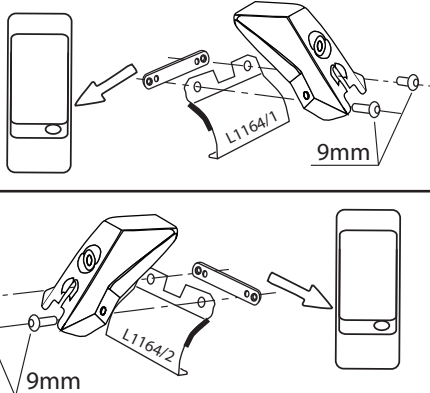


MOSRR0AC011 cm 124

MOSRR0AL007 cm 124

<p>componenti:</p> <p>2 - L1164/1 ant sx post dx</p> <p>2 - L1164/2 ant dx post sx</p> <p>4 - RC1500/60</p> <p>8 - RCVM6X9Q</p> <p>4 - RC20200026</p> <p>1 - RCBR5</p>	<p>I-montare le guarnizioni GB-fit the gaskets E- montar las juntas</p> 	<p>I-montare gli attacchi anteriori GB-fit the front clamps E- ajustar las pletinas delantera</p> 
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

!!! **MOSRR0AC011 cm 124 - MOSRR0AL007 cm 124**

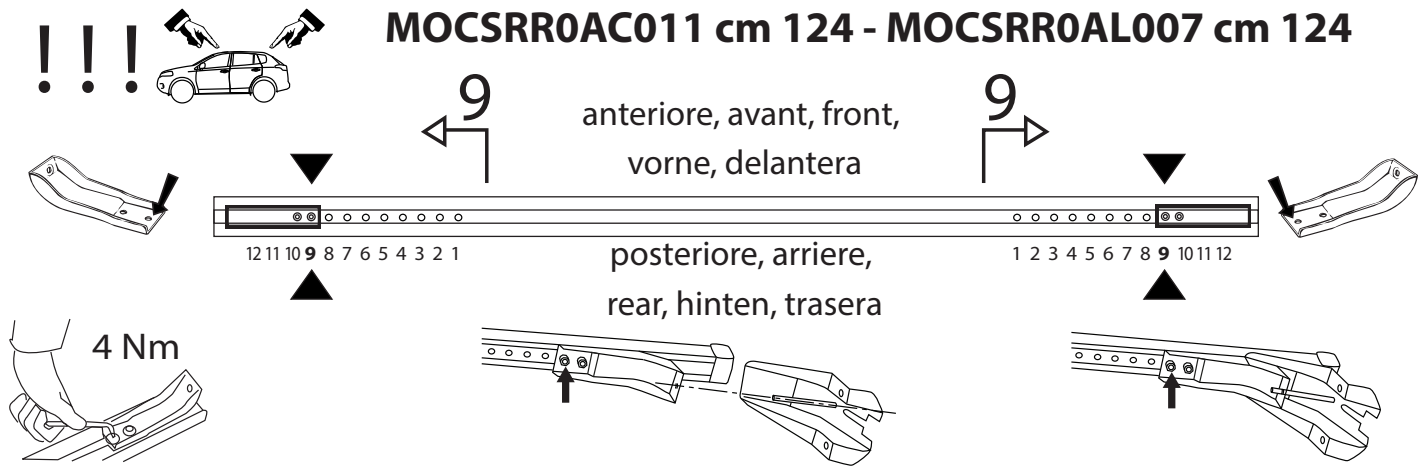


anteriore, avant, front,
vorne, delantera

posteriore, arriere,
rear, hinten, trasera

4 Nm

I-montare la barra anteriore
GB- fit the front bar
E- ajustar la barra frontal

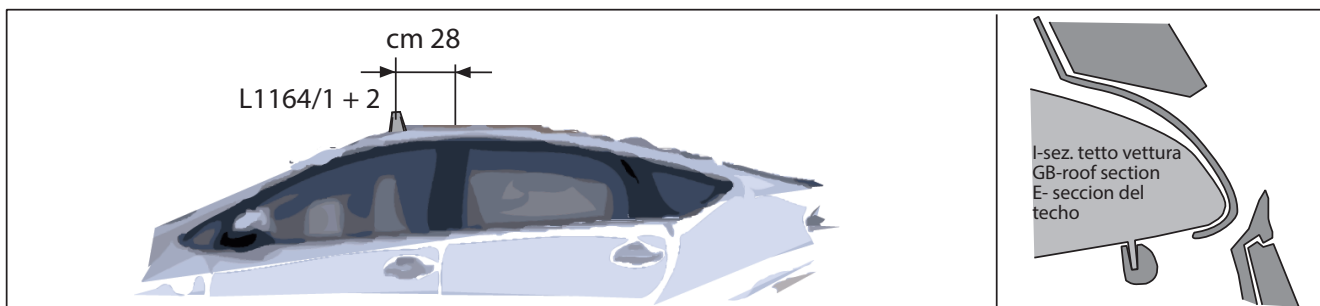
cm 28

L1164/1 + 2


I-sez. tetto vettura
GB-roof section
E- seccion del techo

I-montare gli attacchi posteriori
 GB-fit the rear clamps
 E- ajustar las pletinas trasera.

MOCSKT 083

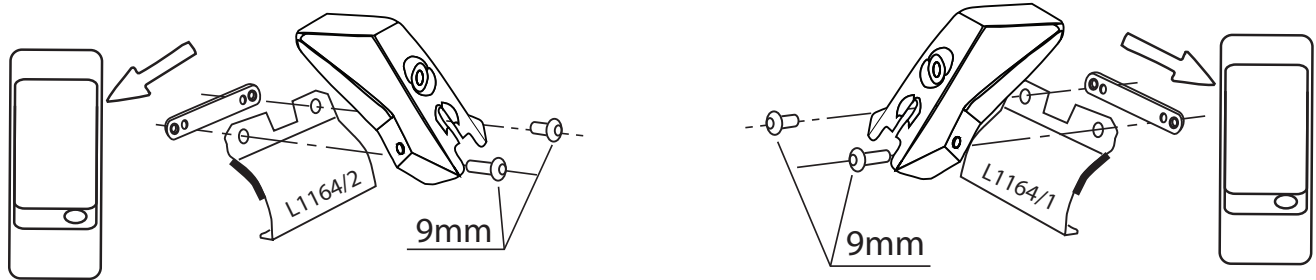

I-montare la barra posteriore
 GB-fit the rear bar
 E- ajustar la barra trasera

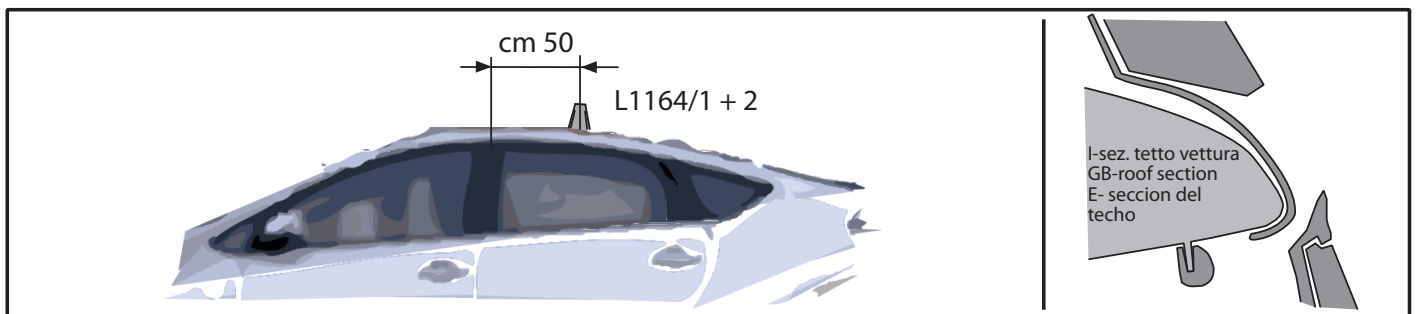


I - Per stringere, usare la chiave come indicato nel disegno. (Non si assumono responsabilità per danni causati dall'impiego di chiavi diverse da quella in dotazione al prodotto).

F - Pour serrer, utiliser la cle comme indique ci dessous.

GB - For tightening, please use the wrench as per the drawing.

D - Zum Anziehen benutzen Sie bitte den Inbusschlüssel, nur wie auf dem Bild dargestellt.

E - Para el correcto ajuste, utilizar la llave fija tal y como se indica en la imagen.

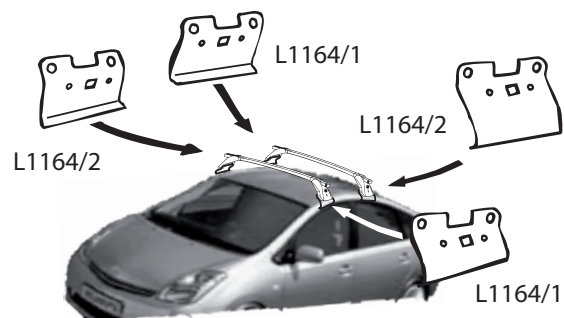

max 4 Nm

