


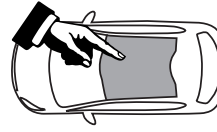








FIAT Panda III (2011 ->) Crystal Roof





MOCSRR0AC010 cm 110

MOCSRR0AL006 cm 110







1 - L880/1 ant sx 	2 - L1070/3 post 	2 - RC20011935 	6 - RCVM6X9Q 
1 - L880/2 ant dx 	4 - RC1500/95 	4 - RC20200026 	2 - RCVM6X13Q 
			1 - RCBR5 






I-montare le guarnizioni
GB-fit the gaskets
E-montar las juntas

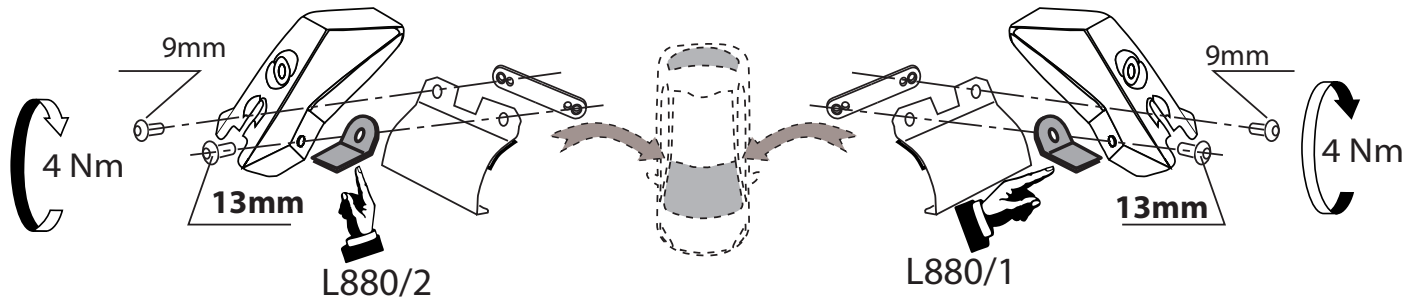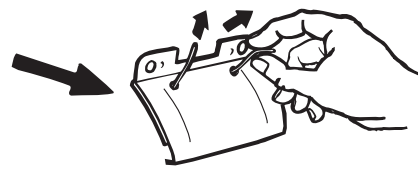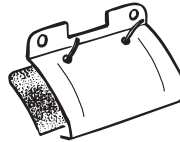

MOCSRR0AC010 cm 110
MOCSRR0AL006 cm 110

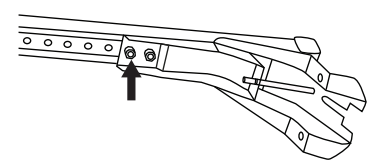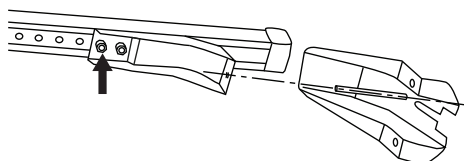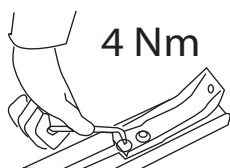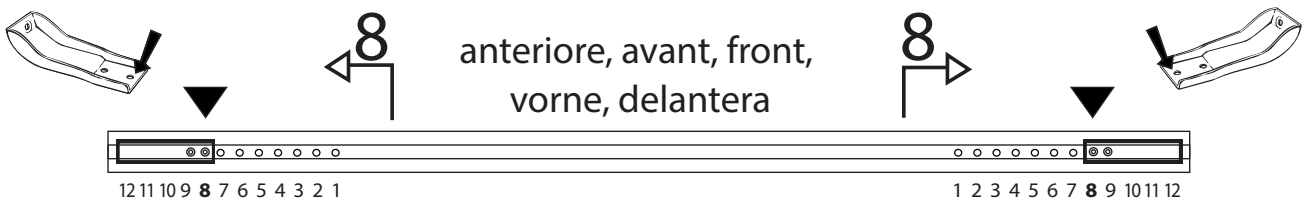


MOCSKT 254

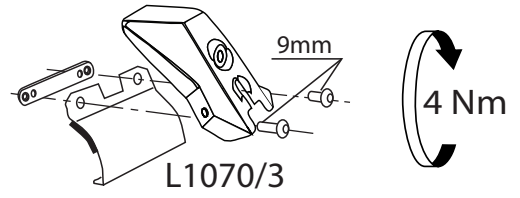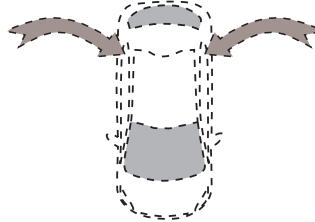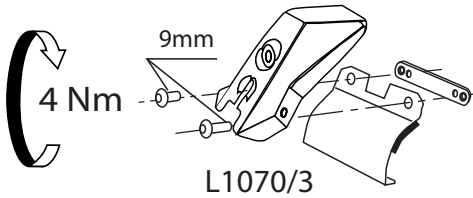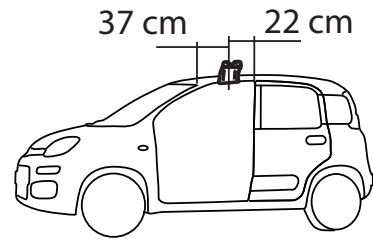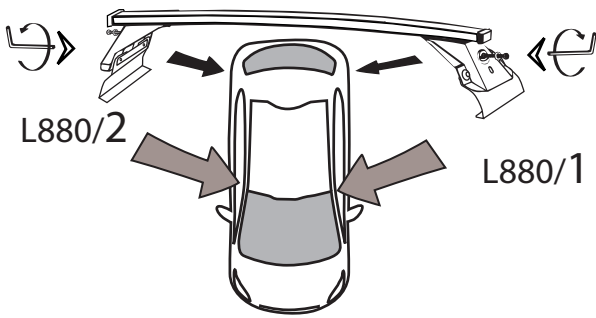







!!!





MOCSRROAC010 cm 110
MOCSRROAL006 cm 110



posteriore, arriere,
rear, hinten, trasera

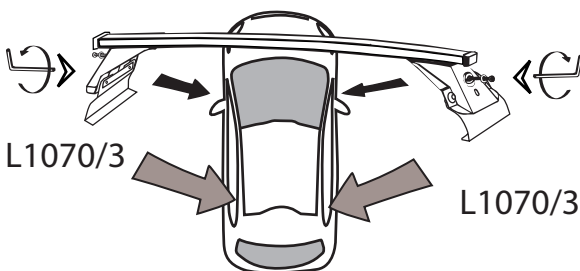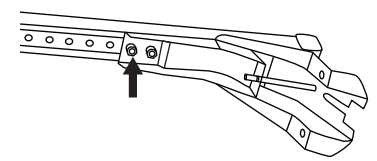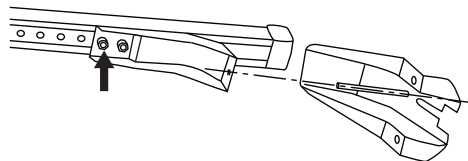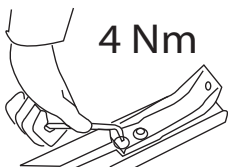

max 4 Nm

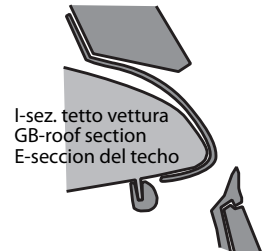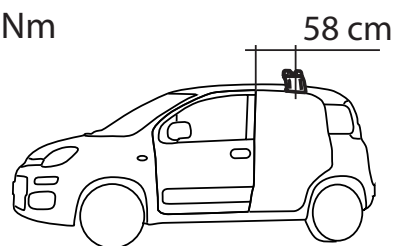

I - Per stringere, usare la chiave come indicato nel disegno. (Non si assumono responsabilità per danni causati dall'impiego di chiavi diverse da quella in dotazione al prodotto).

F - Pour serrer, utiliser la clé comme indiqué ci dessous.

GB - For tightening, please use the wrench as per the drawing.

D - Zum Anziehen benutzen Sie bitte den Inbusschlüssel, nur wie auf dem Bild dargestellt.

E - Para el correcto ajuste, utilizar la llave fija tal y como se indica en la imagen.

