

NISSAN Note 2013



MOCSKT 272

MOCSRR0AC010 cm 110 MOCSRR0AL006 cm 110



1 - L1151/37 ant. sx		1 - L1151/45 post. sx		4 - RC6645/6	
1 - L1151/47 ant. dx		4 - L1061/4		4 - RC20200026	
1 - L1151/35 post. dx		4 - L1058/6		8 - RCVM6X9Q	
				1 - RCBR5	

RC6645/6
Gommaspugna
Foam rubber

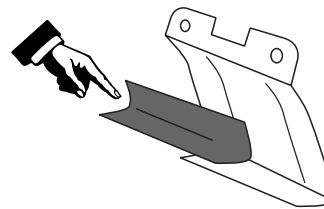

L1151/37
L1151/47
L1151/35
L1151/45

 L1151/37 L1151/47 L1061/4 L1058/6	<p>!!!</p>		 4 Nm
 L1151/35 L1151/45 L1061/4 L1058/6	<p>!!!</p>		

!!!

MOCSRR0AC010 cm 110 - MOCSRR0AL006 cm 110

7

anteriore, avant, front,
vorne, delantera

7

12 11 10 9 8 7 6 5 4 3 2 1

1 2 3 4 5 6 7 8 9 10 11 12


4 Nm

!!!








MOCSRR0AC010 cm 110
MOCSRR0AL006 cm 110

MOCSKT 272





posteriore, arriere,
rear, hinten, trasera

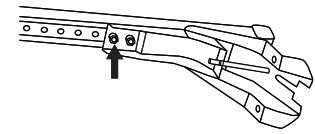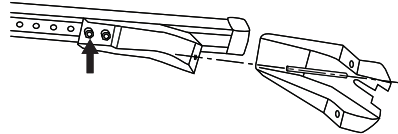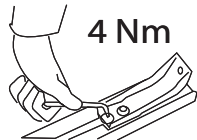

L1151/37
L1151/47
+
L1061/4



cm 20

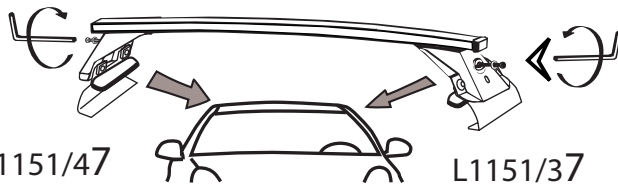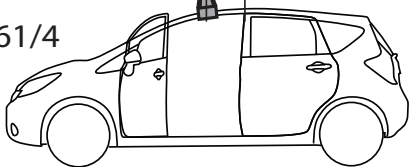




anteriore, avant, front,
vorne, delantera

L1151/35
L1151/45
+
L1061/4

cm 50

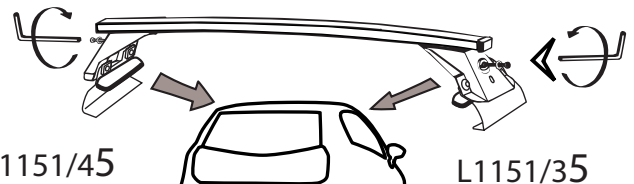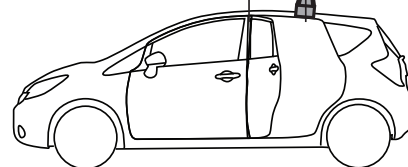

posteriore, arriere, rear,
hinten, trasera

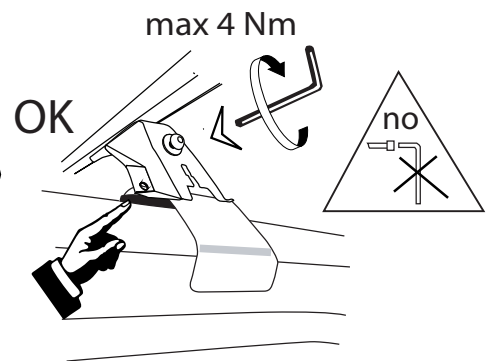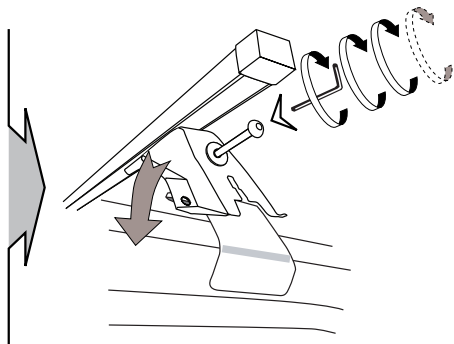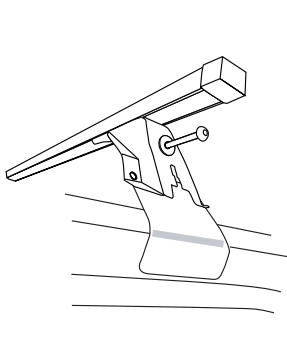

I - Per stringere, usare la chiave come indicato nel disegno. (Non si assumono responsabilità per danni causati dall' impiego di chiavi diverse da quella in dotazione al prodotto).
F - Pour serrer, utiliser la clé comme indique ci dessous.

GB - To tighten please use the wrench as per the drawing.
D - Zum Anziehen benutzen Sie bitte den Inbusschlüssel, nur wie auf dem Bild dargestellt.
E - Para el correcto ajuste, utilizar la llave fija tal y como se indica en la imagen



MODULA
case system

email: modulacs@modulacs.com
web site: www.modulacs.com

Modula s.r.l.
Loc. Penisola, 20/A
61026 Piandimeleto (PU) ITALY
phone +39 0722/700070
fax +39 0722/720017

18-01-2016