

OPEL Crossland X

no rails - senza mancorrenti
model 2017



Patent pending
MOCSKT 0362




MOCSRR0AC0010 cm 110

MOCSRR0AL0006 cm 110


<p>1 - L1358/2</p> <p>1 - L1358/1</p>	<p>1 - L1314/3</p> <p>1 - L1314/3</p>	
<p>4 - L1058/7</p>	<p>4 - RCRD8Q</p>	<p>1 - RCBR5</p>
<p>4 - RCVM6X16TSQ</p> <p>16 mm</p>	<p>8 - RCVM6X9Q</p>	<p>1 - RCBR4</p>

<p>L1358/1</p>		<p>L1358/2</p>	
<p>L1058/7</p>		<p>L1058/7</p>	
<p>L1314/3</p>		<p>L1314/3</p>	
<p>L1058/7</p>		<p>L1058/7</p>	



!!!

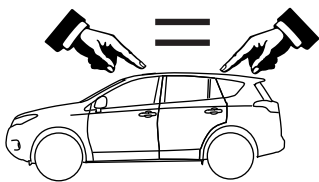

MOCSRR0AC0010 cm 110
MOCSRR0AL0006 cm 110

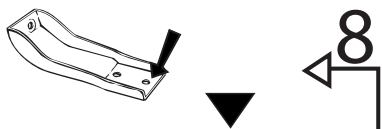

anteriore, avant, front,
vorne, delantera










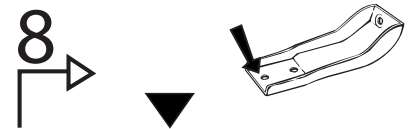


12 11 10 9 **8** 7 6 5 4 3 2 1

posteriore, arriere,
rear, hinten, trasera

1 2 3 4 5 6 7 **8** 9 10 11 12

MOCSKT 0362

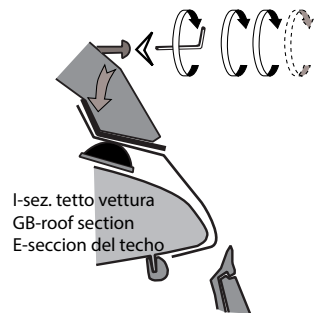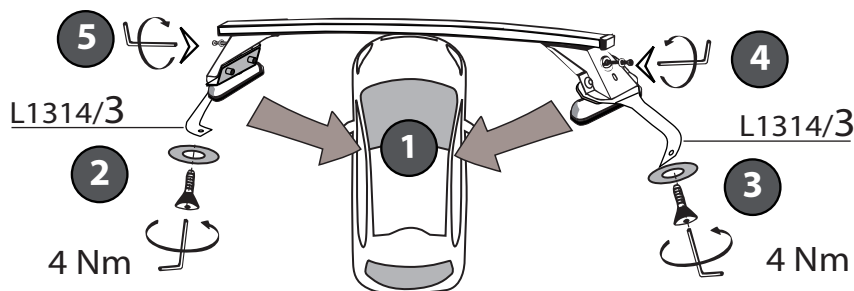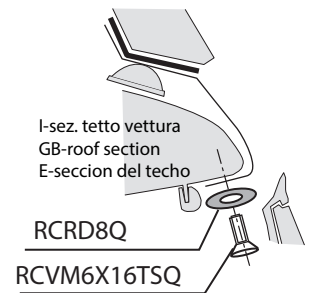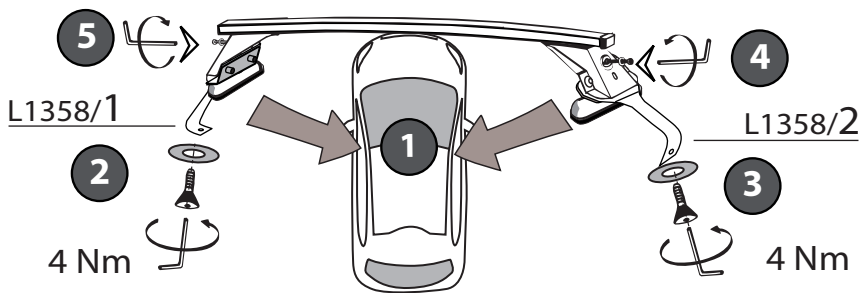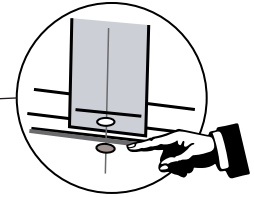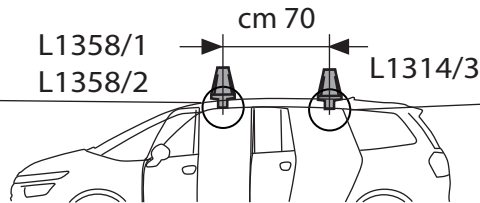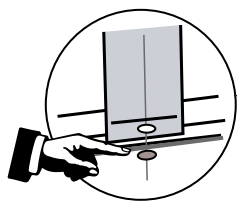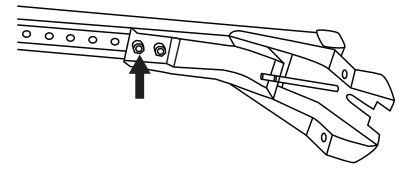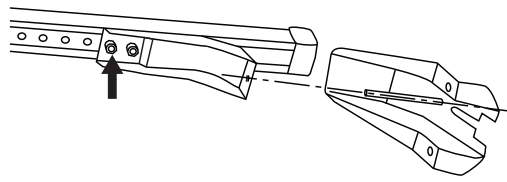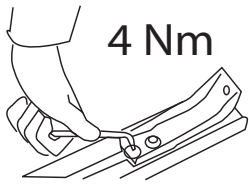

I - Per stringere, usare la chiave come indicato nel disegno. (Non si assumono responsabilità per danni causati dall'impiego di chiavi diverse da quella in dotazione al prodotto).
F - Pour serrer, utiliser la clé comme indique ci dessous.

GB - To tighten please use the wrench as per the drawing.
D - Zum Anziehen benutzen Sie bitte den Inbusschlüssel, nur wie auf dem Bild dargestellt.
E - Para el correcto ajuste, utilizar la llave fija tal y como se indica en la imagen

