

Art. **N30012**

CITROËN BERLINGO

2000
05/96→03/08


PEUGEOT PARTNER

2000
05/96→03/08

PEUGEOT RANCH

2000
05/96→03/08

KIT x4

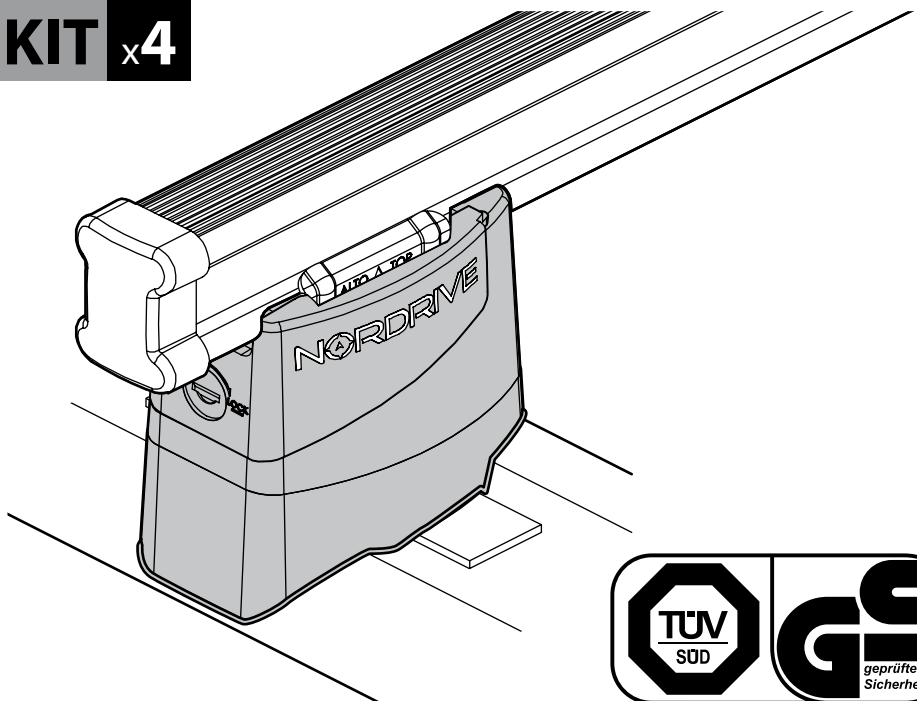


**SENZA VOLETTO
WITHOUT ROOF
WINDOWS**




**CON VOLETTO
WITH ROOF
WINDOWS**

- ⓘ ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE
KARGO SERIES**

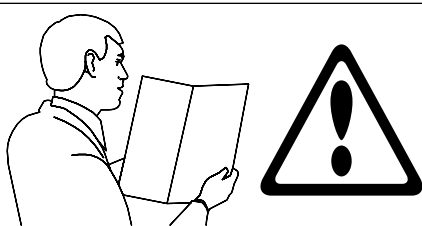


- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓘ MONTERINGSANVISNING
- Ⓙ ASENNUSOHJE
- Ⓚ PAIGALDUSJUHEND
- Ⓛ STIPRINĀŠANAS INSTRUKCIJA
- Ⓜ PRITVIRTINIMO INSTRUKCIJOS
- Ⓝ INSTRUKCJA MONTAŻU
- Ⓟ Инструкции по установке
- Ⓡ NÁVOD NA MONTÁŽ
- Ⓢ NÁVOD NA MONTÁŽ
- Ⓣ NAVODILA ZA PRITRJEVANJE
- Ⓡ UPUTA ZA SASTAVLJANJE
- Ⓜ A FELSZERELÉS MÓDJA
- Ⓝ Οδηγίες συναρμολόγησης
- Ⓡ MONTAJ TALIMATLARIL
- Ⓝ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓡ UPUTSTVA ZA MONTAŽU

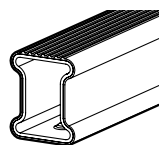


Kargo
ACCIAIO
Steel

- ⓘ BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

135cm

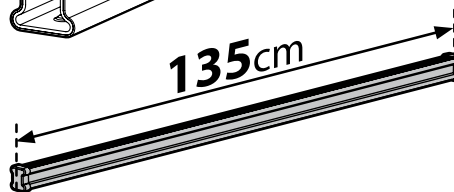


Art. **N10005** x2

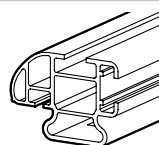


Kargo-Plus
ALLUMINIO
Aluminium

- ⓘ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS

135cm

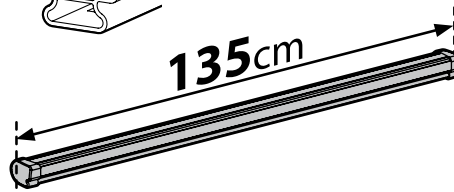


Art. **N10035** x2

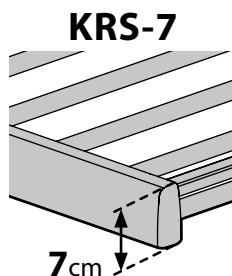

KRS-7

7cm

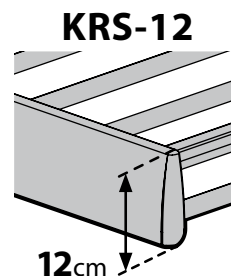


KRS-12

12cm

- ⓘ CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

NORDRIVE[®]










TRANSPORT SOLUTIONS

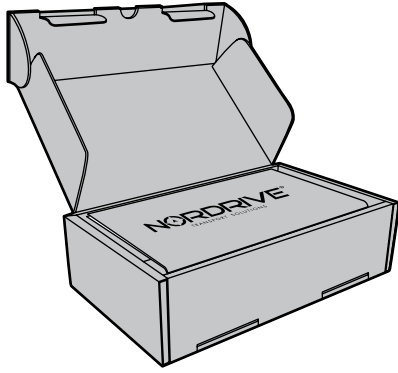


NORDRIVE[®]

TRANSPORT SOLUTIONS

Art. **N30012**

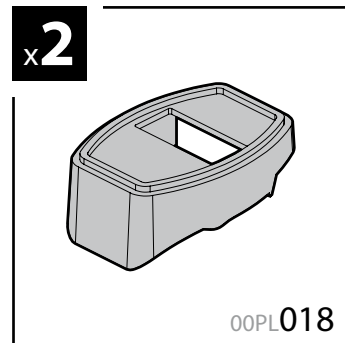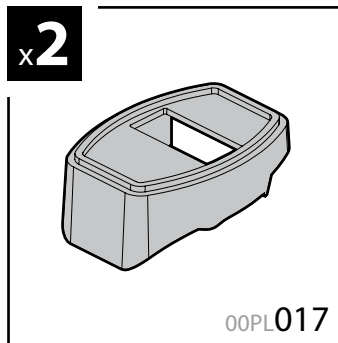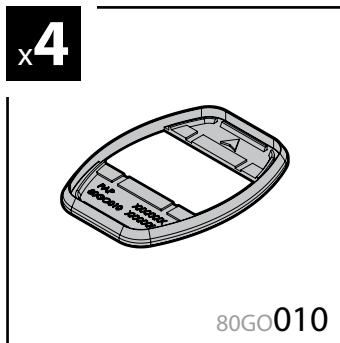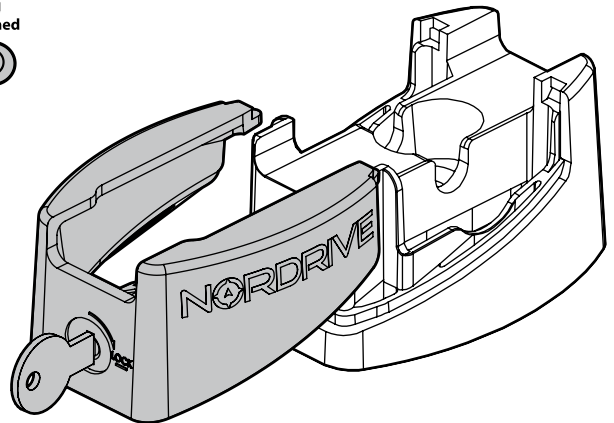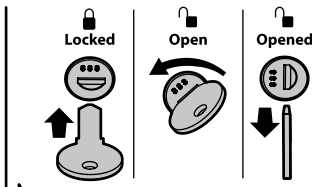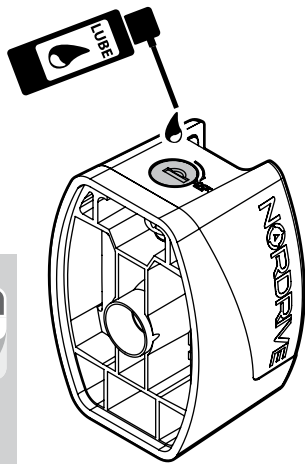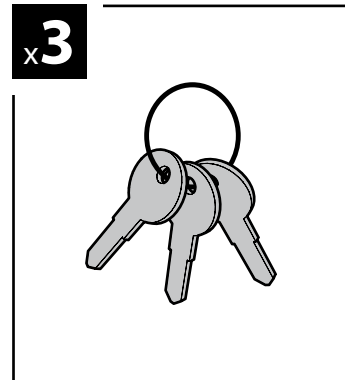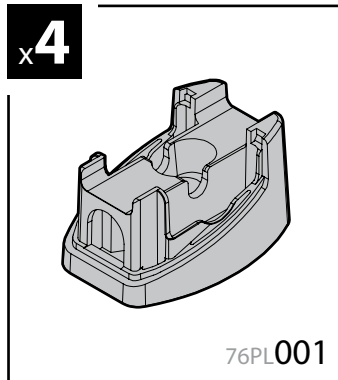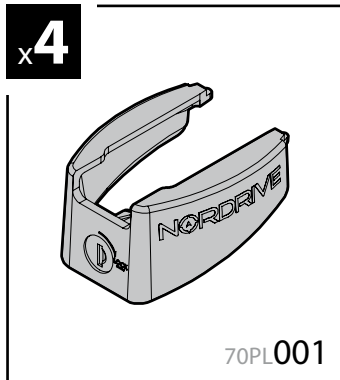


x8

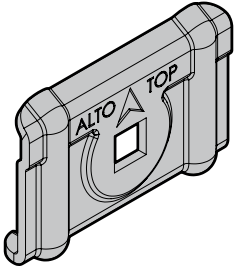


40FE001

x4

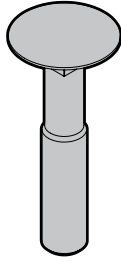


60BQ8045

x4



62BB0800

x4

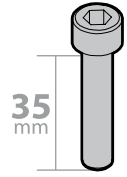


M6x35
60CE6035

x4




61ED0611

x4




ø6 - ø15
82FE0001

x4

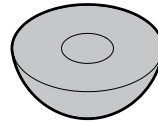


60RO004

x4

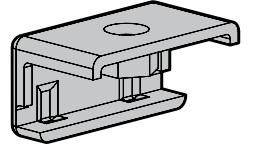


40FE002

x1




72FE0001

x1




72FE0002

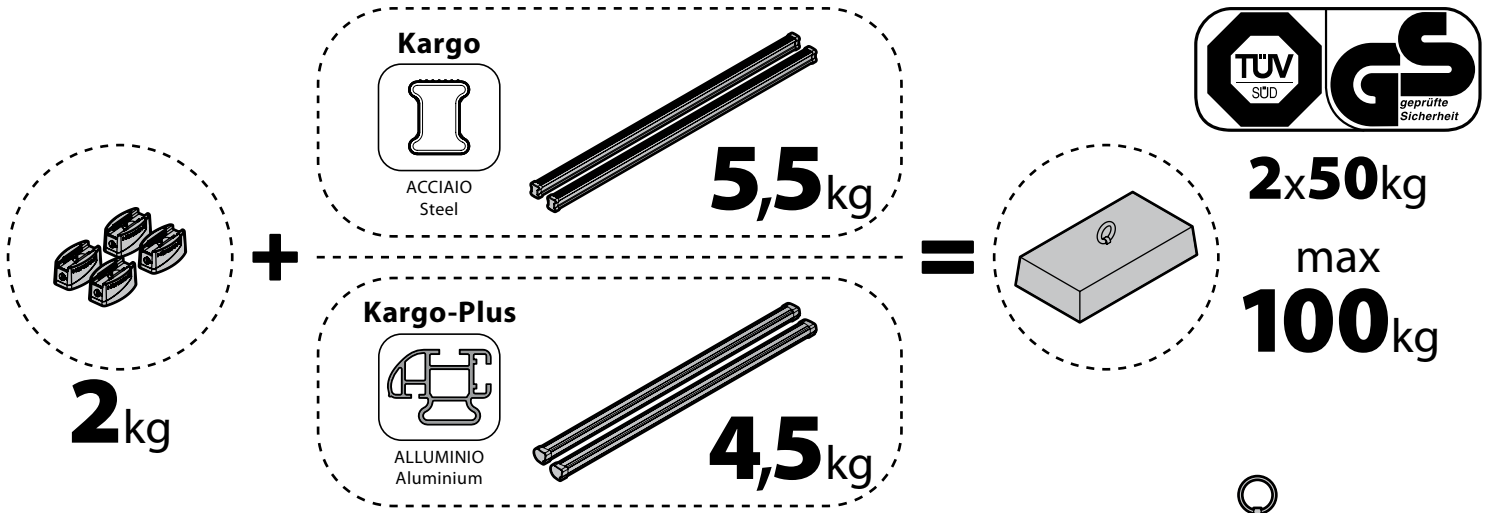

SAFETY REGULATIONS

Safety regulations

NORME DI SICUREZZA


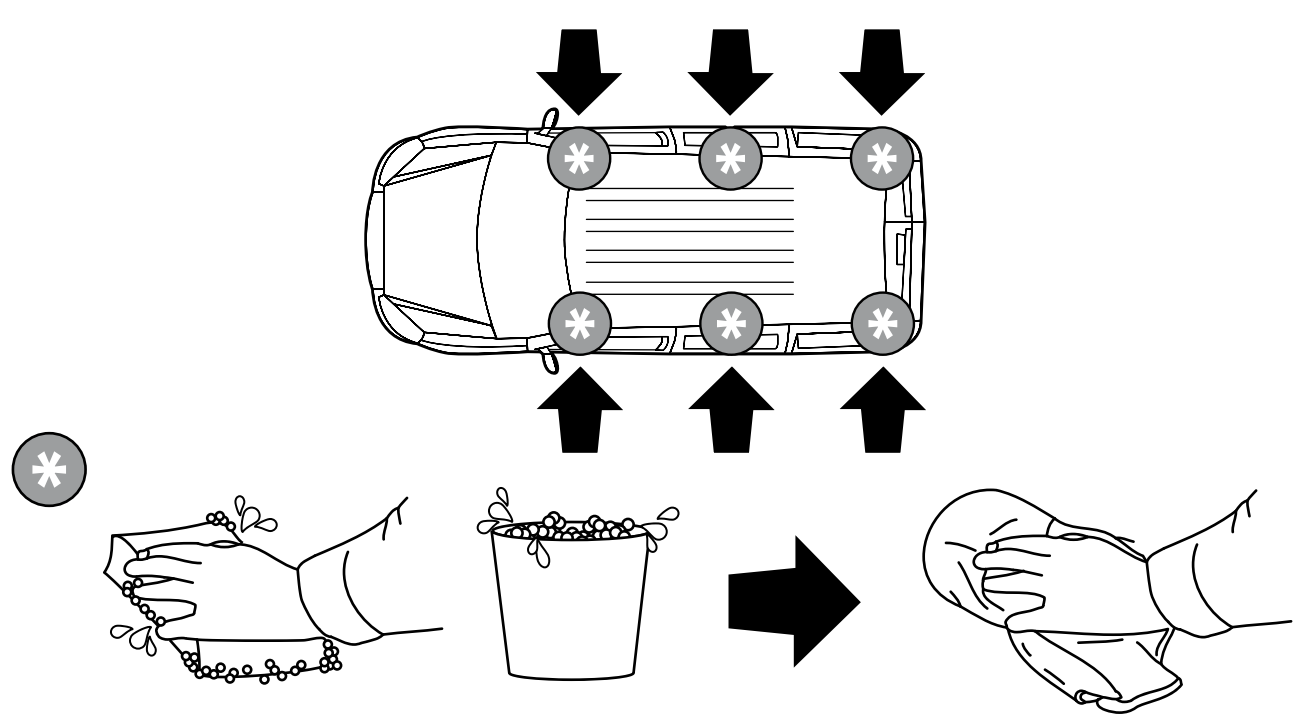


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING


(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRINĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ

(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγίες συναρμολόγησης
 (TR) MONTAJ TALIMATLARL
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU


1

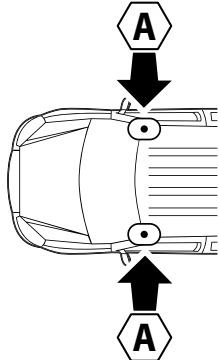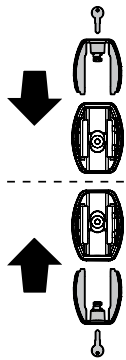

SENZA VOLETTO
WITHOUT ROOF
WINDOWS

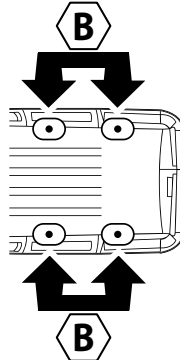


CON VOLETTO
WITH ROOF
WINDOWS

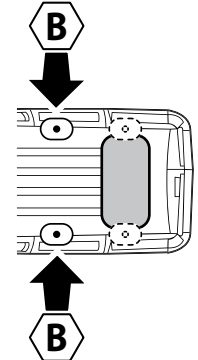


2

A



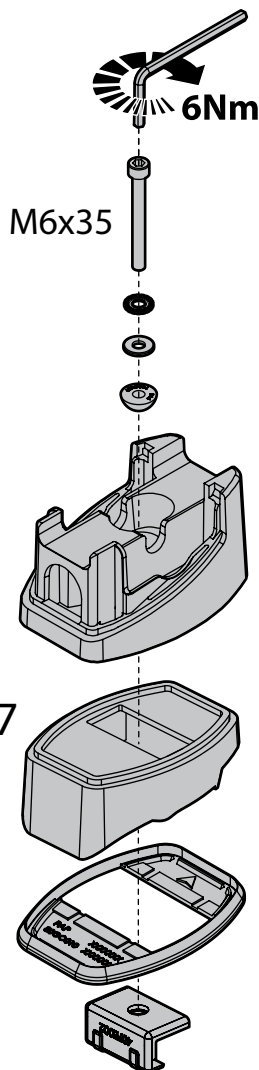


2





B

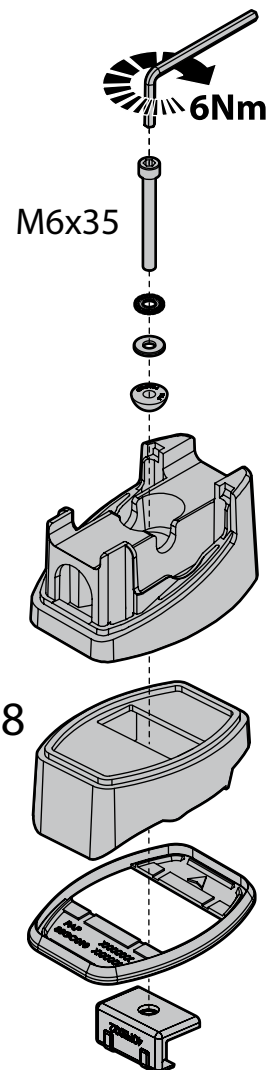

3

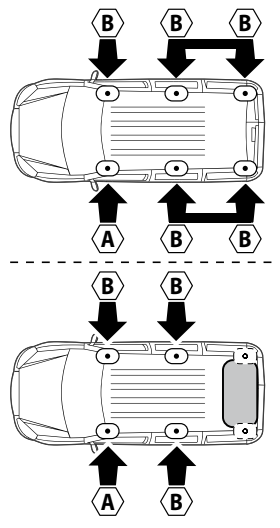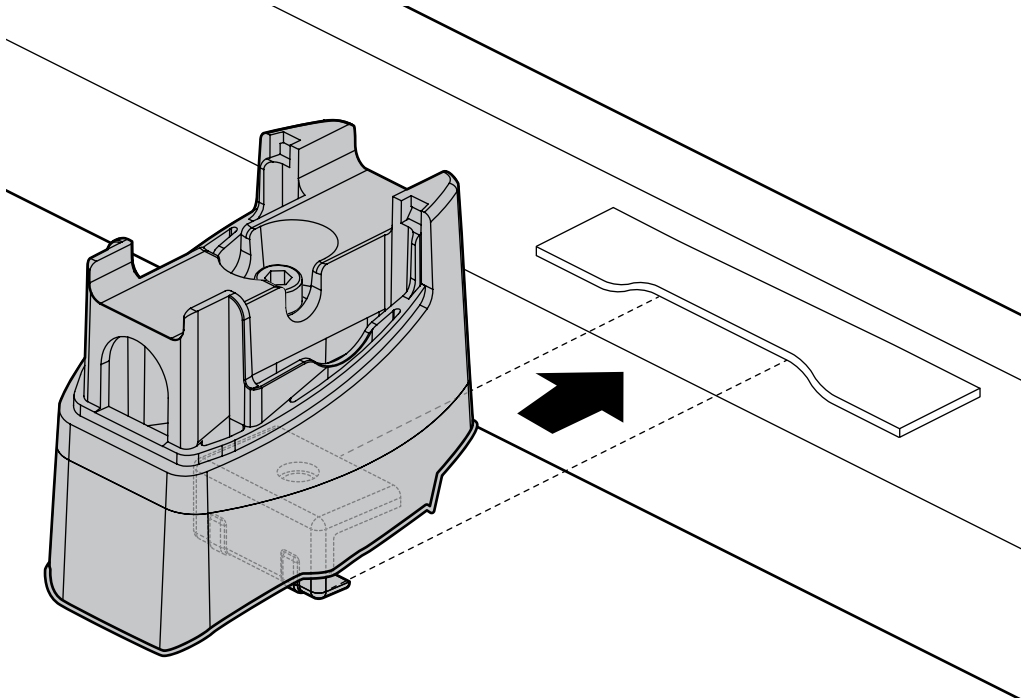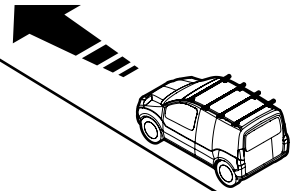

4

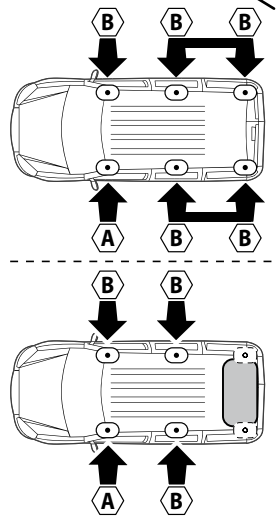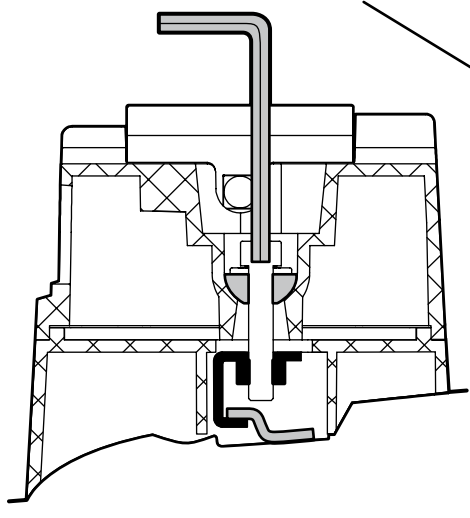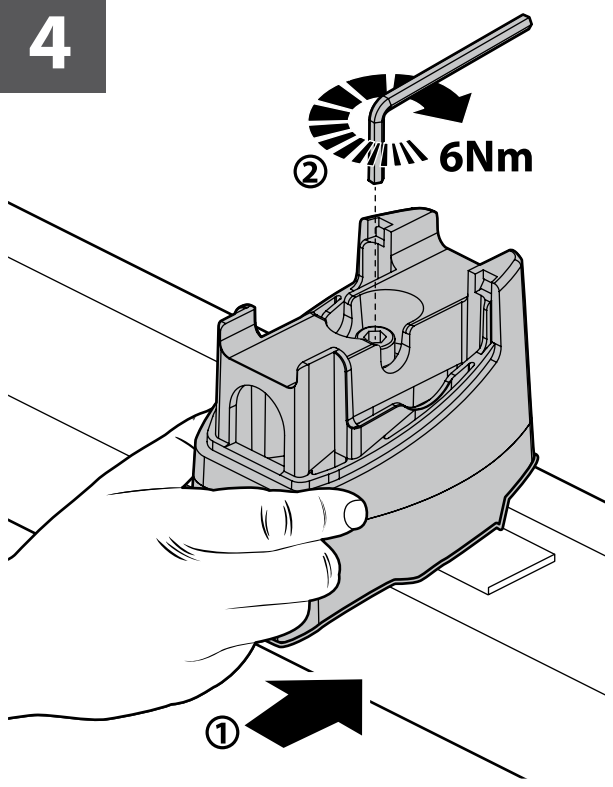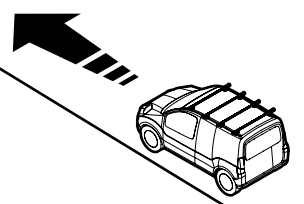




ATTENZIONE WARNING




A Kargo

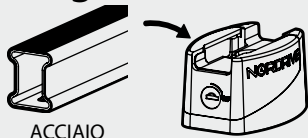

ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

B Kargo-Plus

















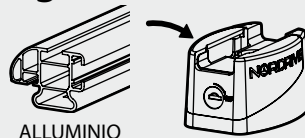


ALLUMINIO
Aluminium

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE


A

B

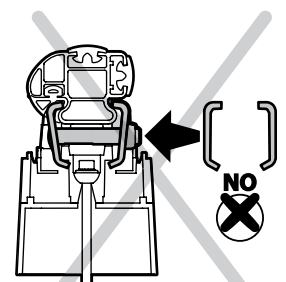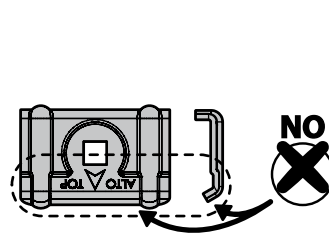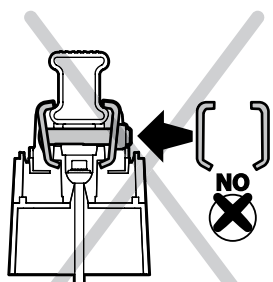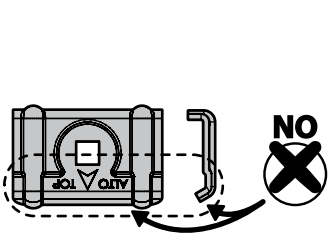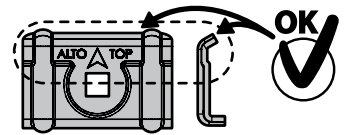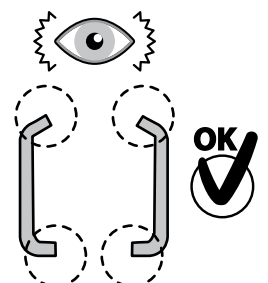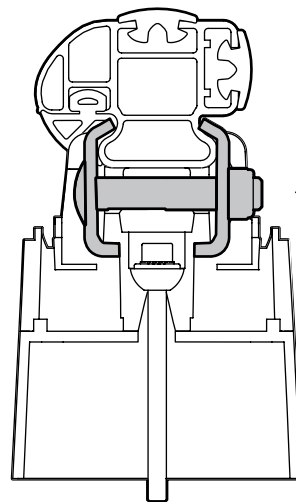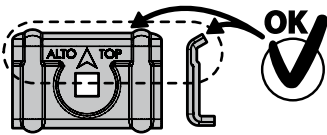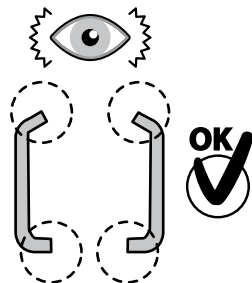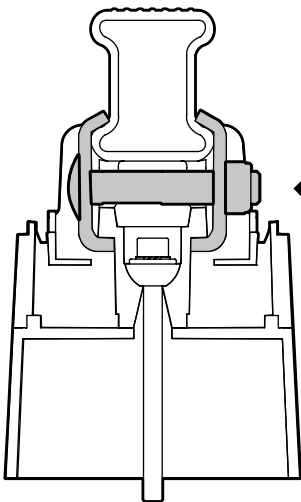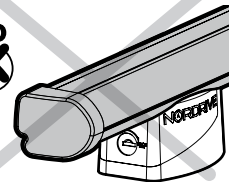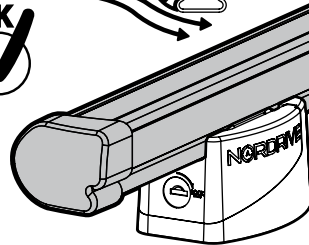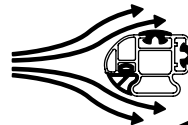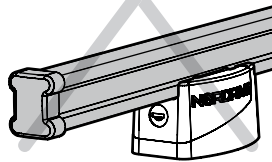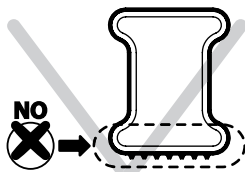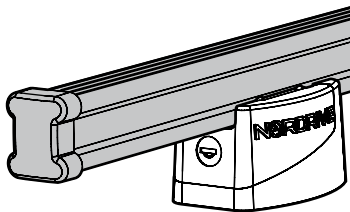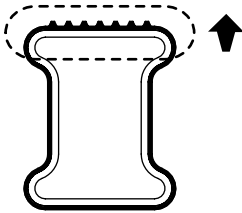


5

A

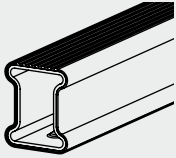

Kargo



ACCIAIO
Steel


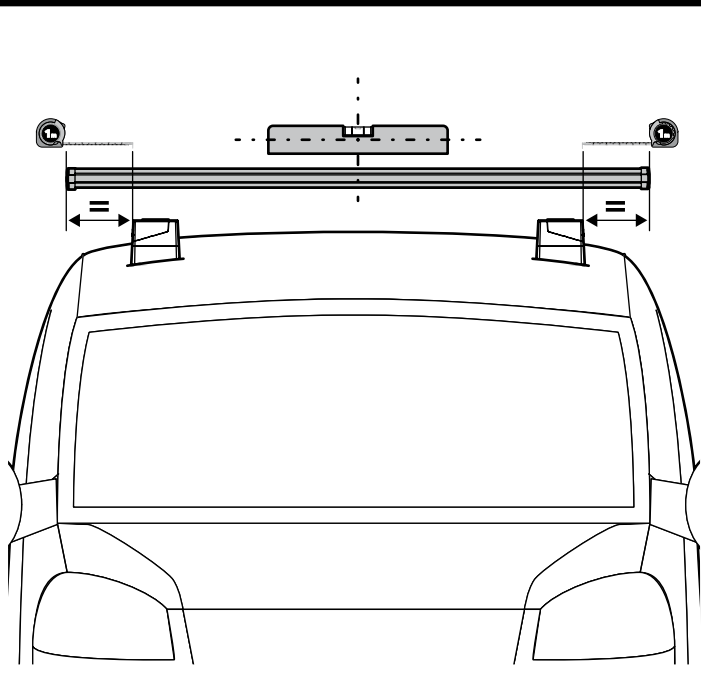



Diagram showing the Kargo steel bar being installed on a car roof. The bar is positioned between two roof rails. Arrows indicate the distance from the bar to the rails. A small inset shows the bar's cross-section.

B



Kargo-Plus

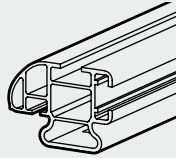

ALLUMINIO
Aluminium

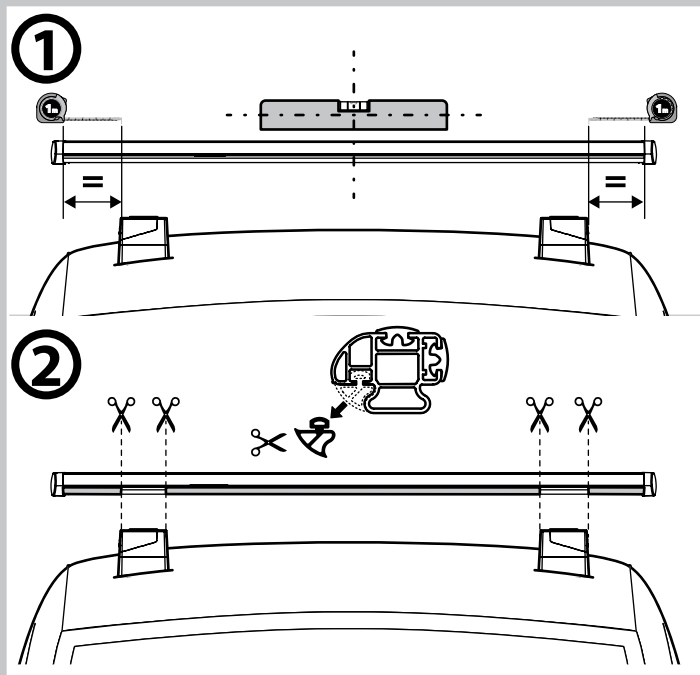


Diagram showing the Kargo-Plus aluminium bar being installed on a car roof. Step 1 shows the bar being placed between the roof rails. Step 2 shows the bar being secured with clips. Arrows indicate the distance from the bar to the rails. A small inset shows the bar's cross-section.

6

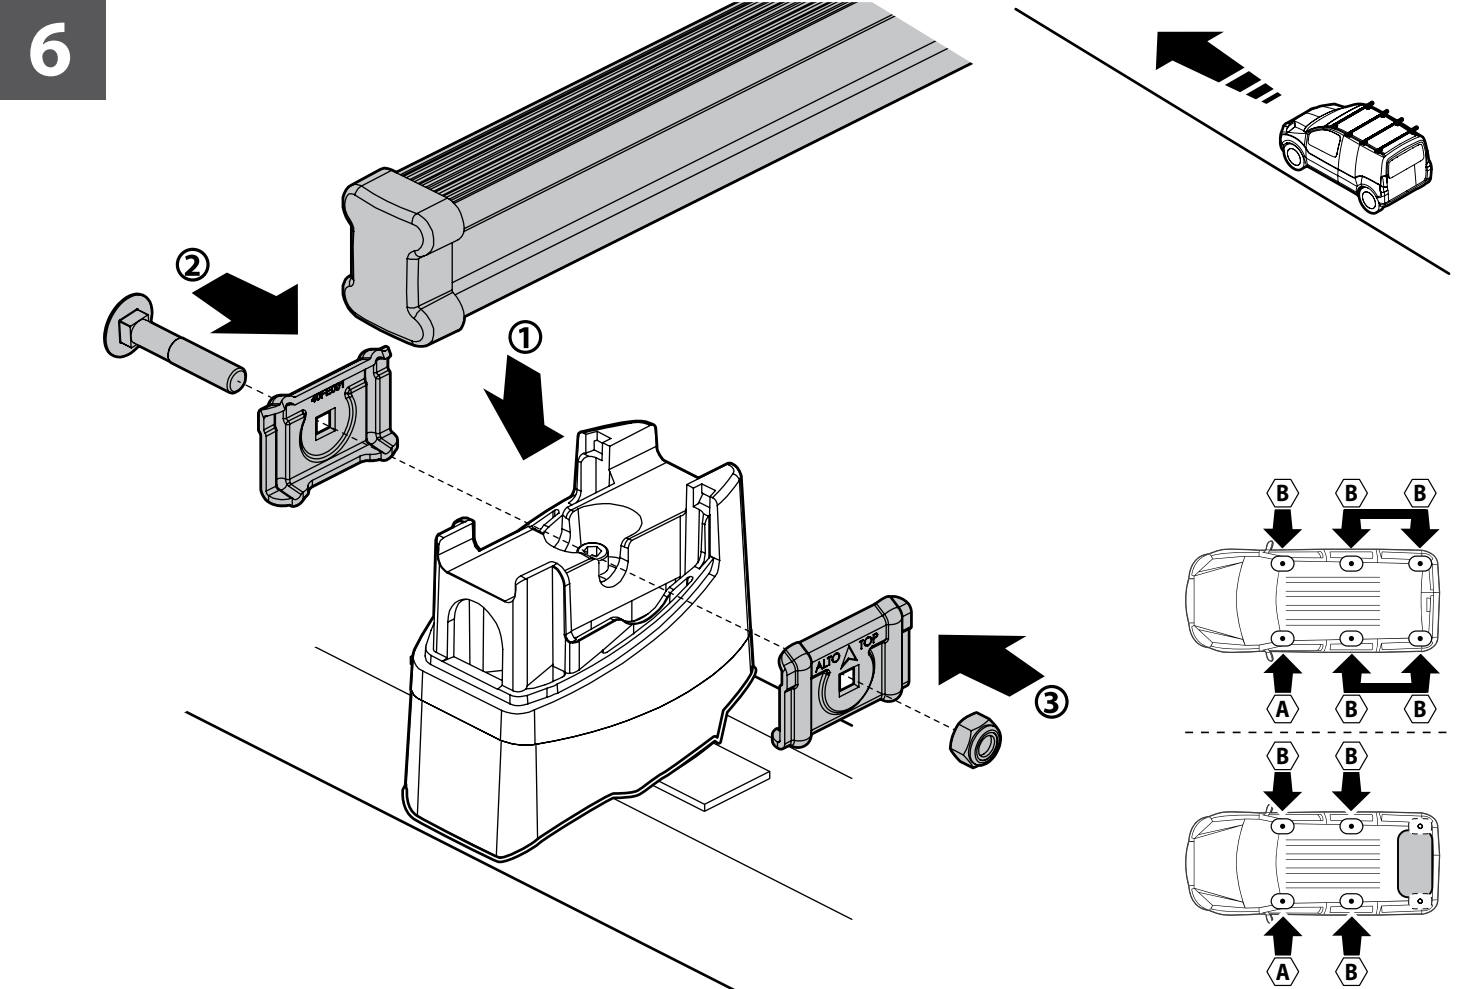


Diagram showing the assembly of the Kargo bar. Step 1 shows the bar being inserted into the base. Step 2 shows a bolt being inserted into the bar. Step 3 shows a cap being placed over the bolt. An inset shows the bar being installed on a car roof. A small inset shows the bar's cross-section.








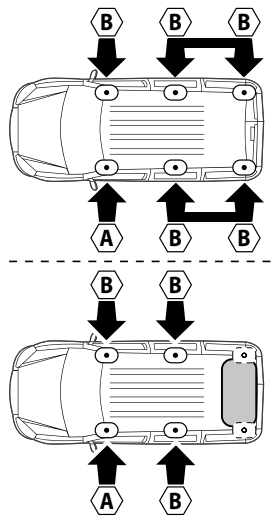


Diagram showing the top view of a car roof with the positions of the roof rails marked. The positions are labeled A and B. Arrows indicate the direction of the rails.

7

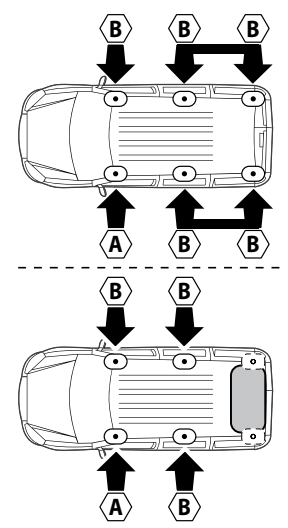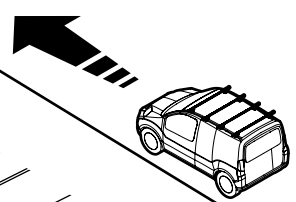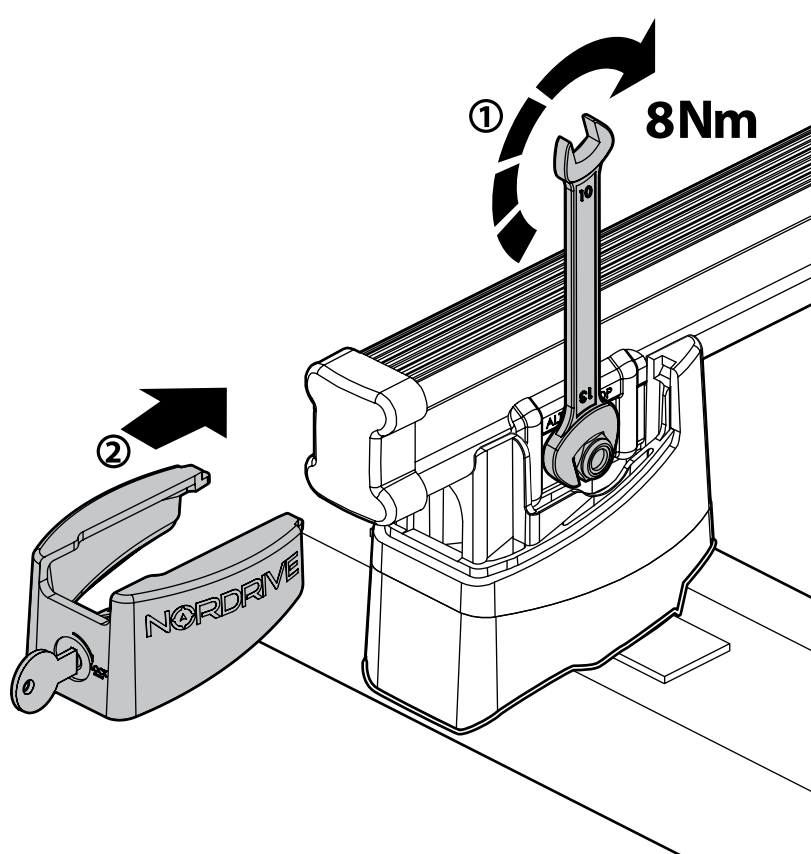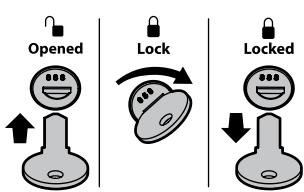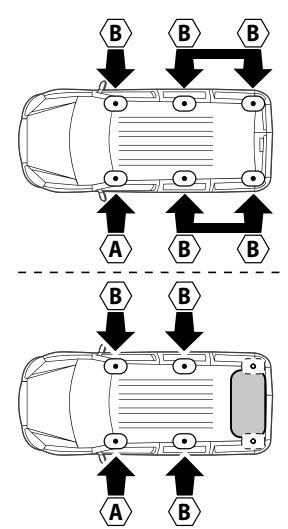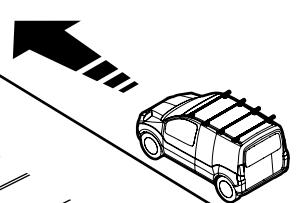


8

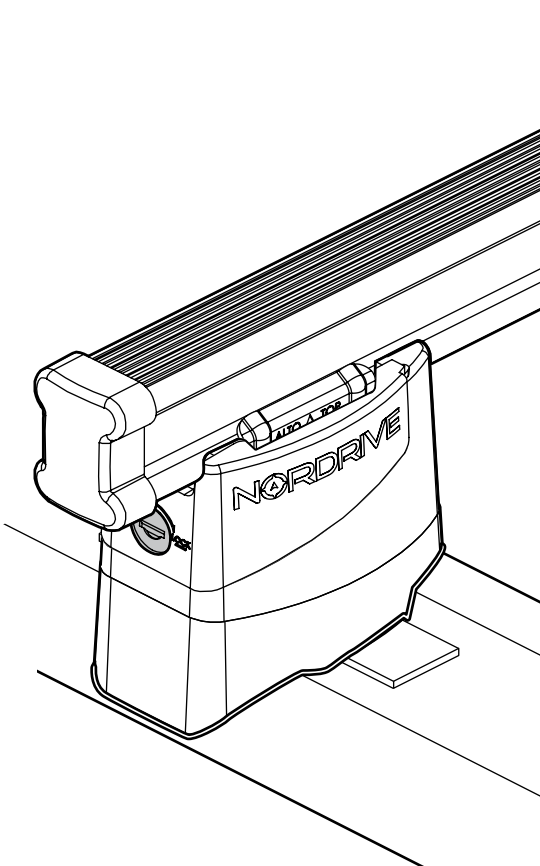

Kargo series




Acciaio / Steel

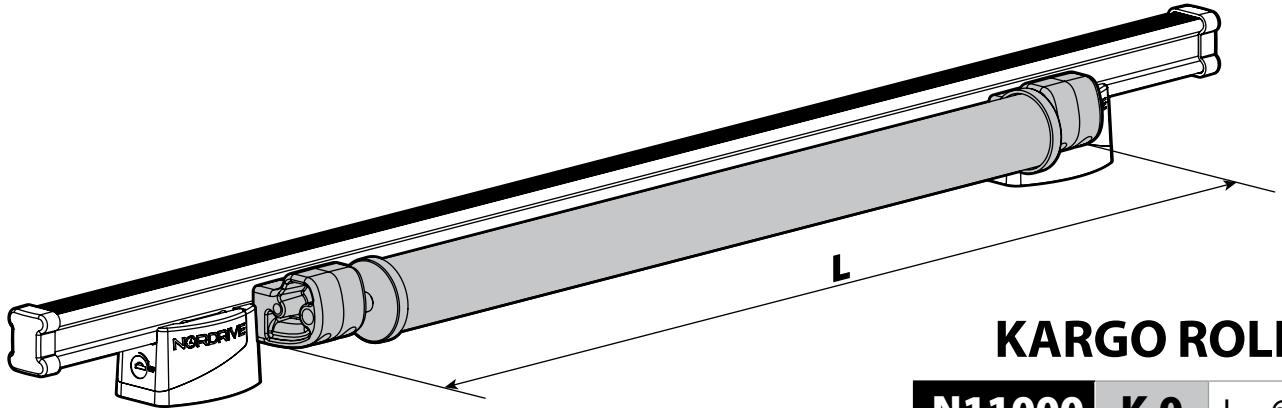


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

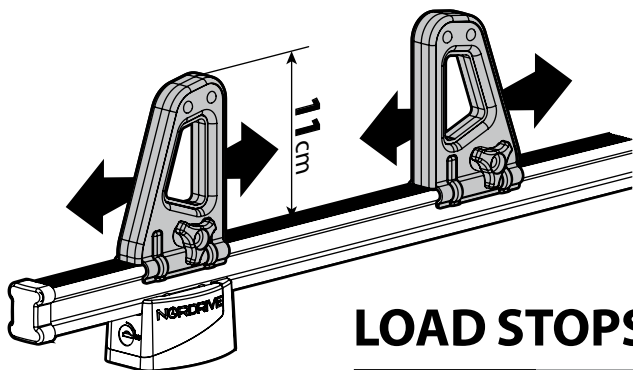


LOAD STOPS

N11001 K-1

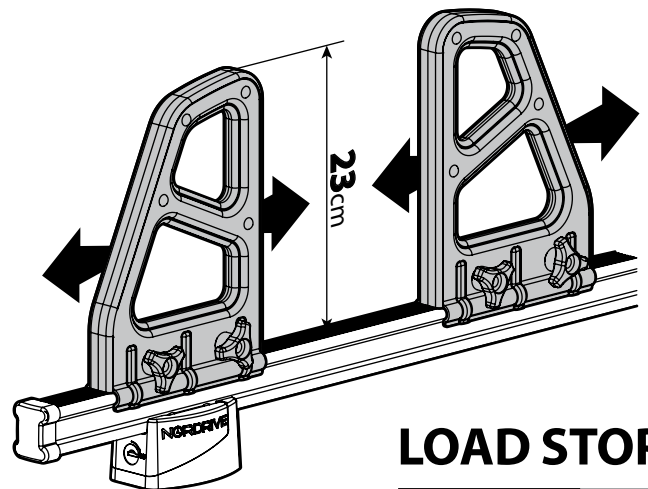

LOAD STOPS

N11002 K-2

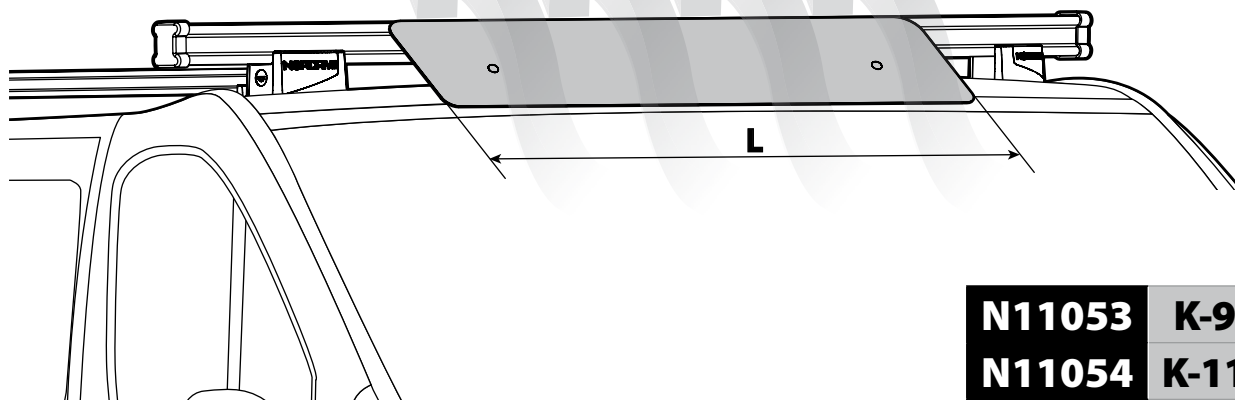


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series

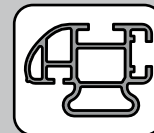



Alluminio / Aluminium

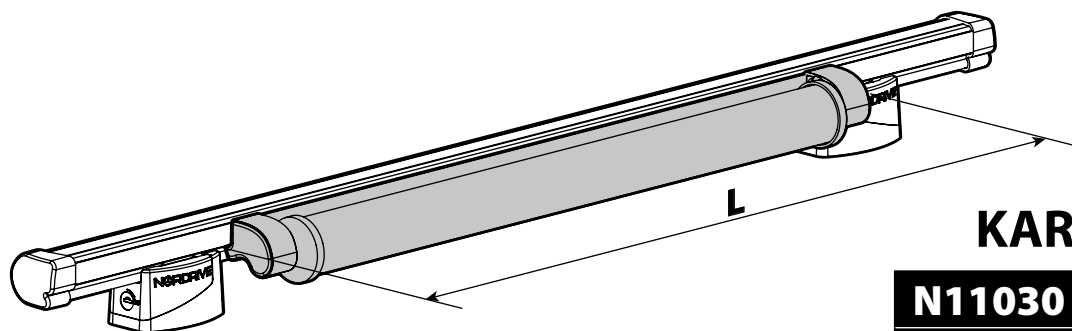

KARGO ROLLER


N11030 KP-0 L = 64 cm

N11034 KP-7 L = 96 cm

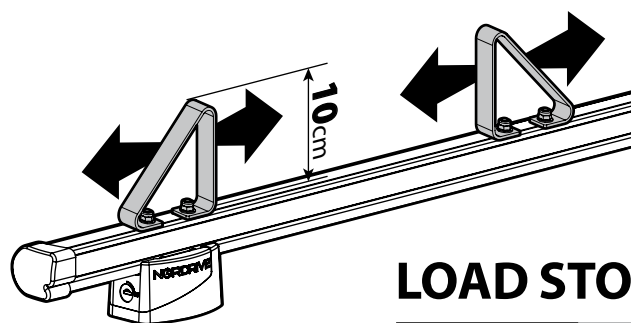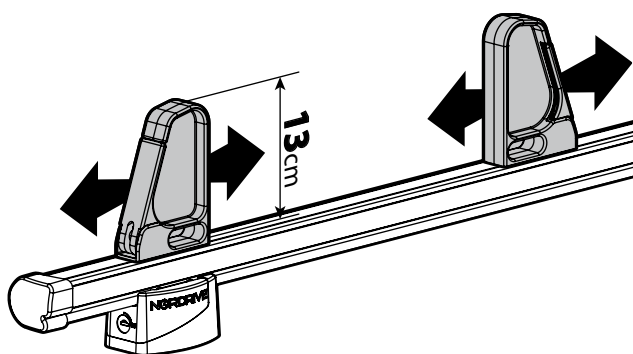


LOAD STOPS

N11031 KP-1

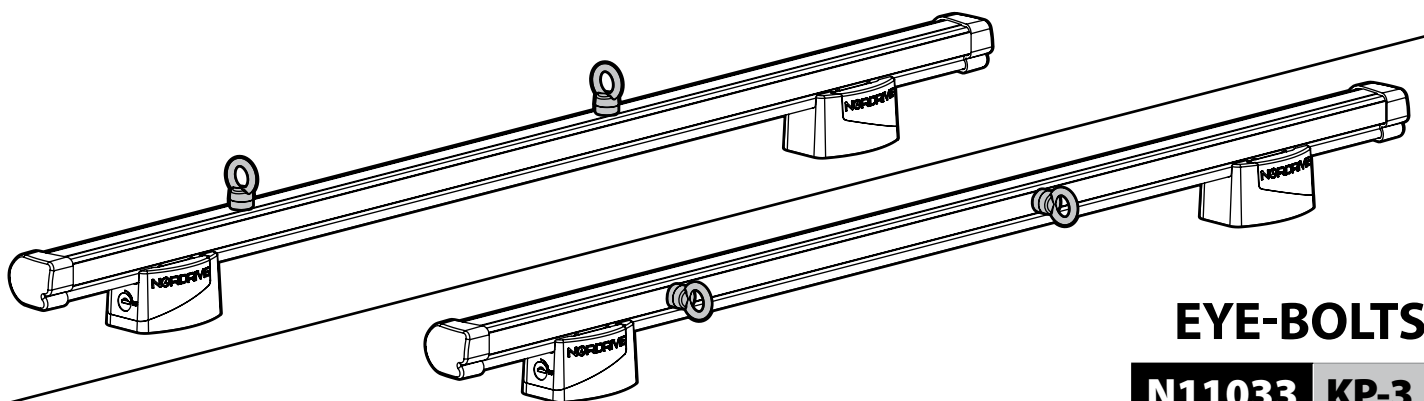

EYE-BOLTS

N11033 KP-3

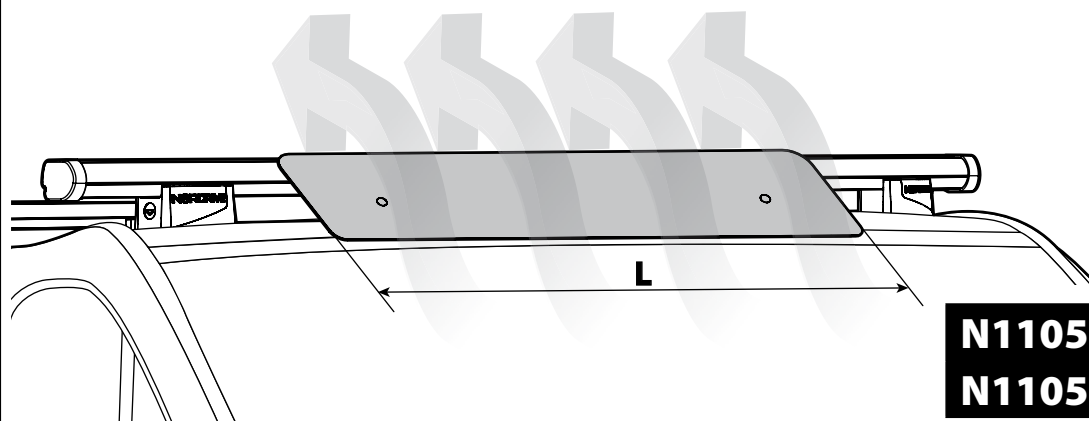

SPOILER

N11057 KP-9 L = 95 cm

N11058 KP-11 L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus series

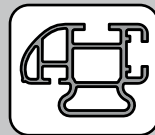

Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

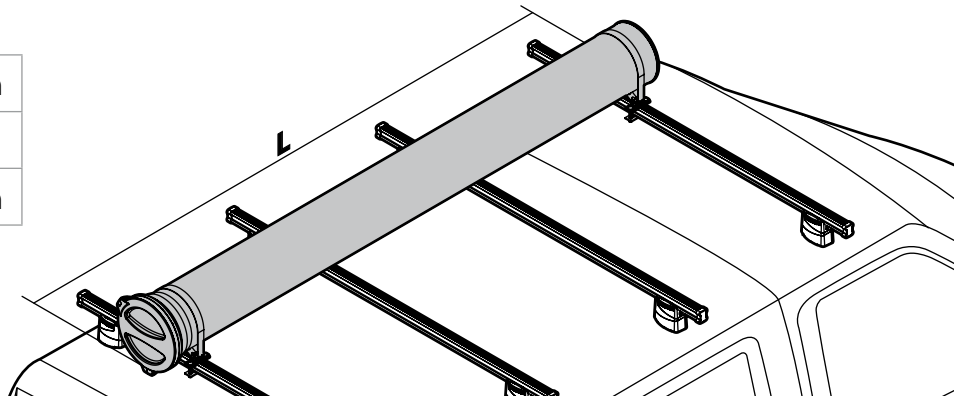


LADDER HOLDER STRAPS

N11065 U-5

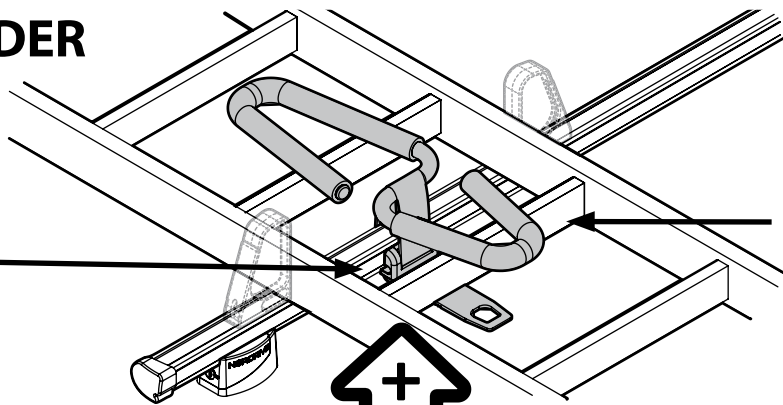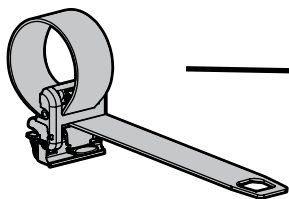


LADDER STEP ADAPTER

N11067 U-6

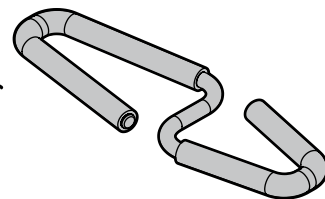


RICHIESTO
REQUIRED
REQUIS
ERFORDERLICH
NECESSARIO

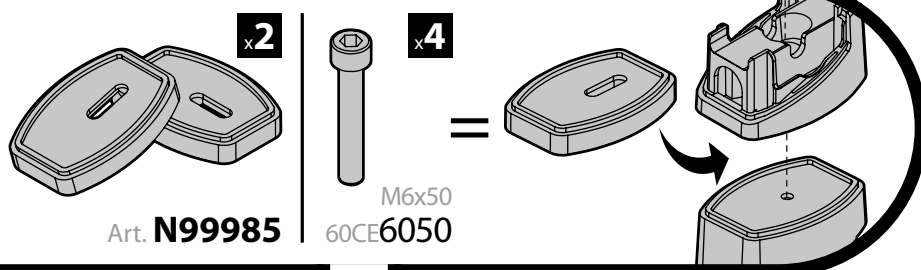

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

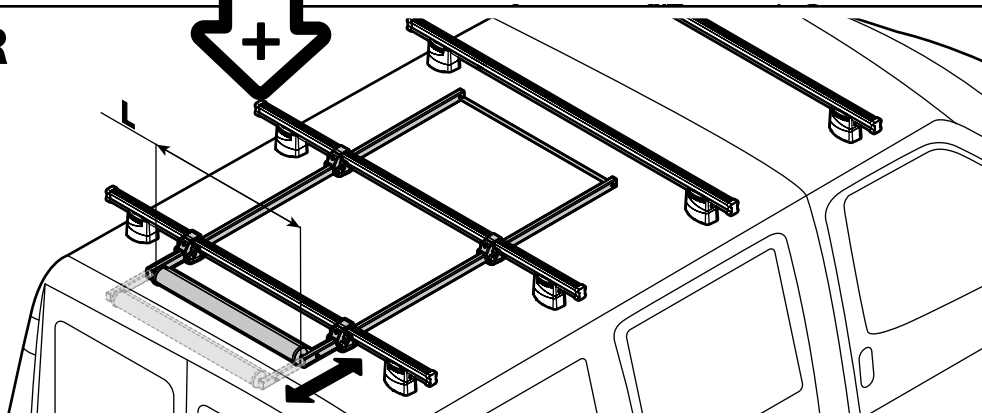

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it