



Art. **N30043**


CITROËN JUMPY

 10/95→12/06

FIAT SCUDO

 01/95→12/06

PEUGEOT EXPERT

 10/95→12/06




L1



L2

KIT x6

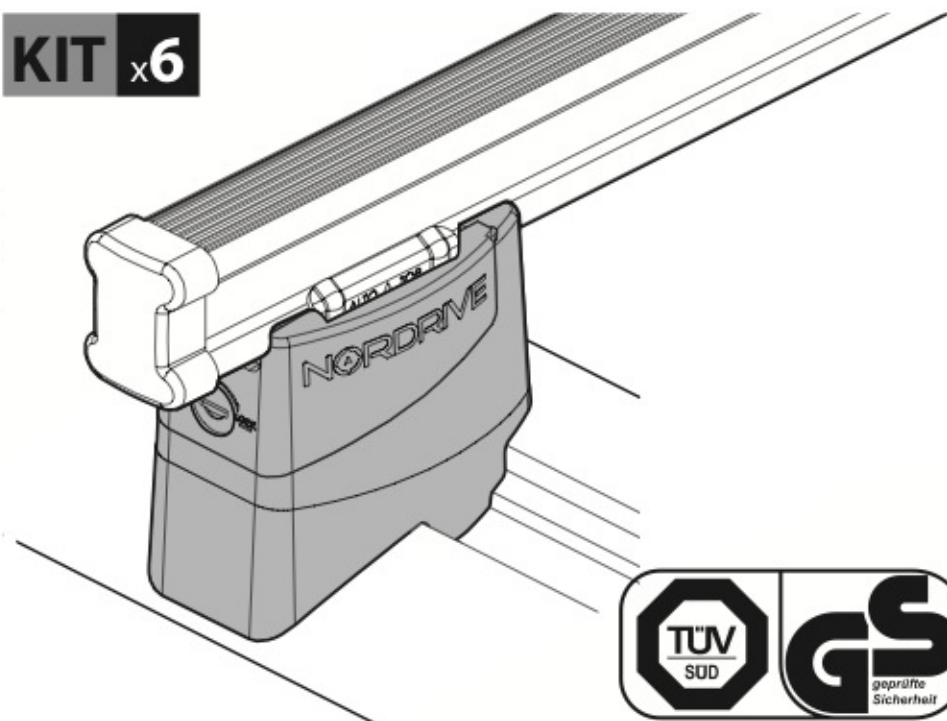

**NORDRIVE
KARGO SERIES**

- ① ADATTO PER
- ⒸB SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA



- ① ISTRUZIONI DI MONTAGGIO
- ⒸB FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓘ MONTERINGSANVISNING
- Ⓝ ASENNUSOHJE
- Ⓖ PAIGALDUSJUHEND
- Ⓗ STIPRINĀŠANAS INSTRUKCIJA
- Ⓗ PRITVIRTINIMO INSTRUKCIJOS
- Ⓗ INSTRUKCJA MONTAŻU
- Ⓗ Инструкции по установке
- Ⓗ NÁVOD NA MONTÁŽ
- Ⓗ NÁVOD NA MONTÁŽ
- Ⓗ NAVODILA ZA PRITRJEVANJE
- Ⓗ UPUTA ZA SASTAVLJANJE
- Ⓗ A FELSZERELÉS MÓDJA
- Ⓗ Οδηγίες συναρμολόγησης
- Ⓗ MONTAJ TALIMATLARL
- Ⓗ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓗ UPUTSTVA ZA MONTAŽU



Kargo



ACCIAIO
Steel

- ① BARRE KARGO
- ⒸB KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO



Art. **N10005** x3



Kargo-Plus



ALLUMINIO
Aluminium

- ① BARRE KARGO-PLUS
- ⒸB KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS








Art. **N10035** x3









NORDRIVE[®]
TRANSPORT SOLUTIONS





NORDDRIVE[®]
TRANSPORT SOLUTIONS

Art. **N30043**

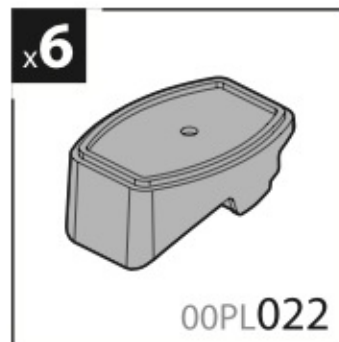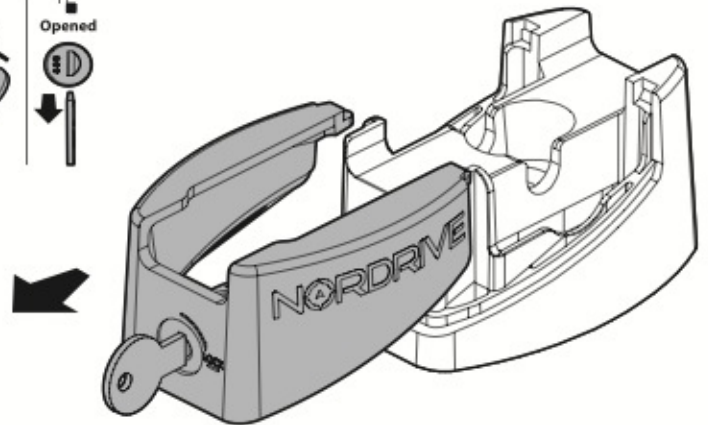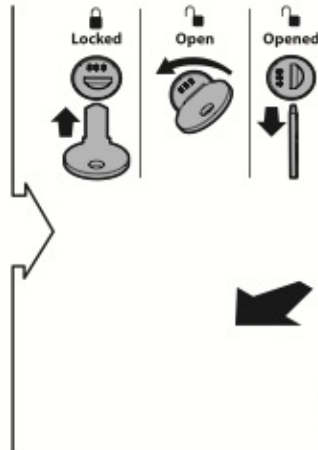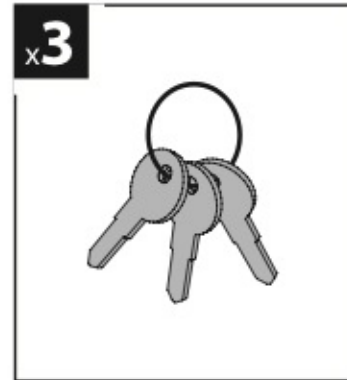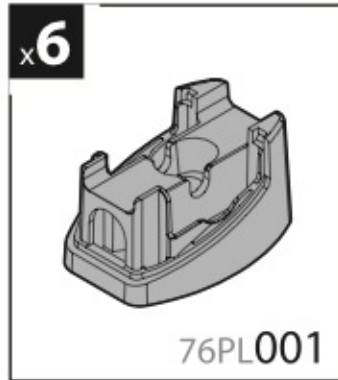

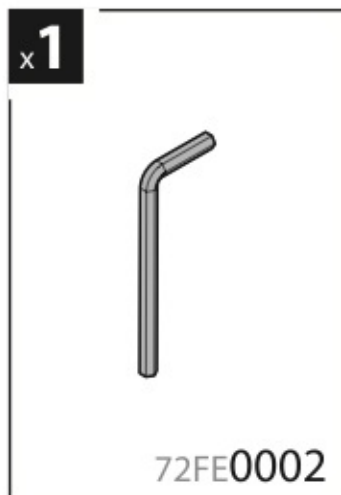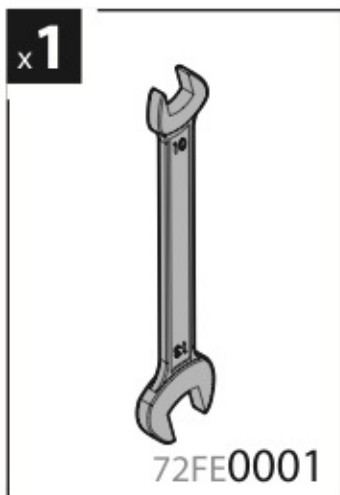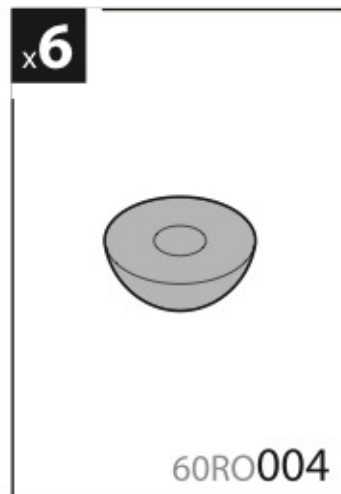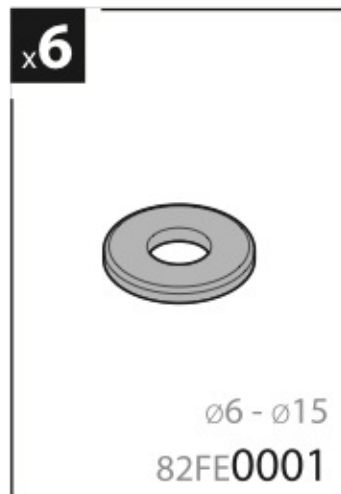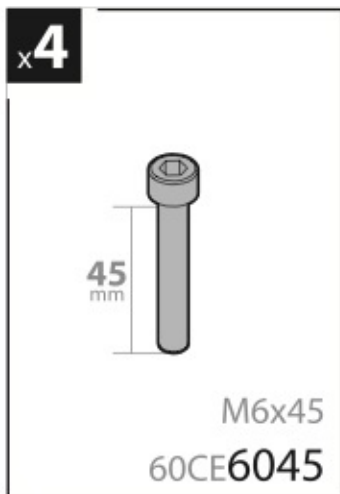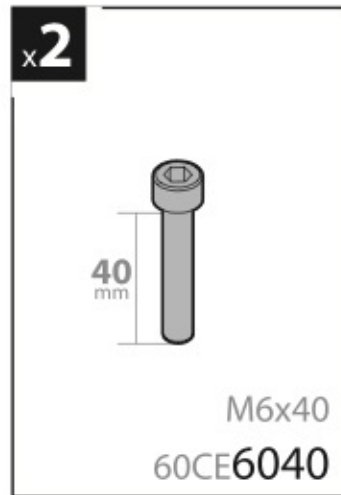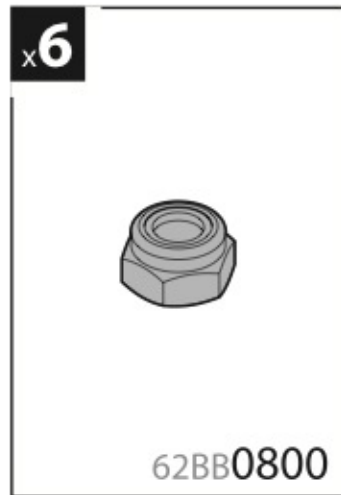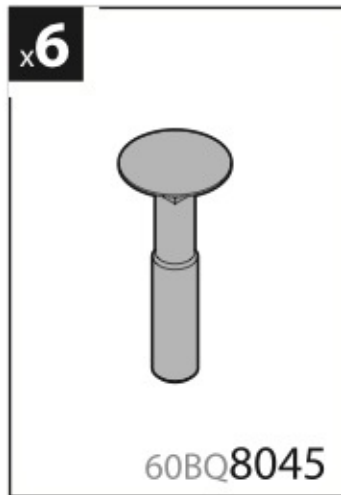

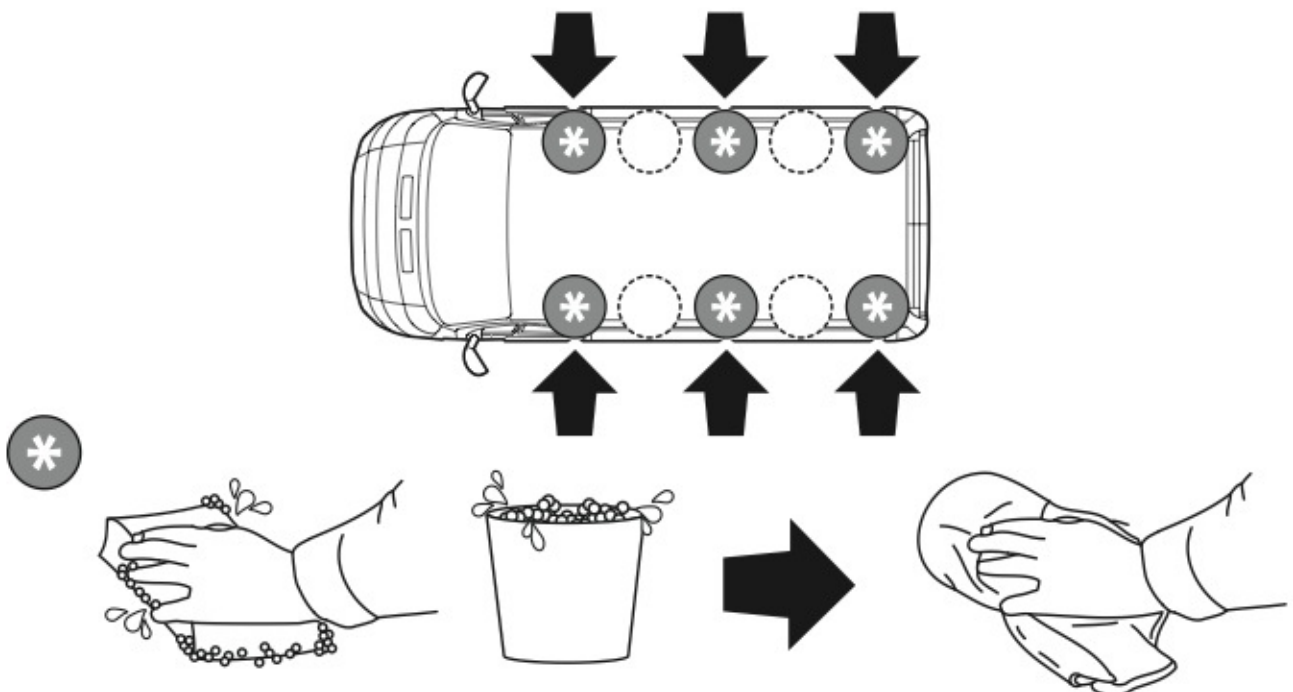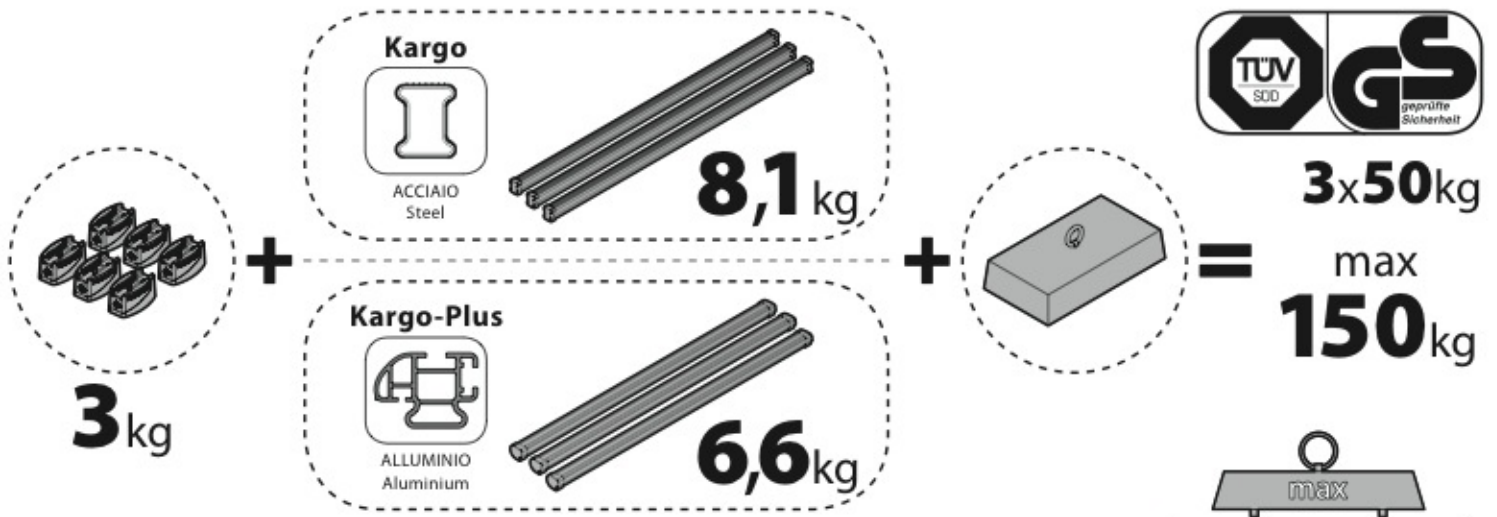


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING


(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRINĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ

(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγία συναρμολόγησης
 (TR) MONTAJ TALIMATLARI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU


1

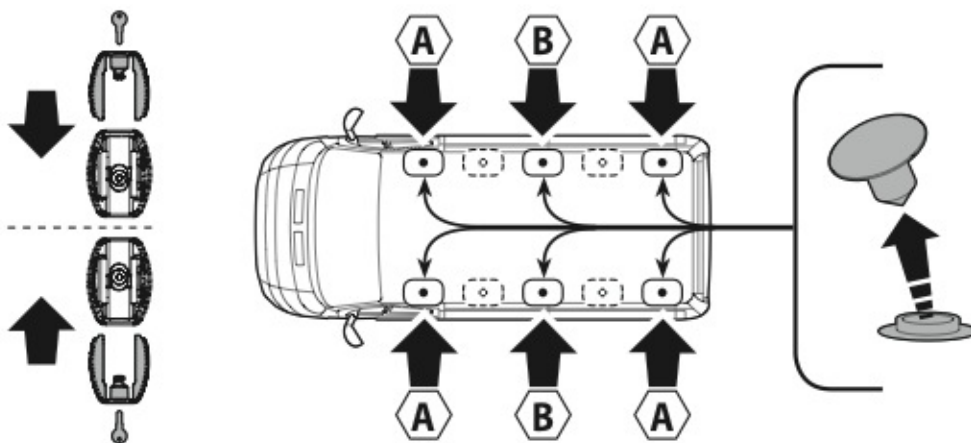




2 A

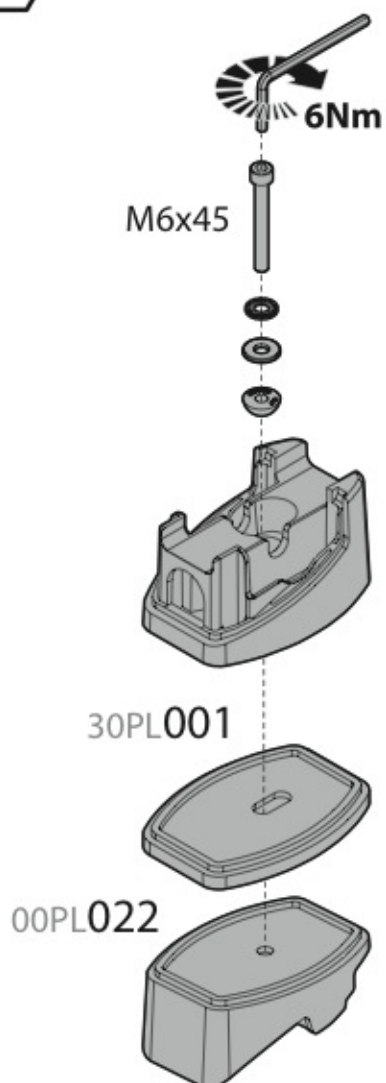

2 B

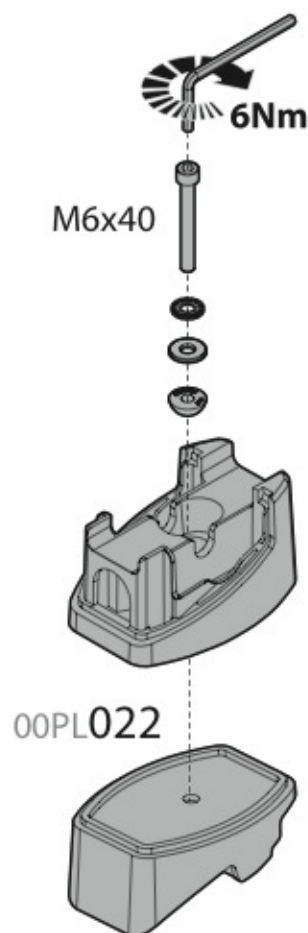

3

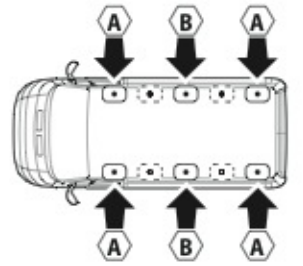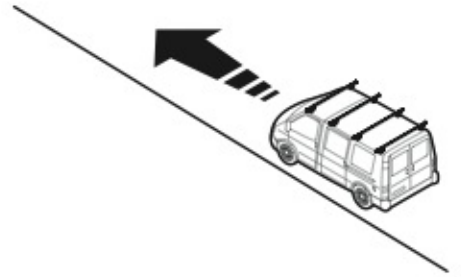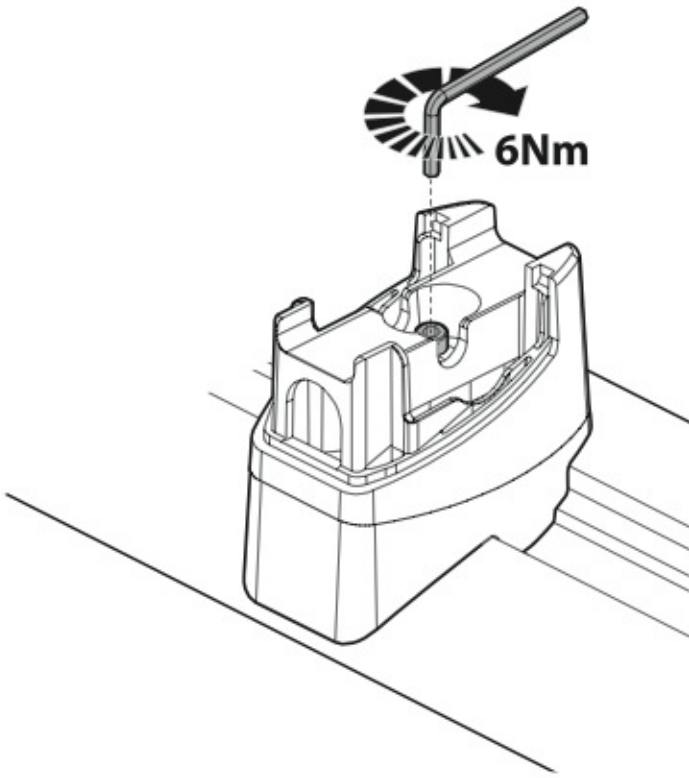



ATTENZIONE WARNING



A **Kargo**
 ACCIAIO
 Steel

MONTAGGIO DIRETTO
 SUI KIT PIEDI SPECIFICI
 DIRECTLY ON FOOT KITS
 BEFESTIGUNGSFÜSSE

B **Kargo-Plus**
 ALLUMINIO
 Aluminium

MONTAGGIO DIRETTO
 SUI KIT PIEDI SPECIFICI
 DIRECTLY ON FOOT KITS
 BEFESTIGUNGSFÜSSE

OK ✓

NO ✗

OK ✓

NO ✗

OK ✓

OK ✓

OK ✓







OK ✓



NO ✗

NO ✗

NO ✗

NO ✗

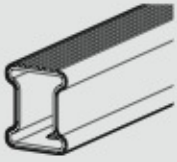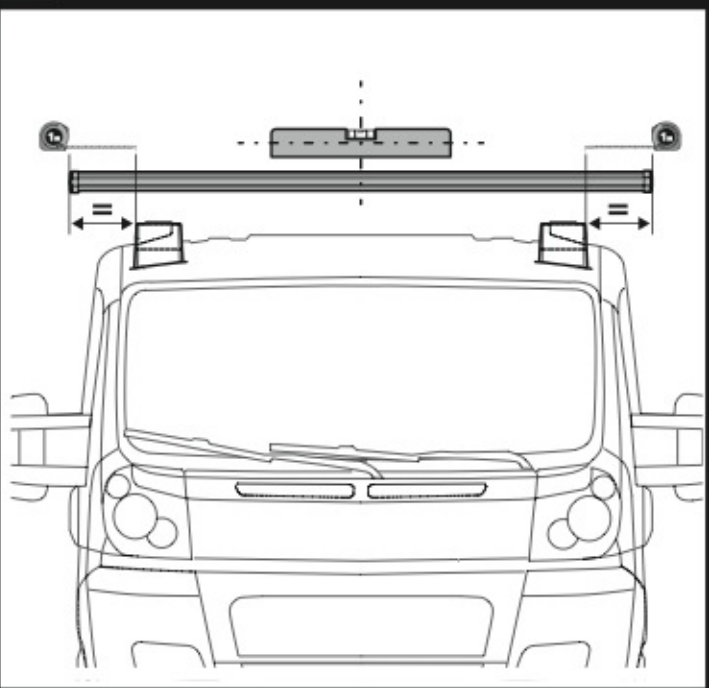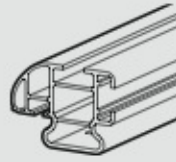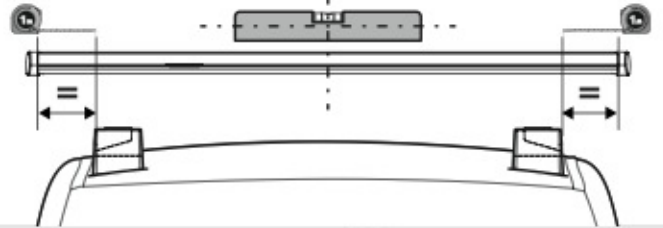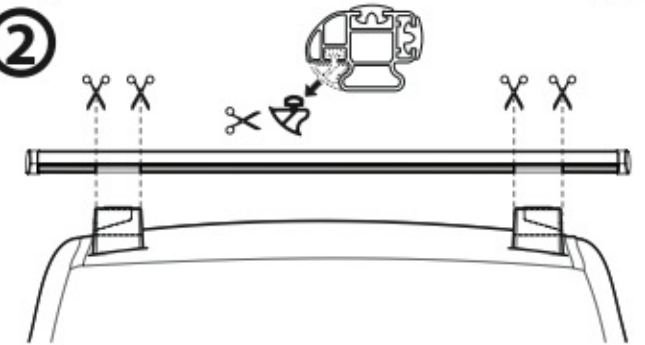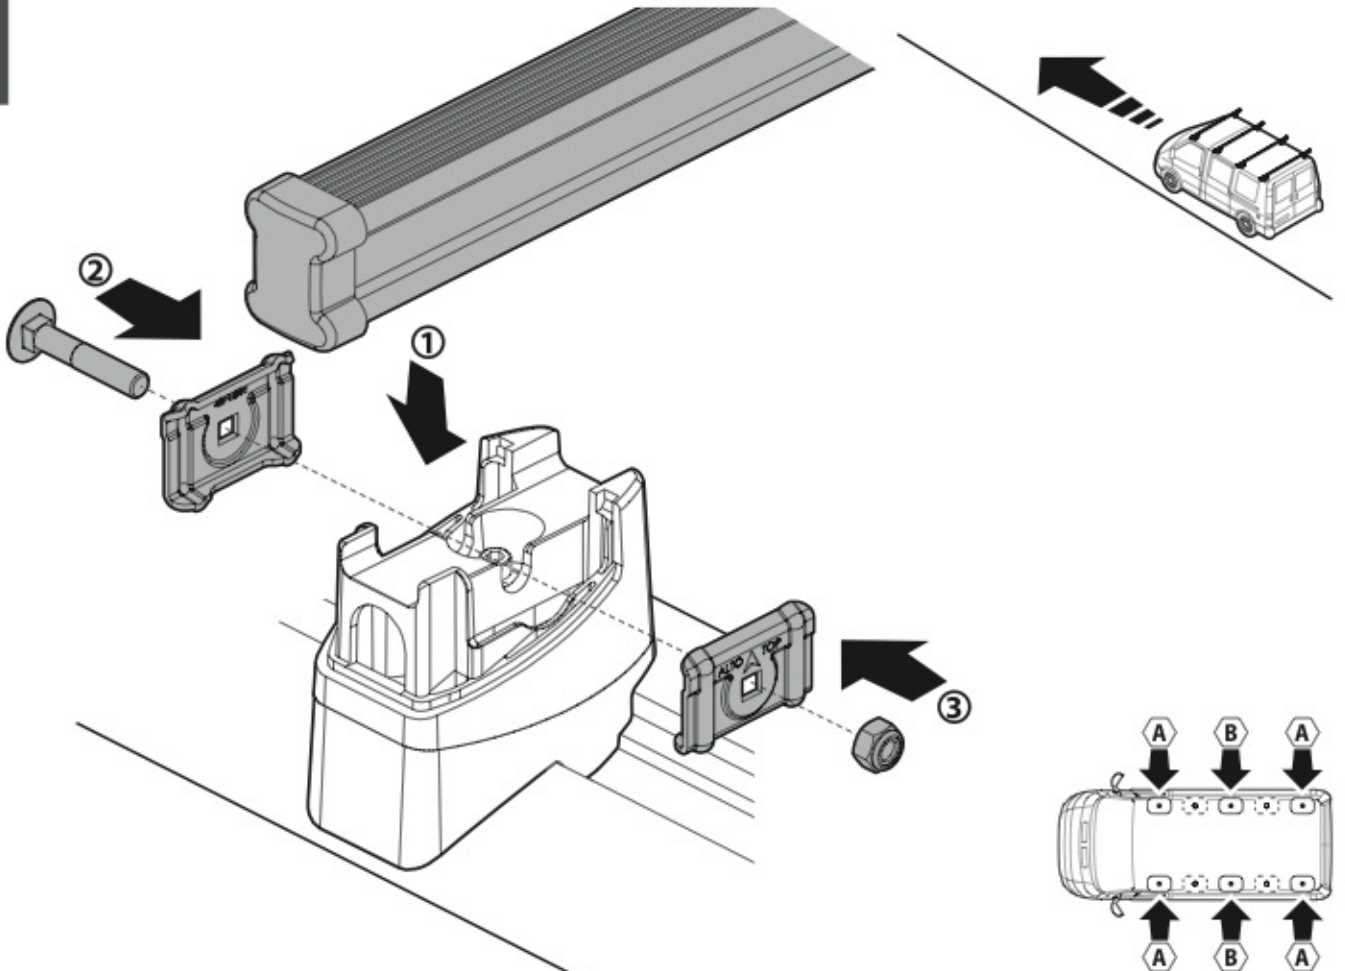
X**A****Kargo**ACCIAIO
Steel**B****Kargo-Plus**ALLUMINIO
Aluminium**1****2****X**

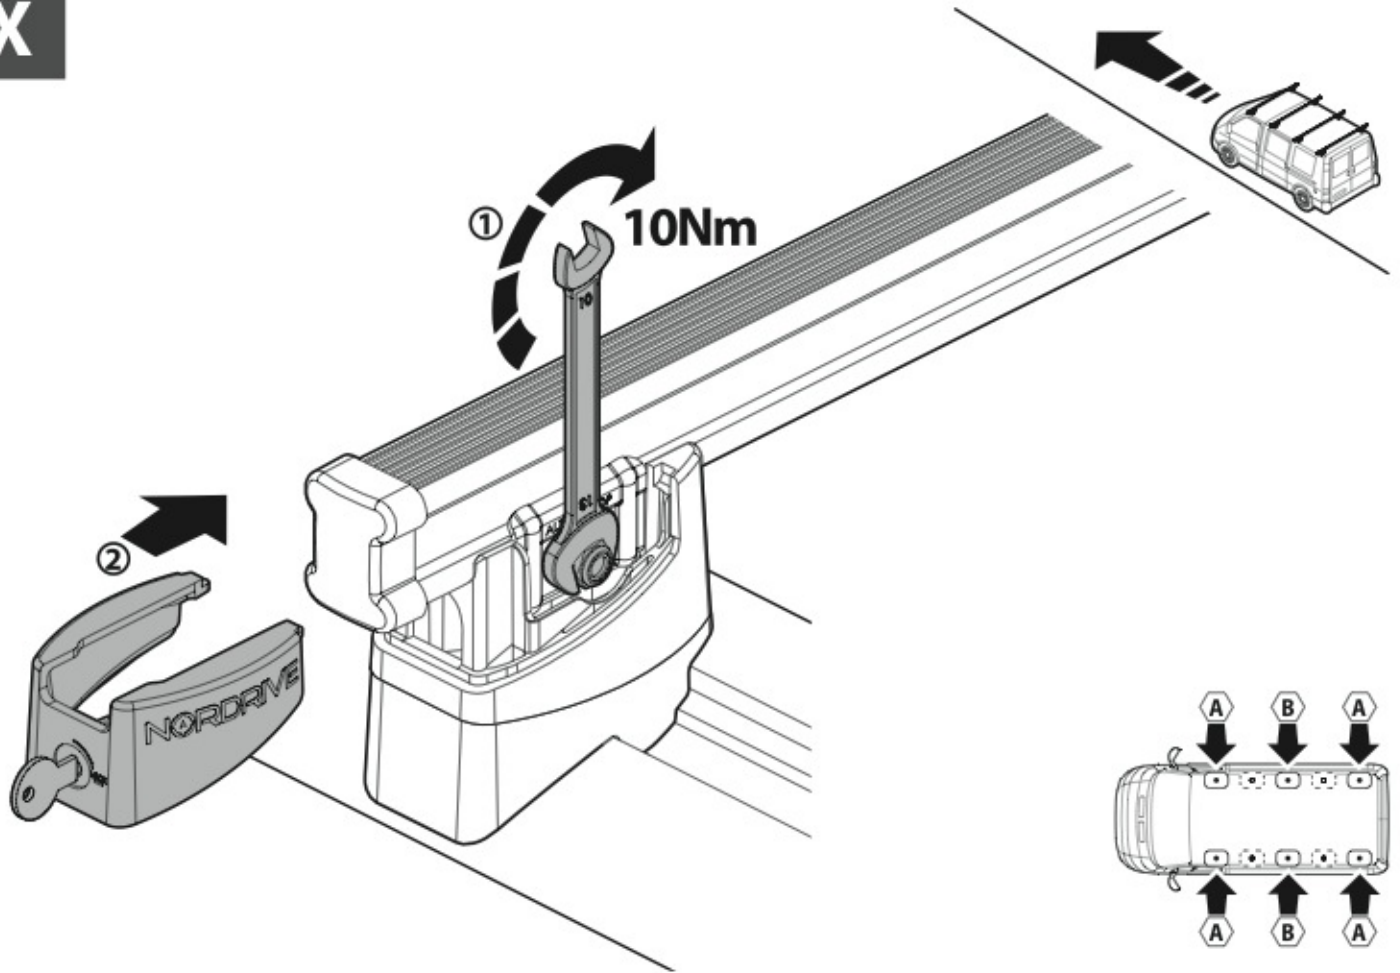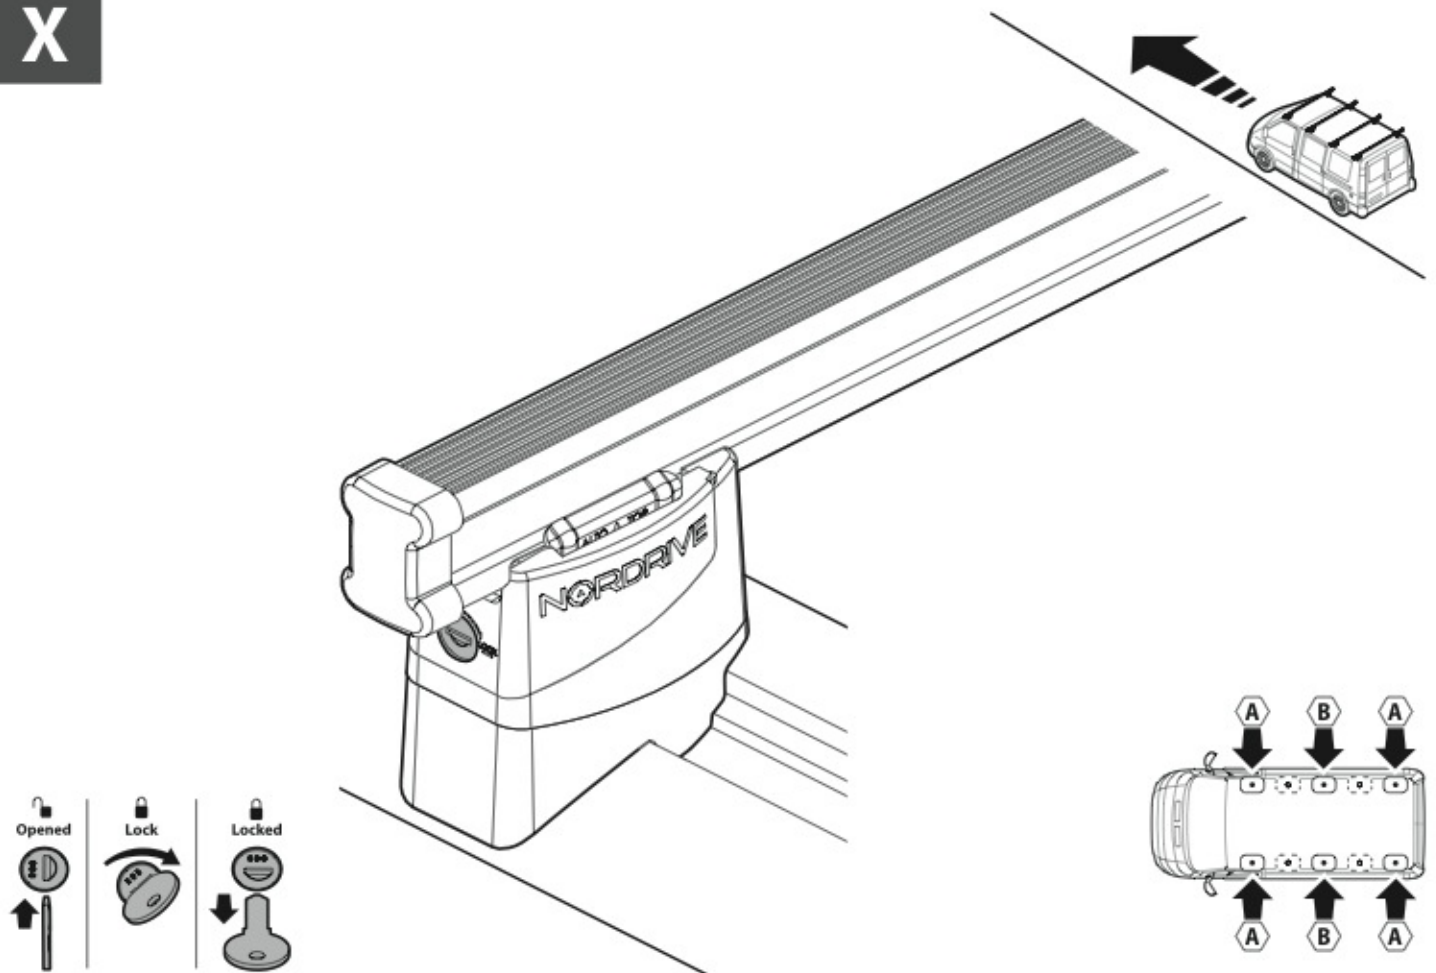X**X**

Kargo series




Acciaio / Steel

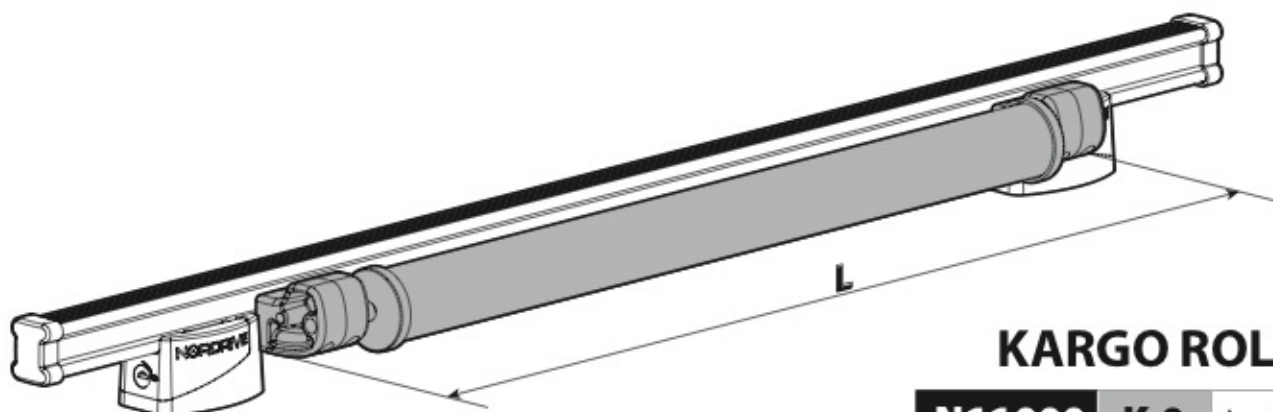


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

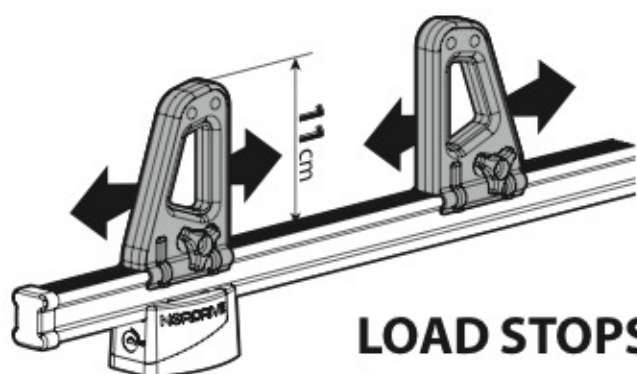


LOAD STOPS

N11001 K-1

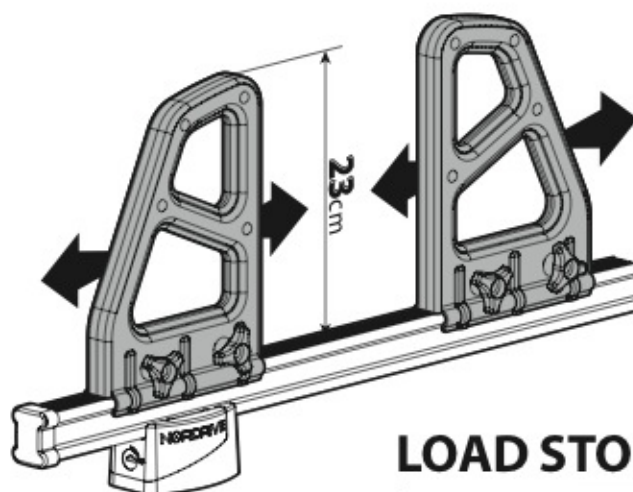

LOAD STOPS

N11002 K-2

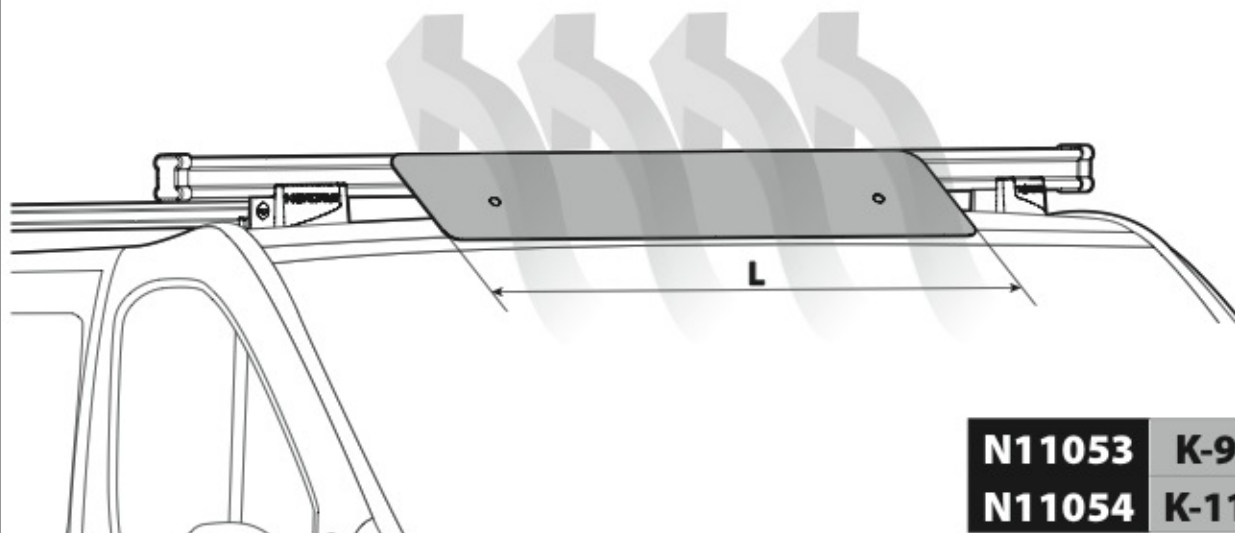

SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series




Alluminio / Aluminium

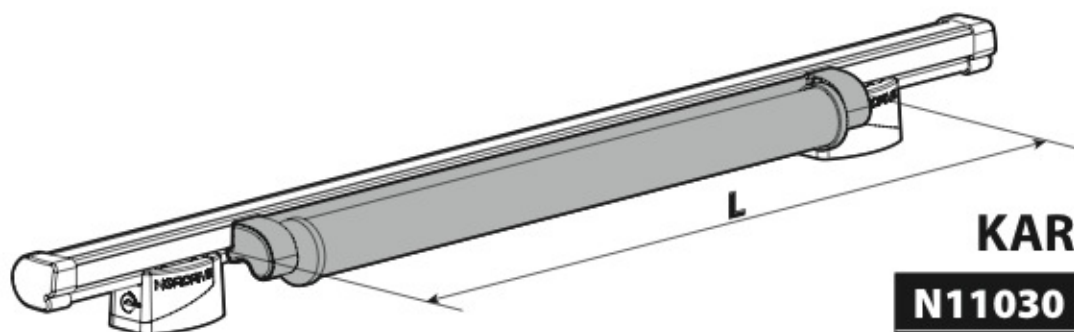

KARGO ROLLER


N11030 KP-0 L = 64 cm

N11034 KP-7 L = 96 cm

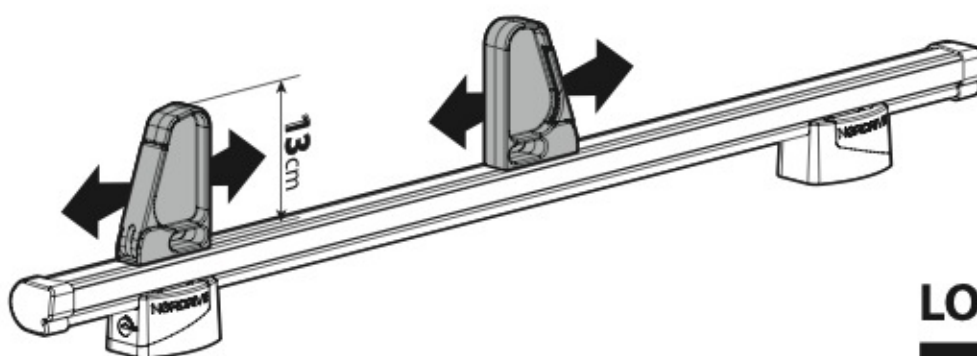


LOAD STOPS

N11031 KP-1

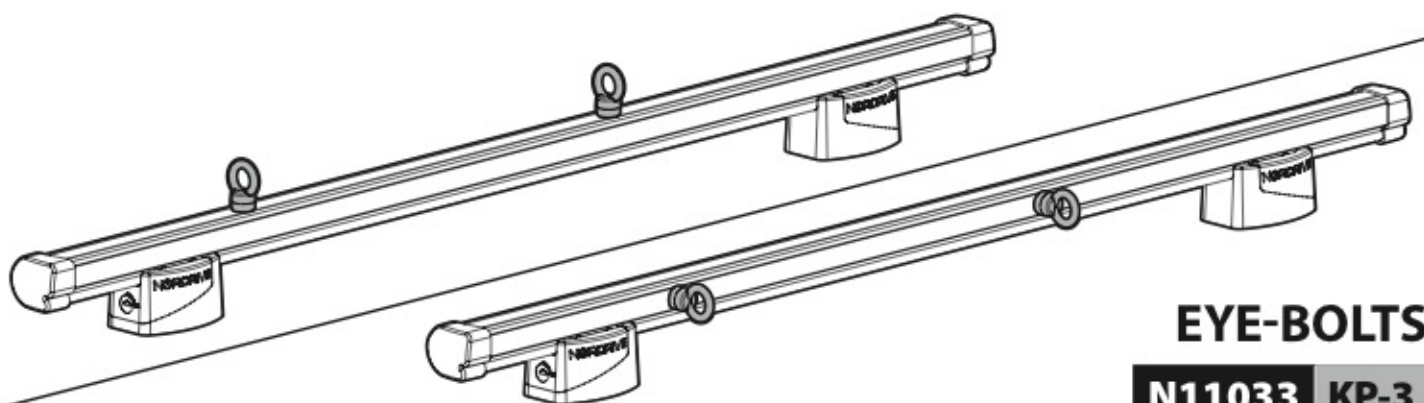

EYE-BOLTS

N11033 KP-3

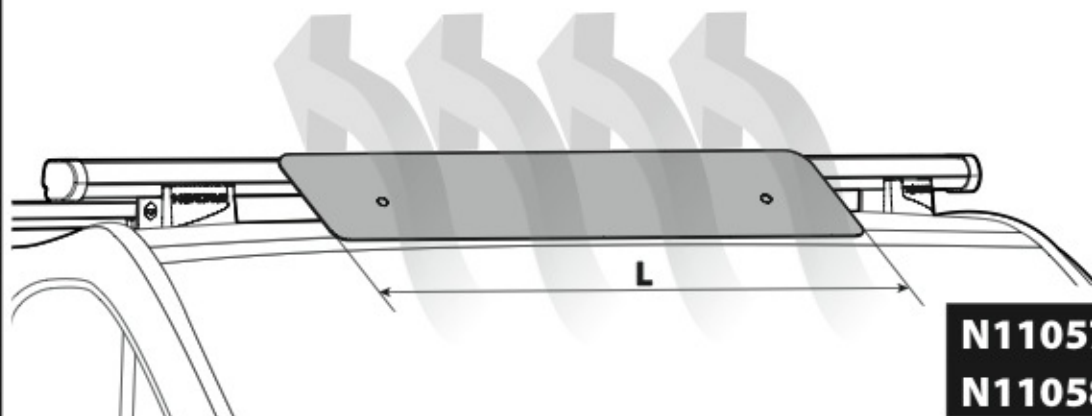

SPOILER

N11057 KP-9 L = 95 cm

N11058 KP-11 L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel

Kargo-Plus
series




Alluminio / Aluminium

KARGO-TUBE

N11050 T200 L = 205 cm



N11051 T300 L = 305 cm

N11052 T400 L = 405 cm

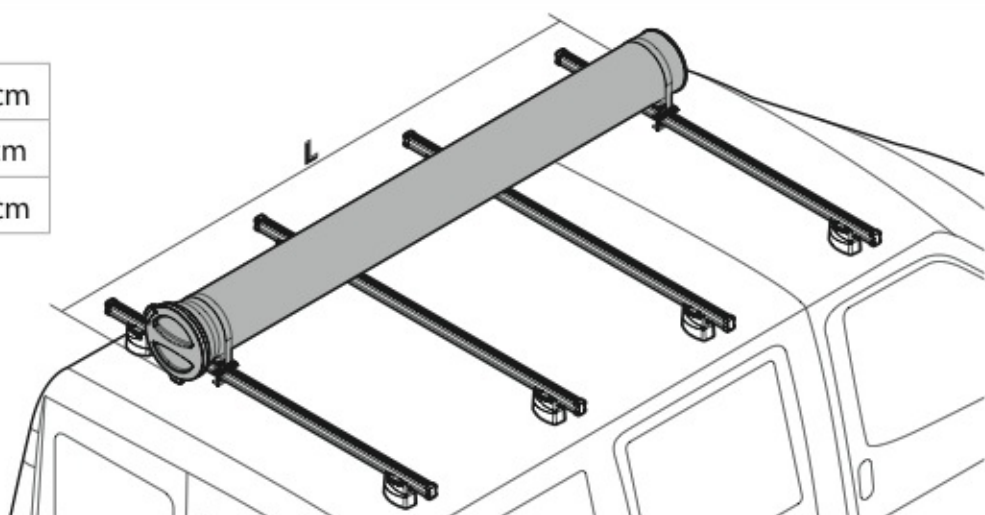


LADDER HOLDER STRAPS

N11065 U-5

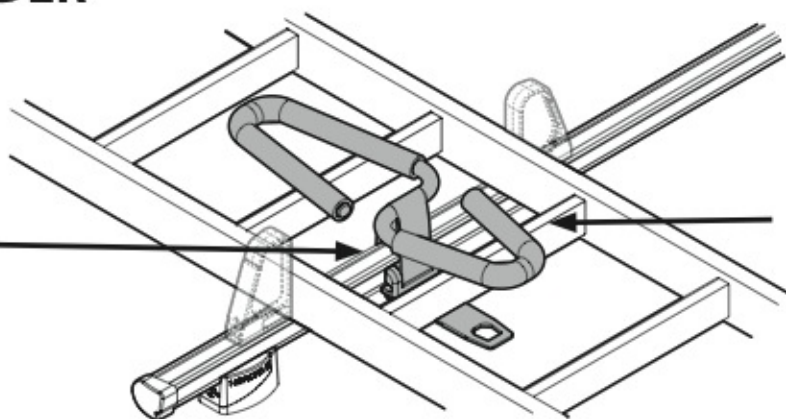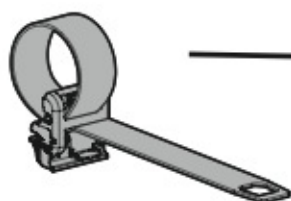

LADDER STEP ADAPTER


N11067 U-6

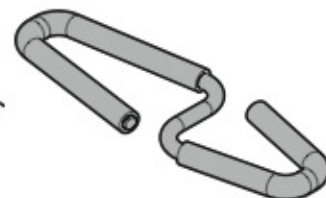

EXTENSION ROLLER

N11020 U-0 L = 64 cm

N11021 U-7 L = 96 cm

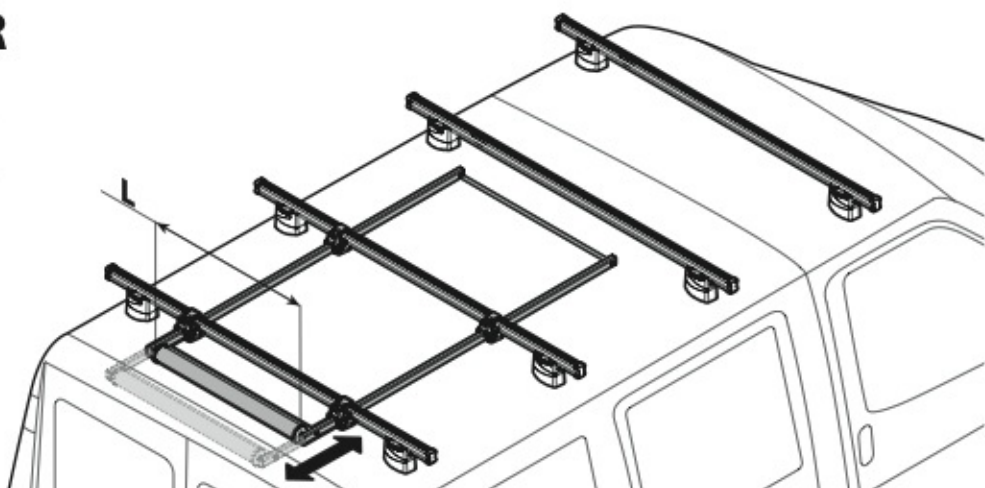

NORDRIVE[®]
TRANSPORT SOLUTIONS

NORDRIVE[®] is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it