
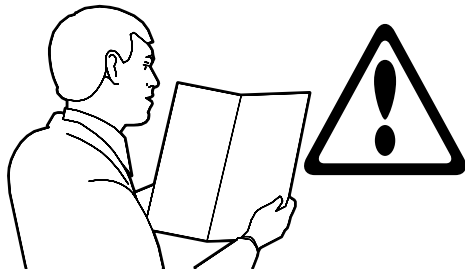


Art. **N30253**

**KIT** x6

**DACIA LOGAN  
FURGOVAN**

2000  
02/07→09/13

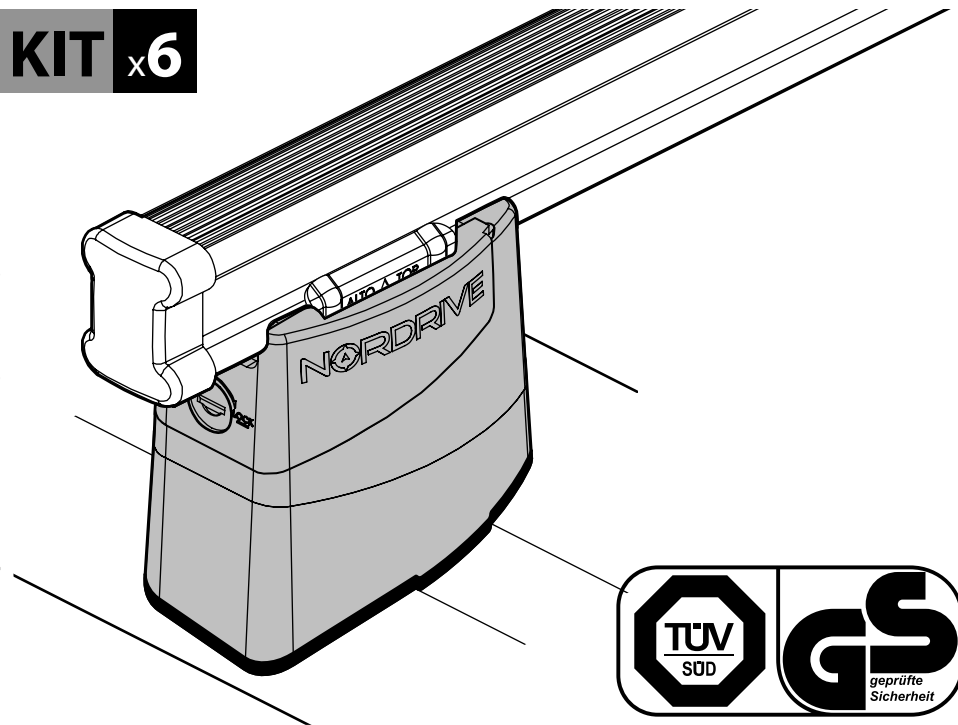


- ① ADATTO PER
- ② SUITABLE FOR
- ③ INDIQUÉ POUR
- ④ GEEIGNET FÜR
- ⑤ ADECUADA PARA

**NORDRIVE  
KARGO SERIES**

- ① ISTRUZIONI DI MONTAGGIO
- ② FITTING INSTRUCTIONS
- ③ MONTAGEANLEITUNG
- ④ INSTRUCTIONS DE MONTAGE
- ⑤ ISTRUCCIONES DE MONTAJE
- ⑥ INSTRUÇÕES DE MONTAGEM
- ⑦ MONTAGE-INSTRUCTIES
- ⑧ MONTERINGSANVISNING
- ⑨ ASENNUSOHJE
- ⑩ PAIGALDUSJUHEND
- ⑪ STIPRINĀŠANAS INSTRUKCIJA
- ⑫ PRITVIRTINIMO INSTRUKCIJOS
- ⑬ INSTRUKCJA MONTAŻU
- ⑭ Инструкции по установке
- ⑮ NÁVOD NA MONTÁŽ
- ⑯ NÁVOD NA MONTÁŽ
- ⑰ NAVODILA ZA PRITRJEVANJE
- ⑱ UPUTA ZA SASTAVLJANJE
- ⑲ A FELSZERELÉS MÓDJA
- ⑳ Οδηγίες συναρμολόγησης
- ㉑ MONTAJ TALIMATLARI
- ㉒ ИНСТРУКЦИИ ЗА МОНТАЖ
- ㉓ UPUTSTVA ZA MONTAŽU



**Kargo**  
ACCIAIO  
Steel

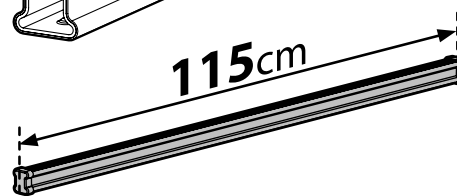


- ① BARRE KARGO
- ② KARGO BARS
- ③ BARRES KARGO
- ④ DACH-LASTENTRÄGER KARGO
- ⑤ BARRES KARGO

Art. **N10000** x3



**Kargo-Plus**  
ALLUMINIO  
Aluminium

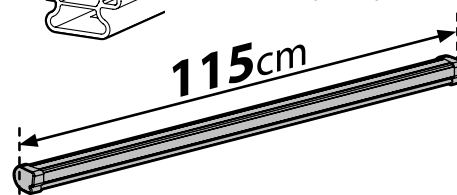


- ① BARRE KARGO-PLUS
- ② KARGO-PLUS BARS
- ③ BARRES KARGO-PLUS
- ④ DACH-LASTENTRÄGER KARGO-PLUS
- ⑤ BARRES KARGO-PLUS


Art. **N10030** x3



**KRS-7**

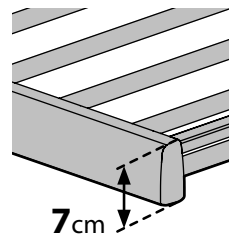


**KRS-12**

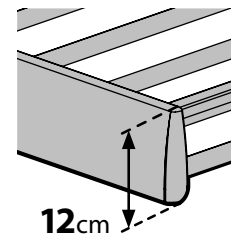

- ① CESTE PORTATUTTO KRS-7 / KRS-12
- ② KRS-7 / KRS-12 VAN ROOF RACKS
- ③ GALERIE KRS-7 / KRS-12
- ④ DACHKÖRBEIN KRS-7 / KRS-12
- ⑤ BACAS KRS-7 / KRS-12

**NORDRIVE®**












TRANSPORT SOLUTIONS











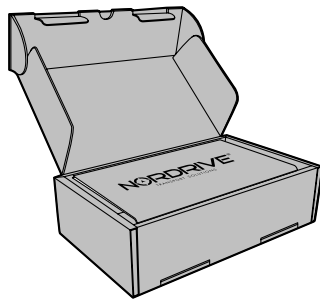






# NORDRIVE®

TRANSPORT SOLUTIONS

Art. **N30253**

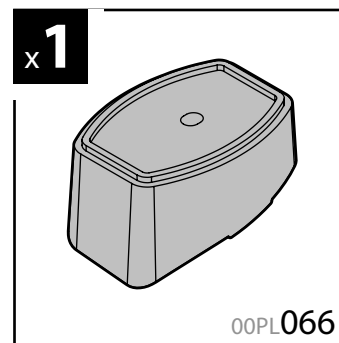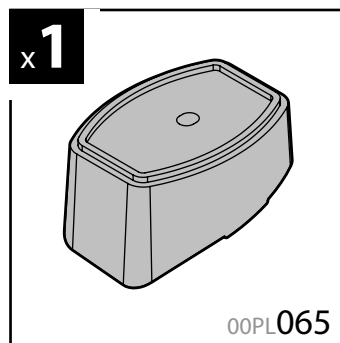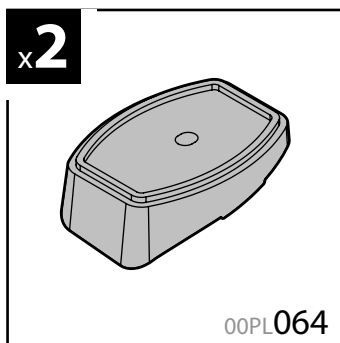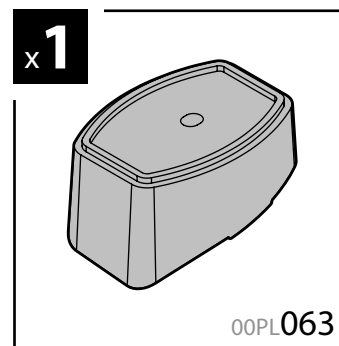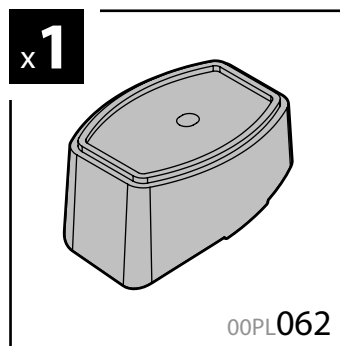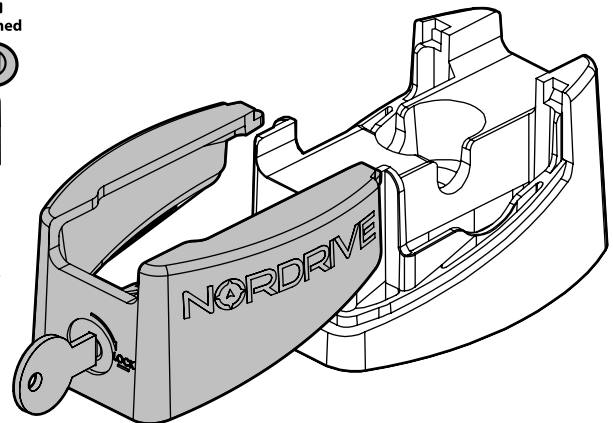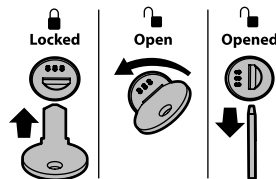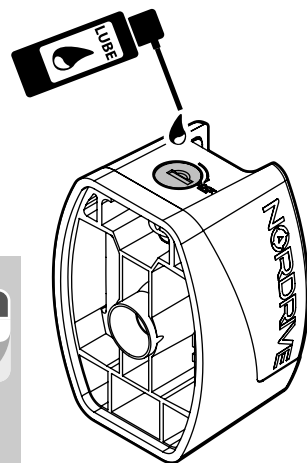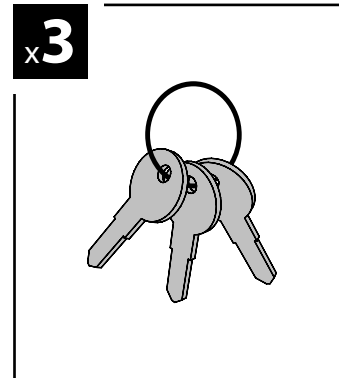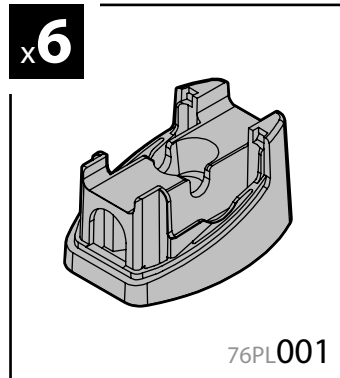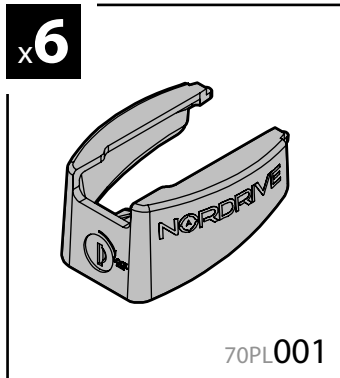

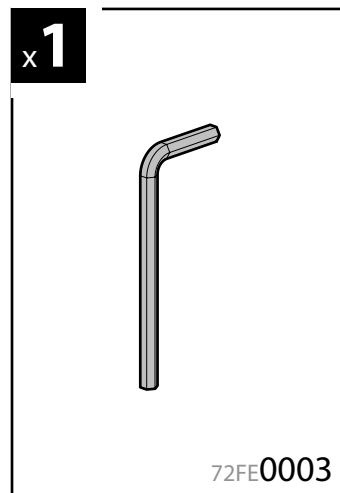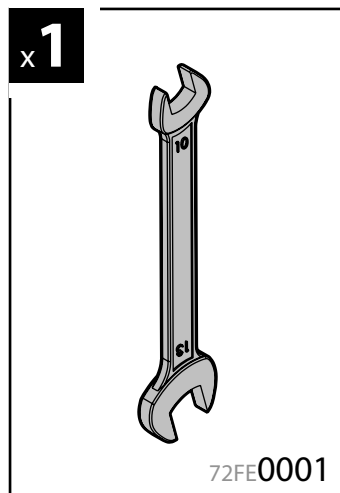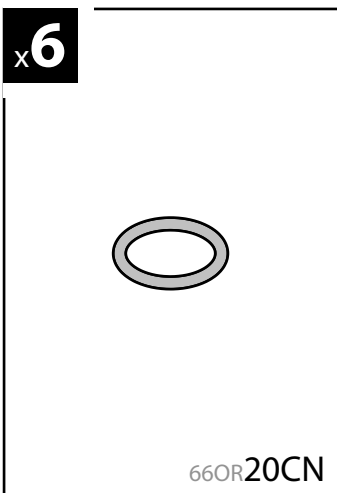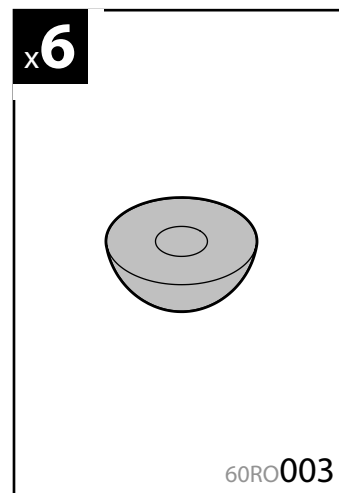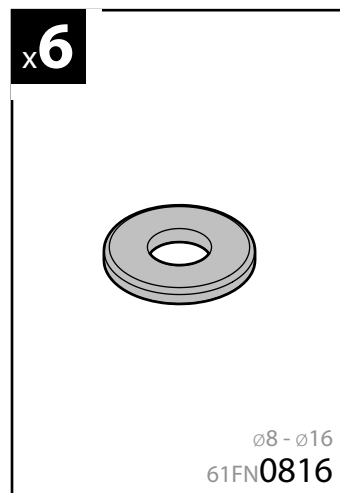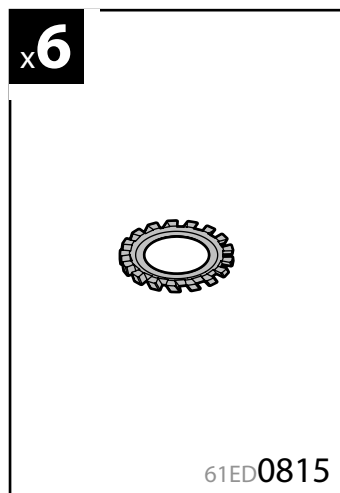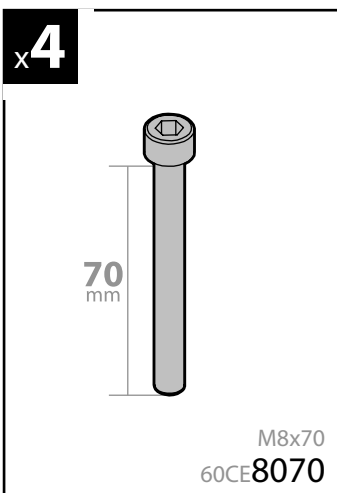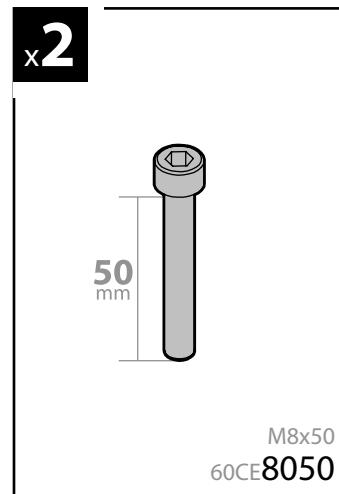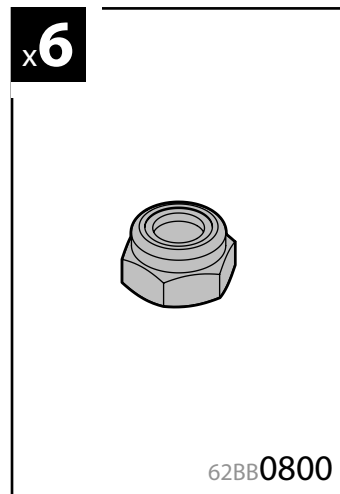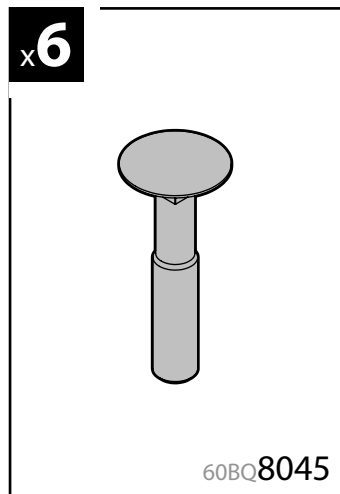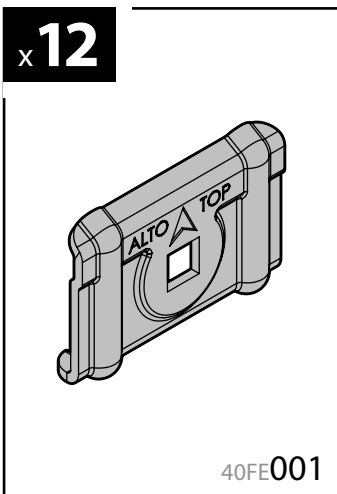

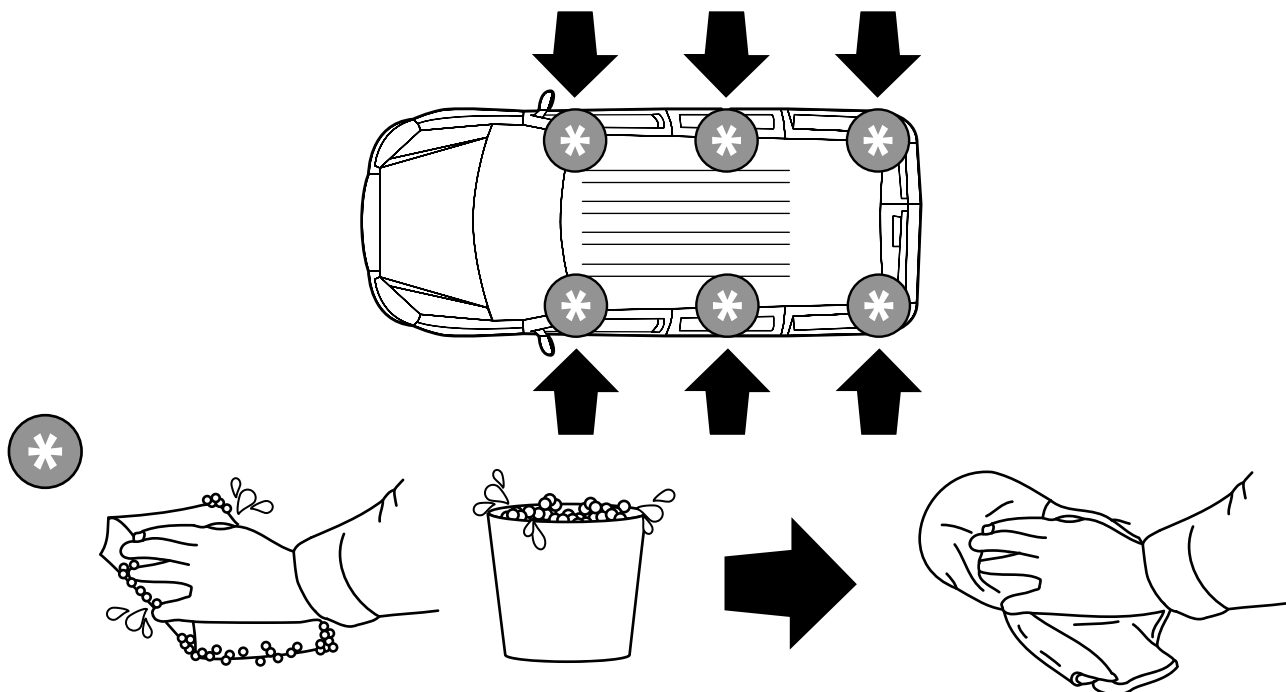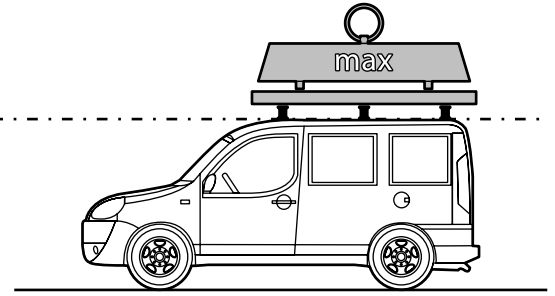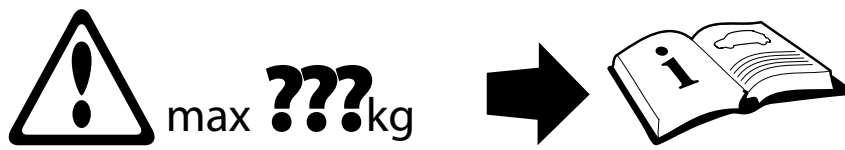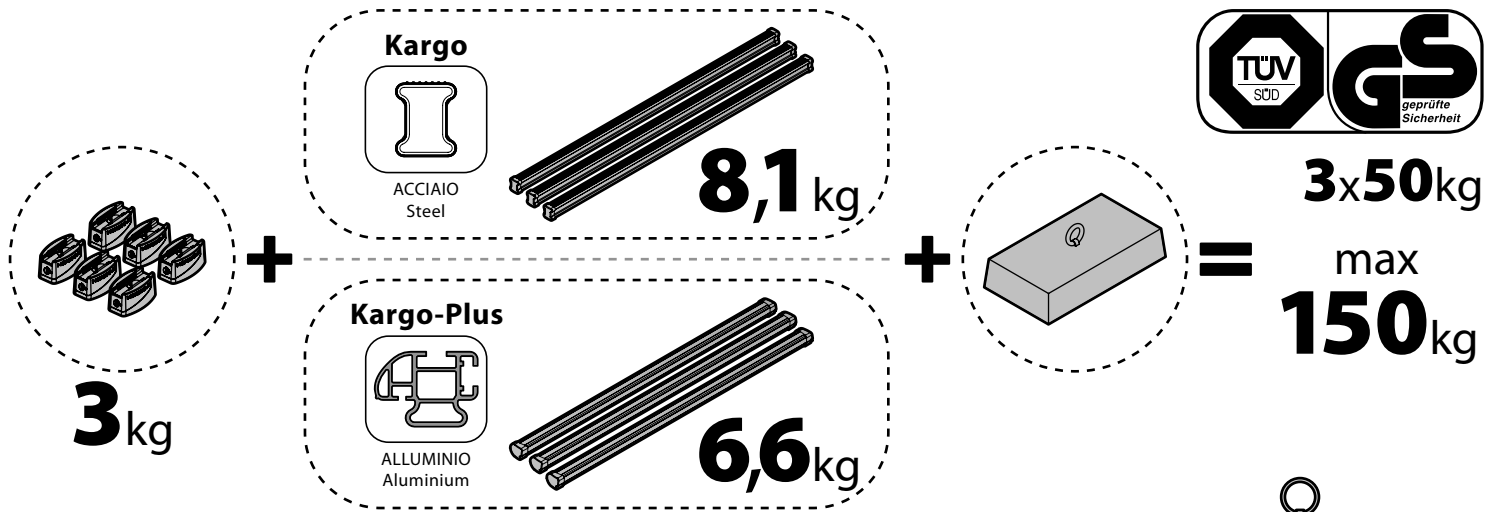


(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) ISTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγία συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

1

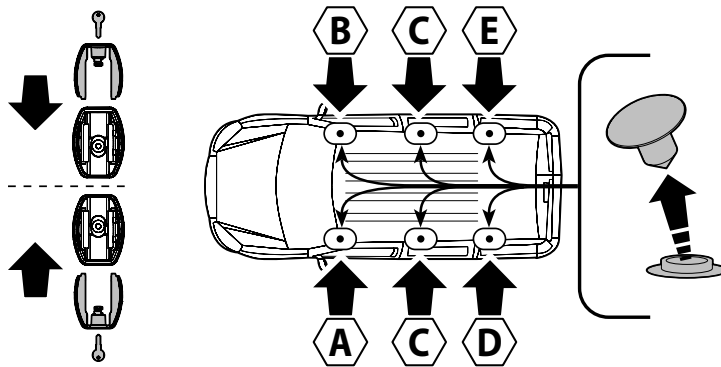


2

A

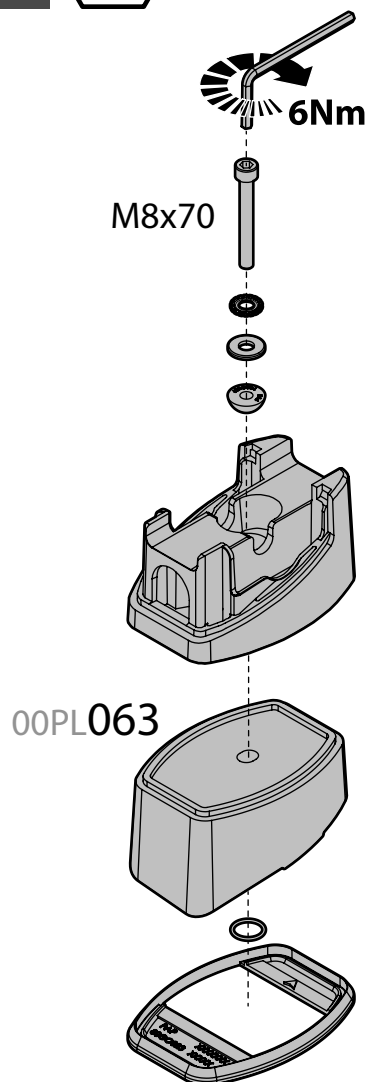


2

B

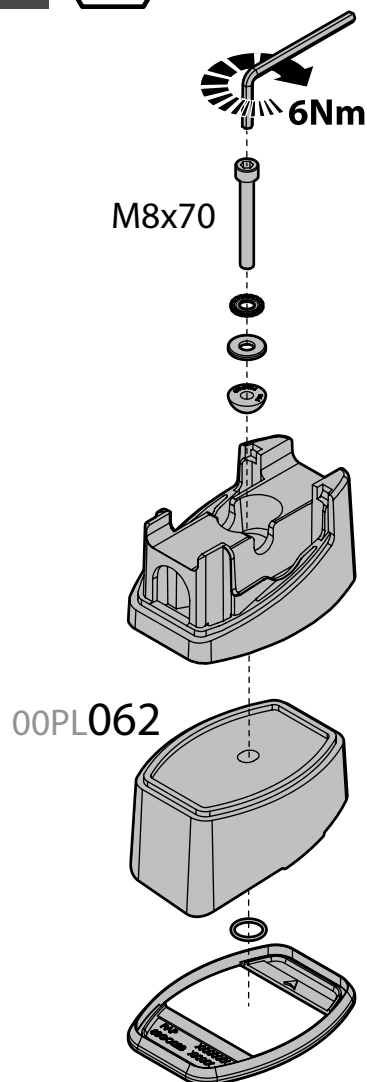


2

C

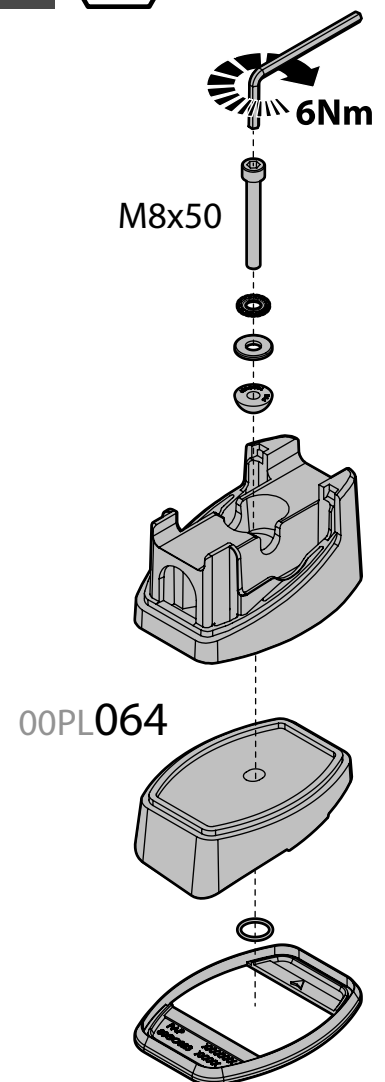


2

D

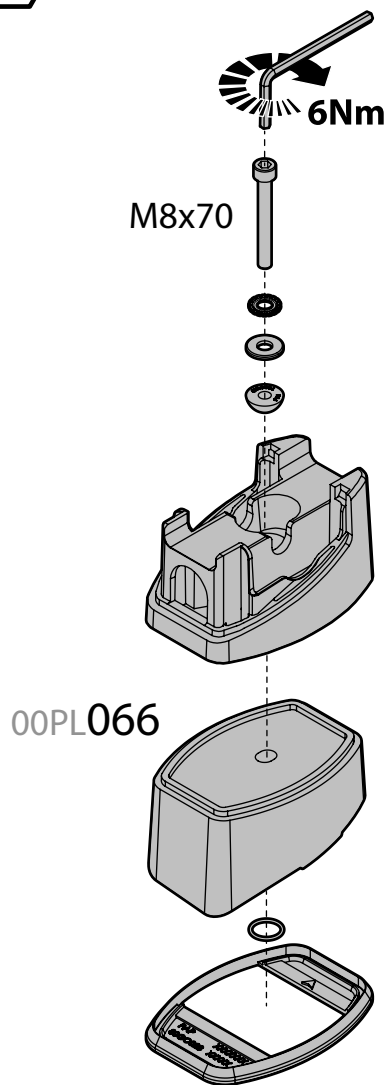


2

E

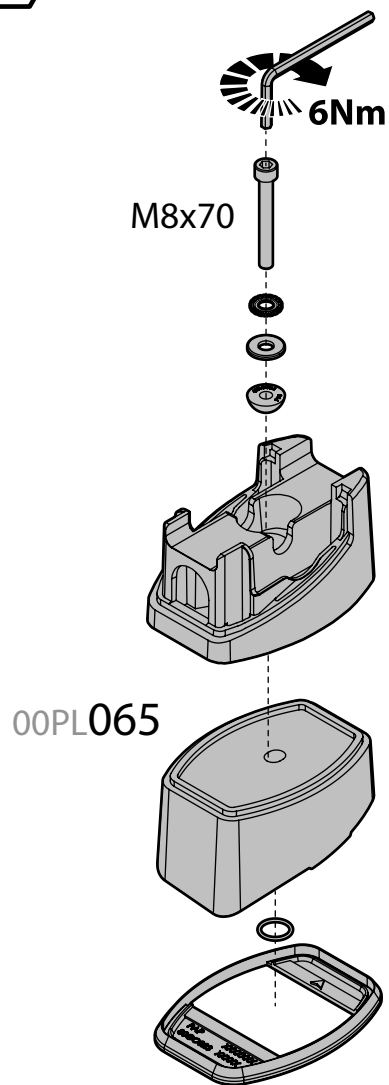

3

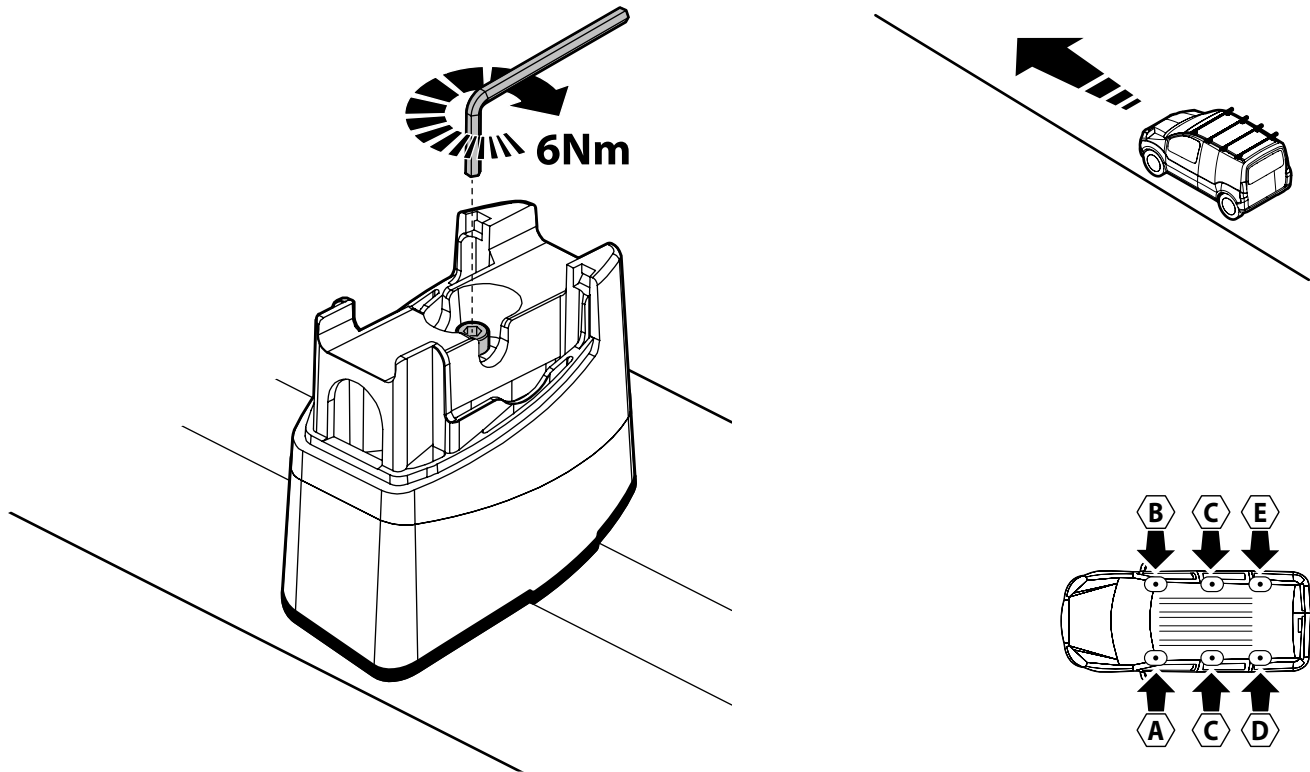



# ATTENZIONE WARNING



**A** **Kargo**  
 ACCIAIO  
 Steel

MONTAGGIO DIRETTO  
 SUI KIT PIEDI SPECIFICI  
 DIRECTLY ON FOOT KITS  
 BEFESTIGUNGSFÜSSE

**B** **Kargo-Plus**  
 ALLUMINIO  
 Aluminium

MONTAGGIO DIRETTO  
 SUI KIT PIEDI SPECIFICI  
 DIRECTLY ON FOOT KITS  
 BEFESTIGUNGSFÜSSE

**OK** ✓

**NO** ✗

**OK** ✓

**NO** ✗

**OK** ✓

**OK** ✓

**OK** ✓

**OK** ✓

**NO** ✗


**NO** ✗

**NO** ✗

**NO** ✗

4


A

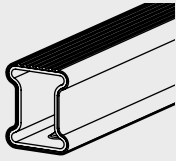


### Kargo



ACCIAIO  
Steel

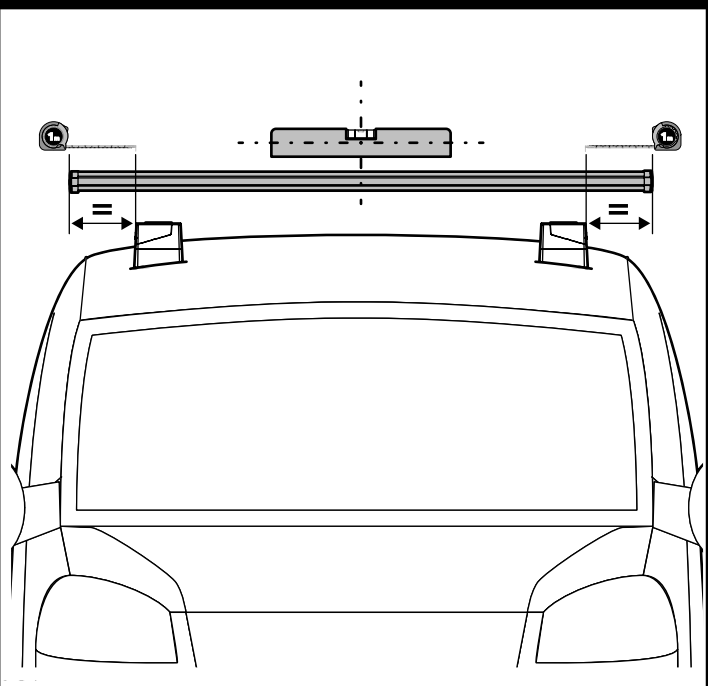


B

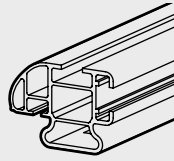


### Kargo-Plus



ALLUMINIO  
Aluminium

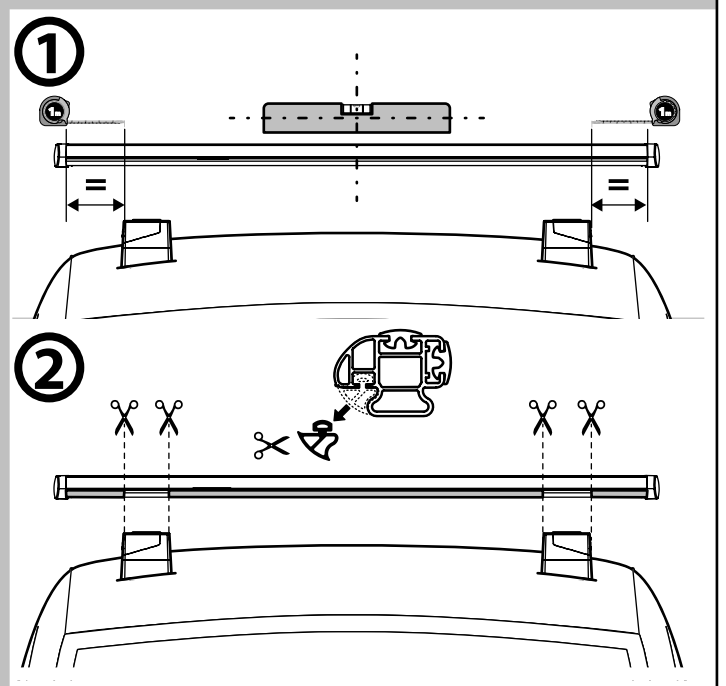


5

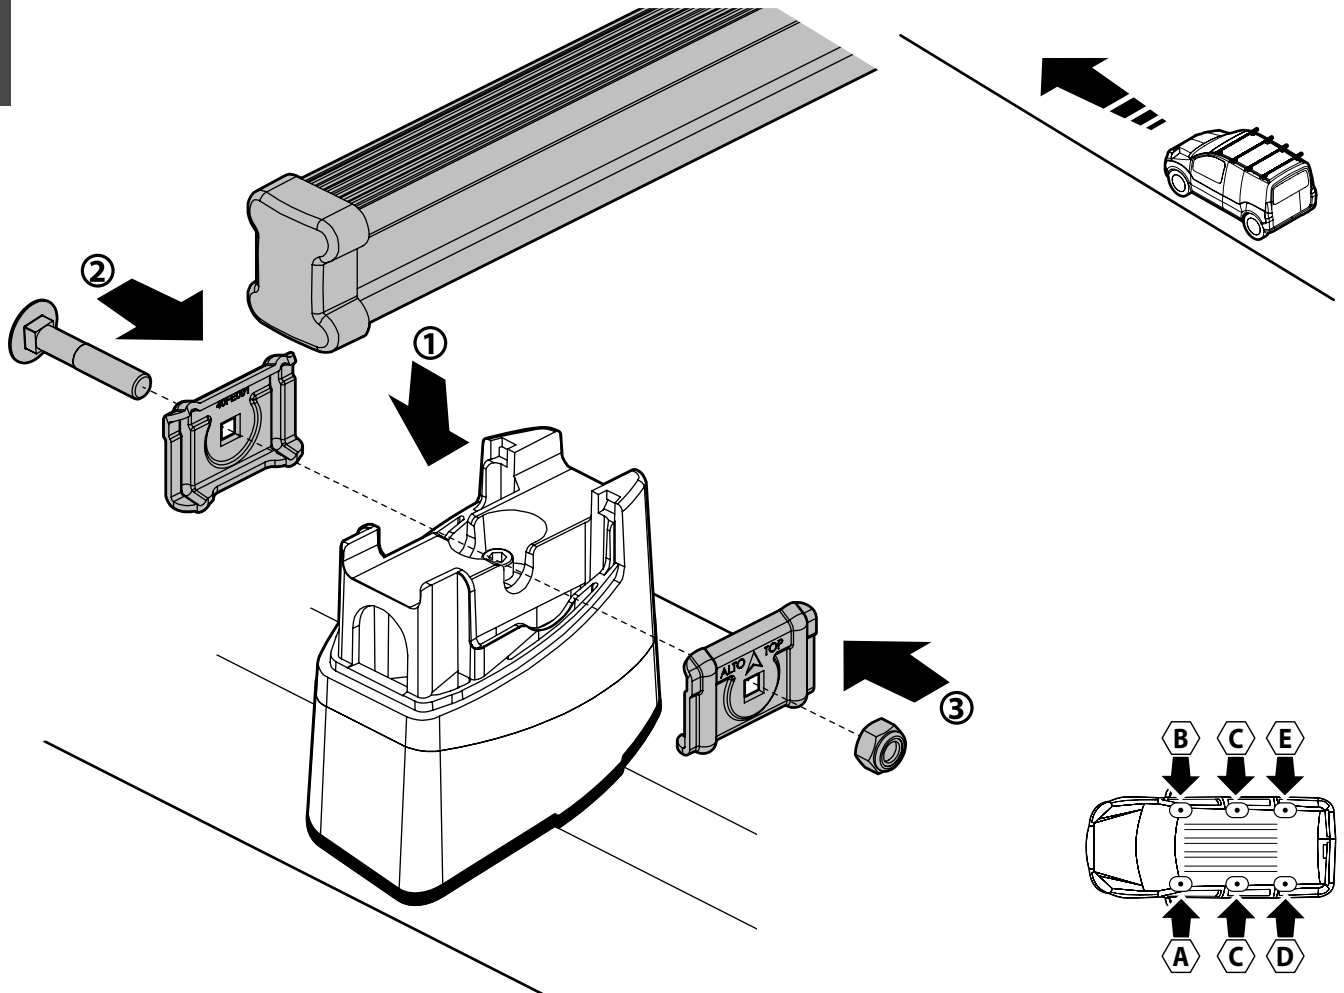




6

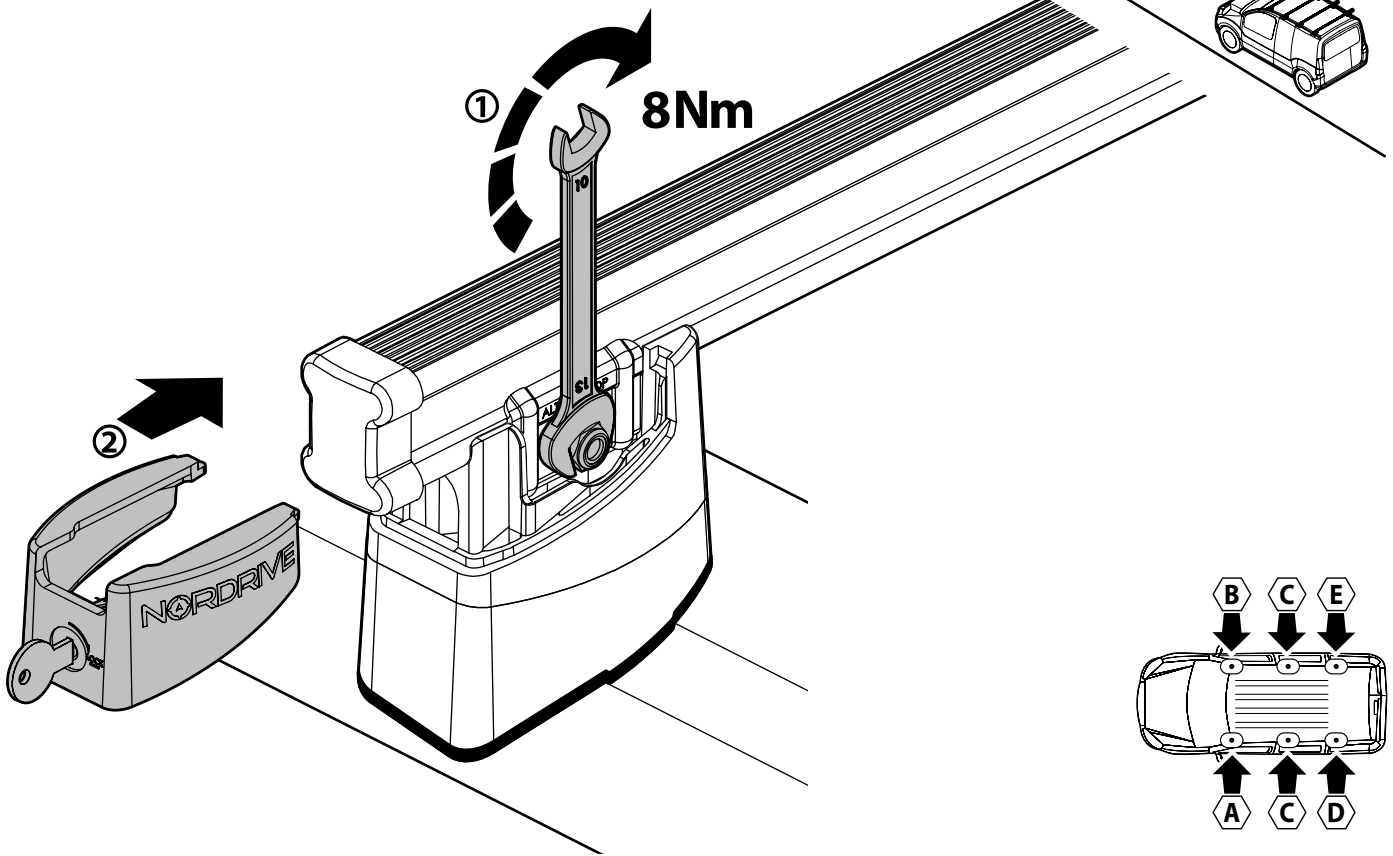

7

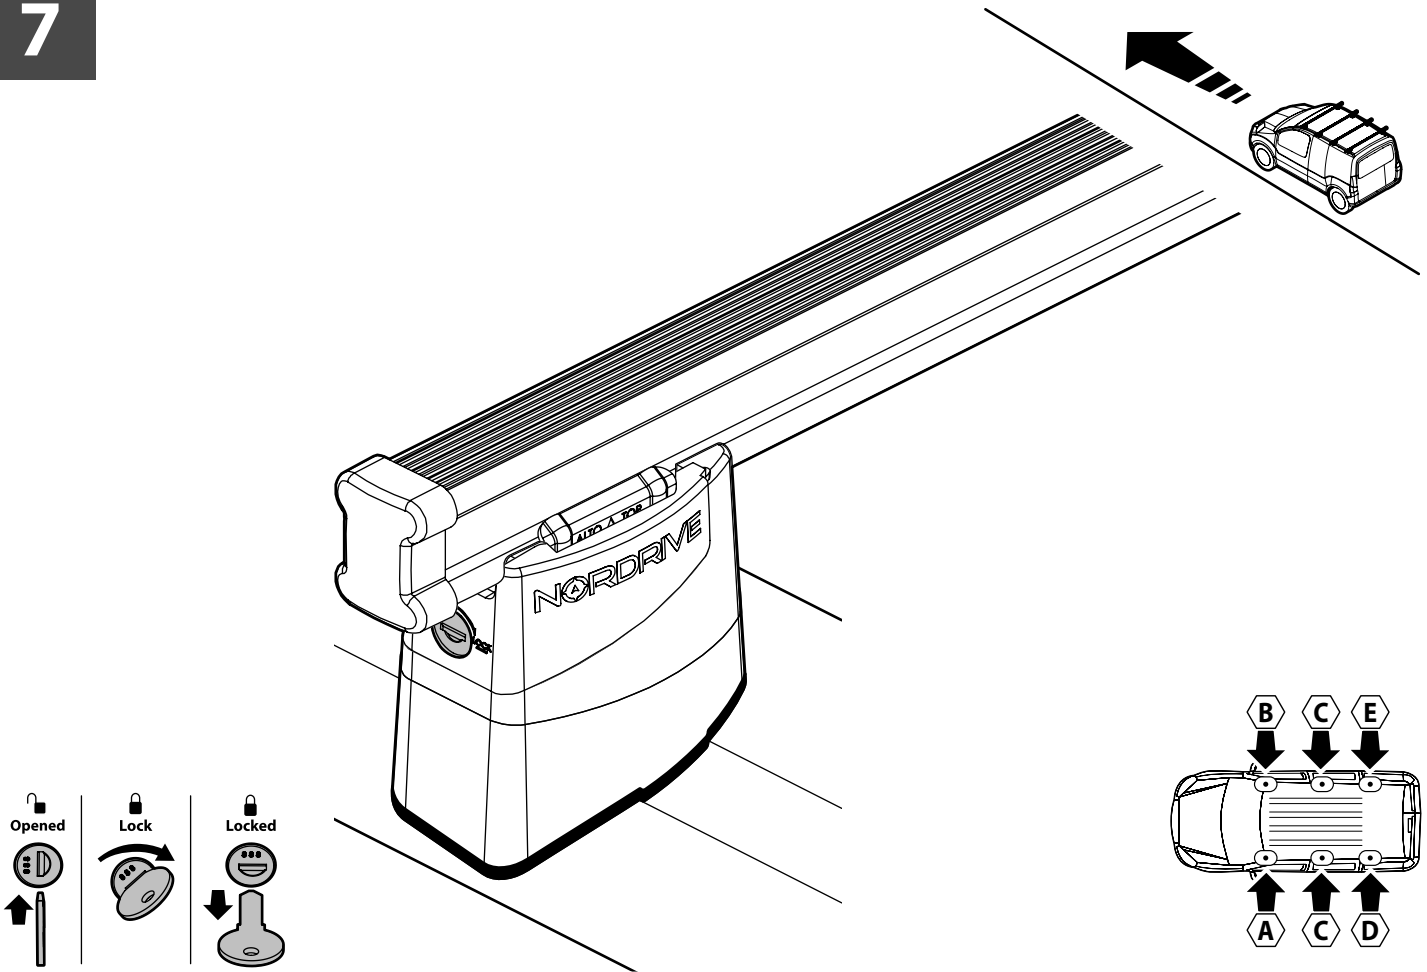


# OPTIONALS PER / FOR / FÜR:

## Kargo series




Acciaio / Steel

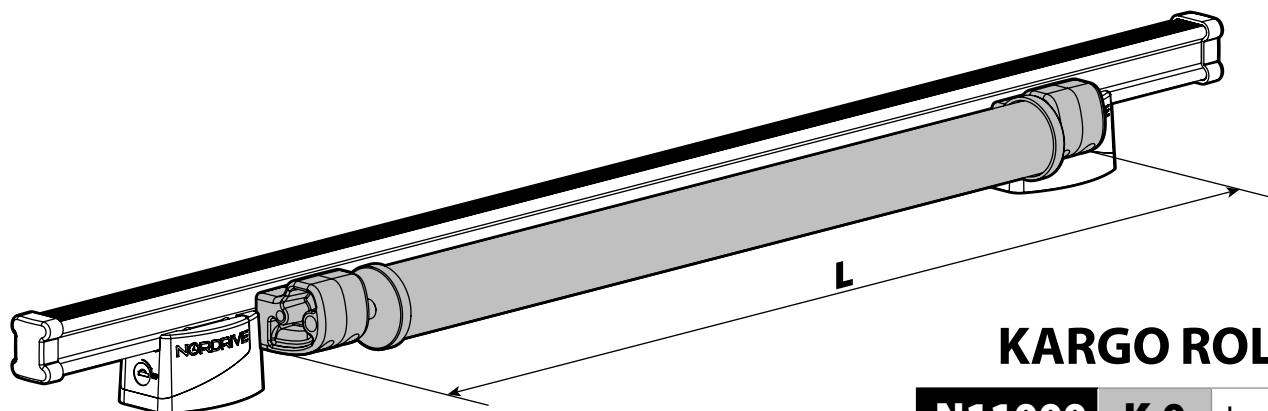


### KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

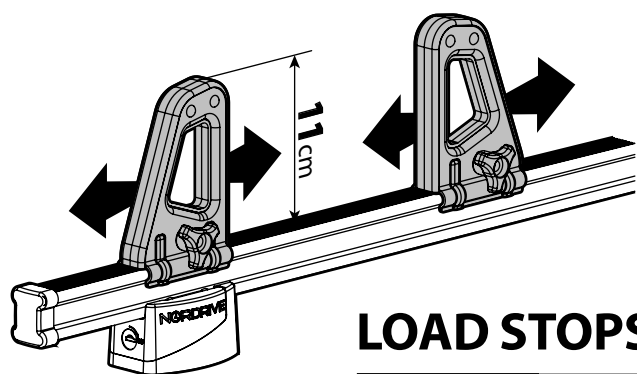


### LOAD STOPS

**N11001** K-1

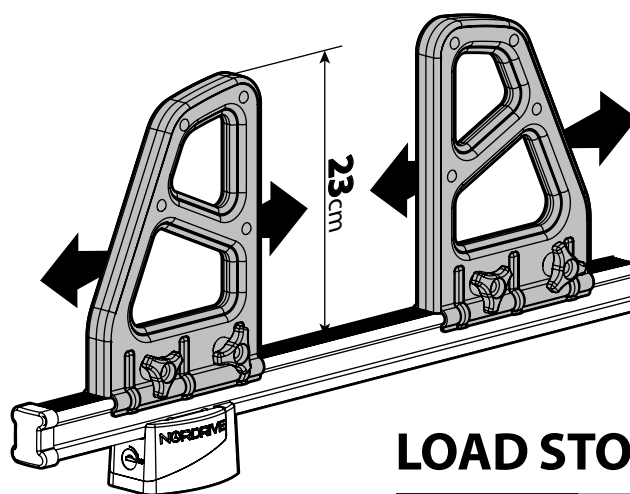

### LOAD STOPS

**N11002** K-2

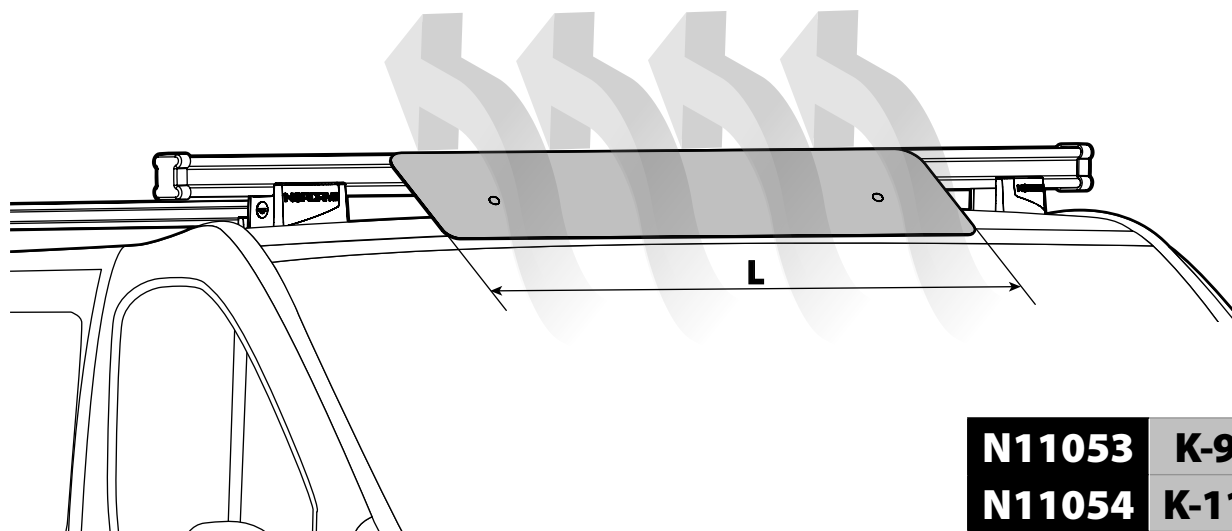


### SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series


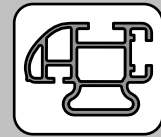


Alluminio / Aluminium

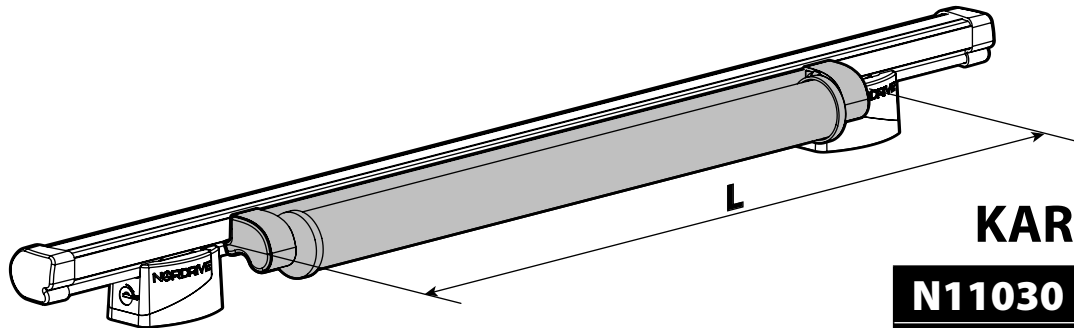


## KARGO ROLLER

<b>N11030</b>	<b>KP-0</b>	L = 64 cm
<b>N11034</b>	<b>KP-7</b>	L = 96 cm

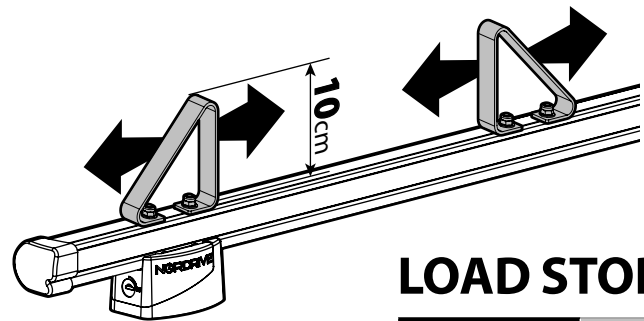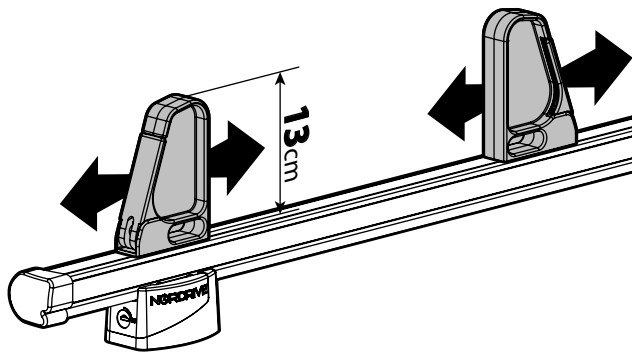


## LOAD STOPS

<b>N11031</b>	<b>KP-1</b>
---------------	-------------

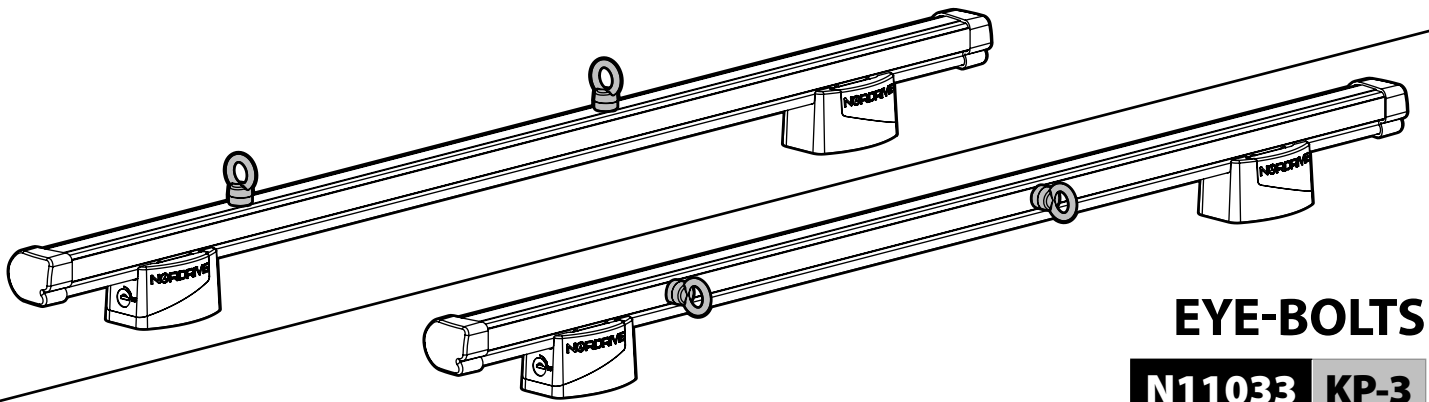

## EYE-BOLTS

<b>N11033</b>	<b>KP-3</b>
---------------	-------------

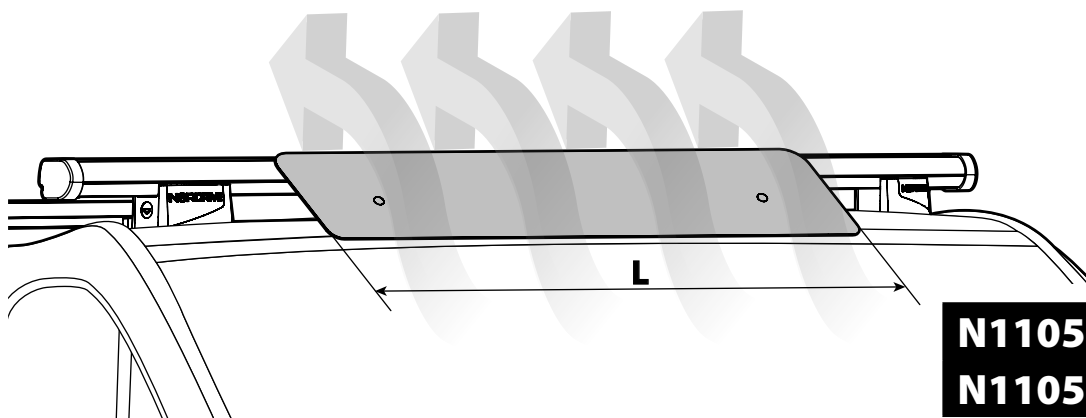

## SPOILER

<b>N11057</b>	<b>KP-9</b>	L = 95 cm
<b>N11058</b>	<b>KP-11</b>	L = 110 cm


**OPTIONALS** PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel


**Kargo-Plus**  
series

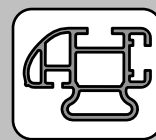

Alluminio / Aluminium



**KARGO-TUBE**

<b>N11050</b>	<b>T200</b>	L = 205 cm
<b>N11051</b>	<b>T300</b>	L = 305 cm
<b>N11052</b>	<b>T400</b>	L = 405 cm

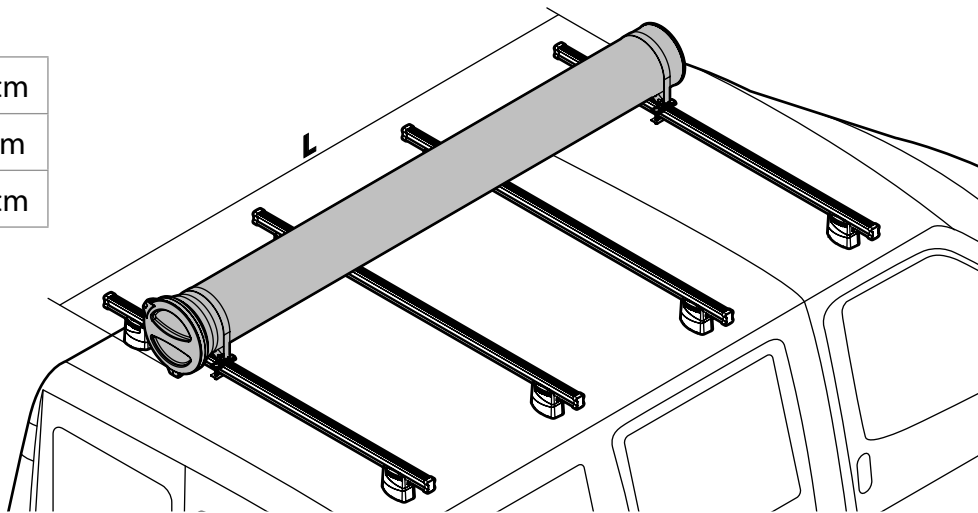


**LADDER HOLDER STRAPS**

**N11065** U-5

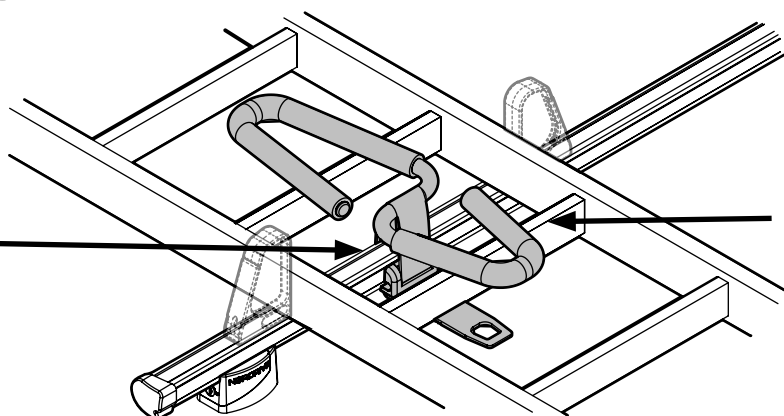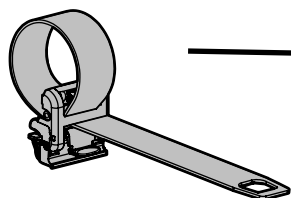


**LADDER STEP ADAPTER**

**N11067** U-6

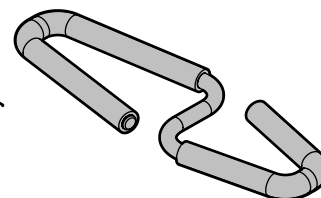

**EXTENSION ROLLER**

<b>N11020</b>	<b>U-0</b>	L = 64 cm
<b>N11021</b>	<b>U-7</b>	L = 96 cm

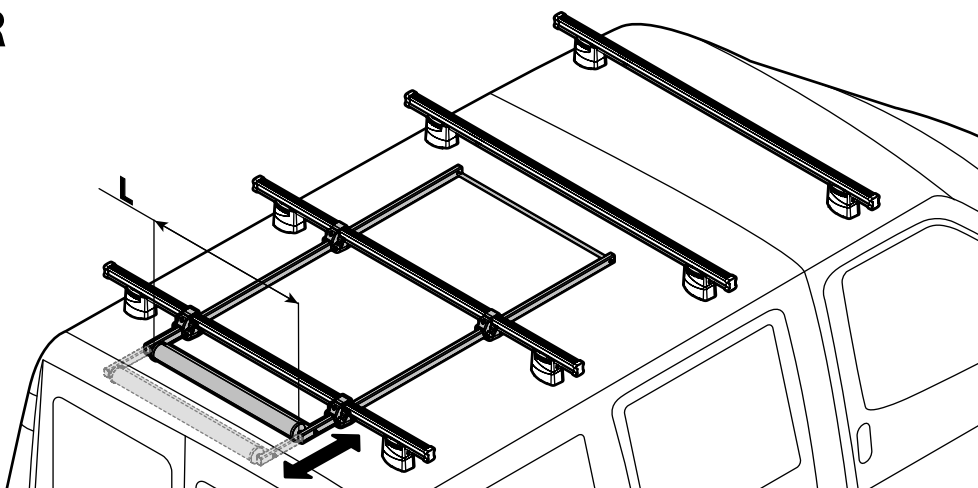

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

**Lot.**

**NORDRIVE®**  
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)