

Art. N30353

CITROËN JUMPY, PEUGEOT EXPERT,
TOYOTA PROACE

04/16 →

TOYOTA PROACE VERSO

05/16 →

CITROËN SPACE TOURER,
PEUGEOT TRAVELLER

06/16 →

OPEL VIVARO, OPEL ZAFIRA LIFE

03/19 →

FIAT SCUDO

01/22 →



L0 H1




L1 H1





L2 H1

3 bars = Art. N30353 x 1




5 bars = Art. N30353 x 1 + Art. N30352 x 1

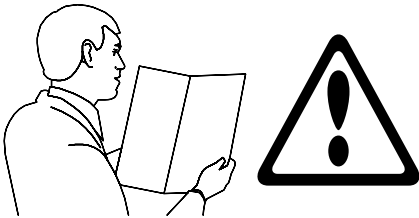


- (I) ISTRUZIONI DI MONTAGGIO
- (GB) FITTING INSTRUCTIONS
- (D) MONTAGEANLEITUNG
- (F) INSTRUCTIONS DE MONTAGE
- (E) INSTRUCCIONES DE MONTAJE
- (P) INSTRUÇÕES DE MONTAGEM
- (NL) MONTAGE-INSTRUCTIES
- (S) MONTERINGSANVISNING
- (FIN) ASENNUSOHJE
- (EST) PAIGALDUSJUHEND
- (AT) STIPRINÁŠANAS INSTRUKCIJA
- (LT) PRITVIRTINIMO INSTRUKCIJOS
- (PL) INSTRUKCJA MONTAŻU
- (RUS) Инструкции по установке
- (CZ) NÁVOD NA MONTÁŽ
- (SK) NÁVOD NA MONTÁŽ
- (SLO) NAVODILA ZA PRITRJEVANJE
- (HR) UPUTA ZA SASTAVLJANJE
- (H) A FELSZERELÉS MÓDJA
- (GR) Οδηγίες συναρμολόγησης
- (TR) MONTAJ TALIMATLARL
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (SRB) UPUTSTVA ZA MONTAŽU

KIT x6

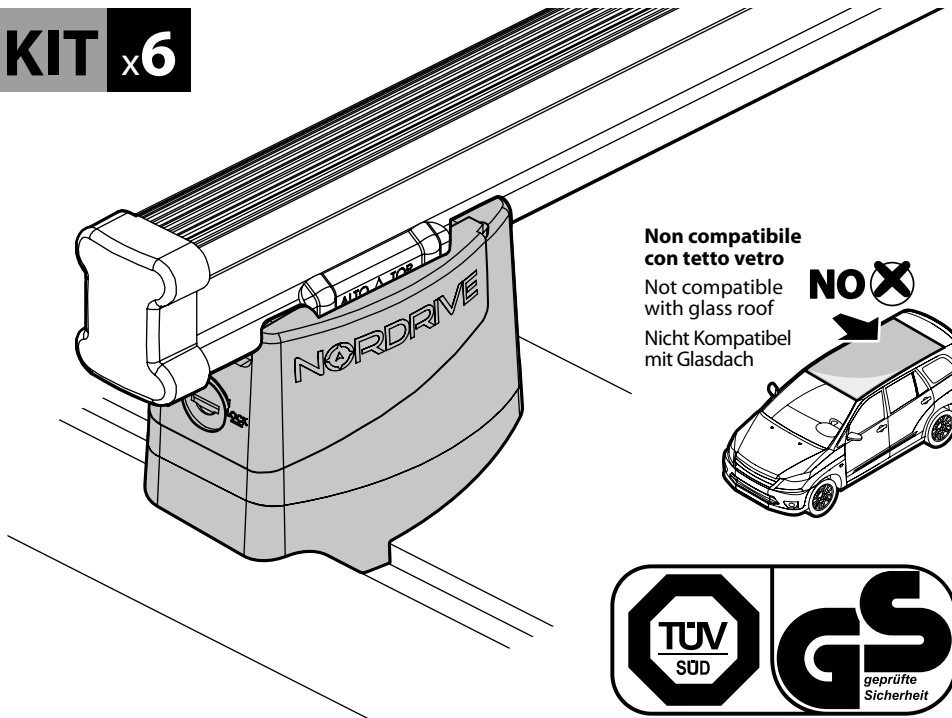


Non compatibile
con tetto vetro
Not compatible
with glass roof
Nicht Kompatibel
mit Glasdach

NO

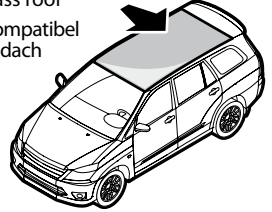

- (I) ADATTO PER
- (GB) SUITABLE FOR
- (F) INDIQUÉ POUR
- (D) GEEIGNET FÜR
- (E) ADECUADA PARA


NORDRIVE KARGO SERIES

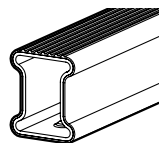


Kargo
ACCIAIO
Steel

- (I) BARRE KARGO
- (GB) KARGO BARS
- (F) BARRES KARGO
- (D) DACH-LASTENTRÄGER KARGO
- (E) BARRES KARGO

150cm

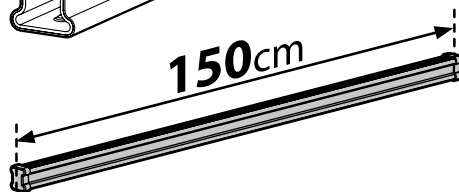


Art. N10010 x3

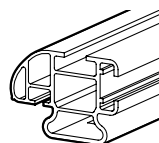


Kargo-Plus
ALLUMINIO
Aluminium

- (I) BARRE KARGO-PLUS
- (GB) KARGO-PLUS BARS
- (F) BARRES KARGO-PLUS
- (D) DACH-LASTENTRÄGER KARGO-PLUS
- (E) BARRES KARGO-PLUS

150cm

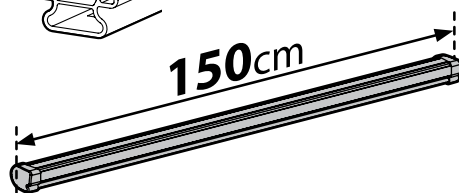


Art. N10040 x3

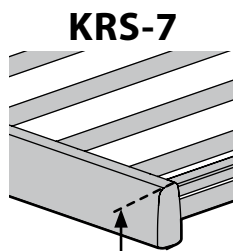

KRS-7

7cm

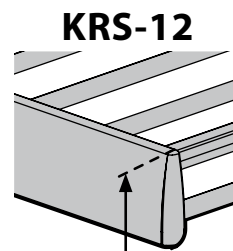


KRS-12

12cm

- (I) CESTE PORTATUTTO KRS-7 / KRS-12
- (GB) KRS-7 / KRS-12 VAN ROOF RACKS
- (F) GALERIE KRS-7 / KRS-12
- (D) DACHKÖRBEIN KRS-7 / KRS-12
- (E) BACAS KRS-7 / KRS-12

NORDRIVE®










TRANSPORT SOLUTIONS












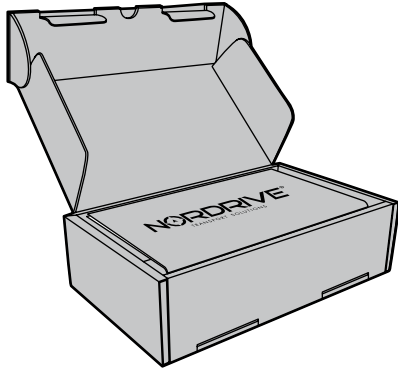





NORDRIVE[®]

TRANSPORT SOLUTIONS

Art. **N30353**

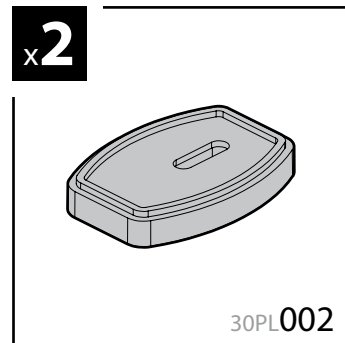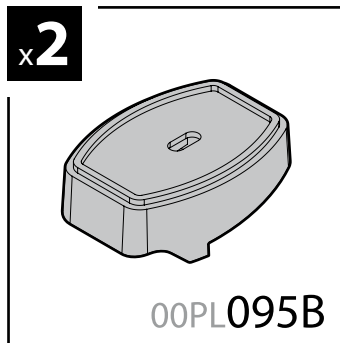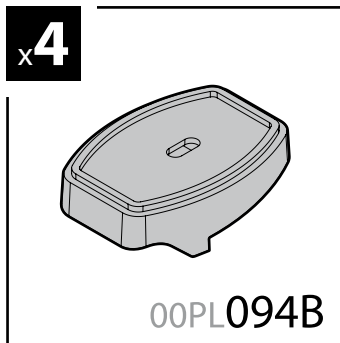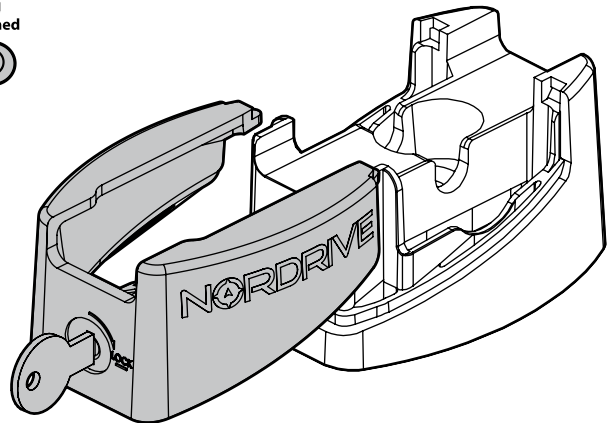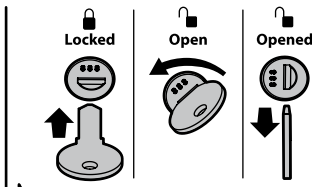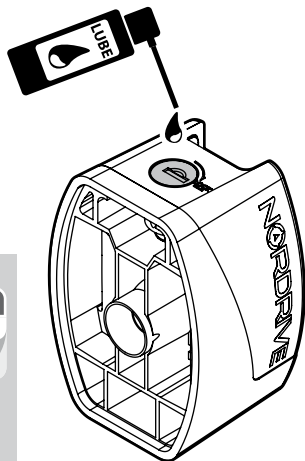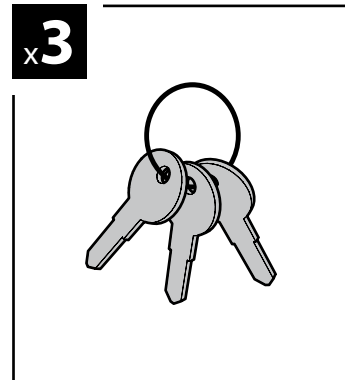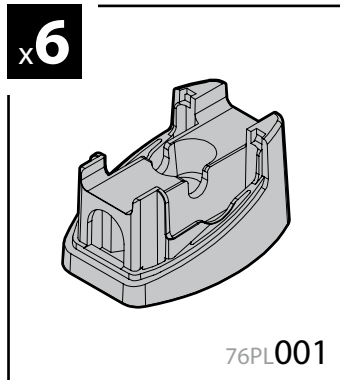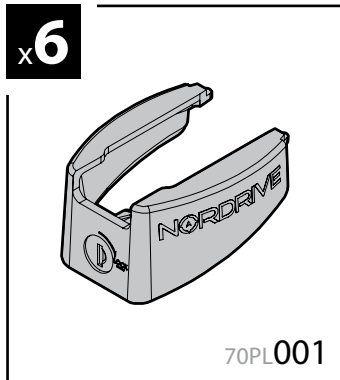

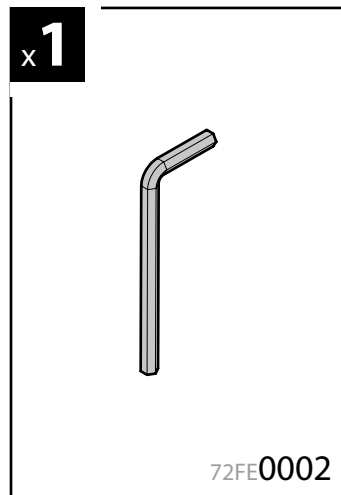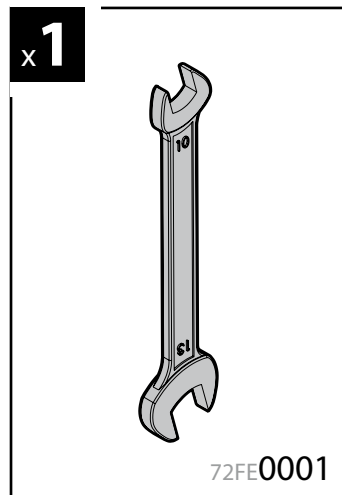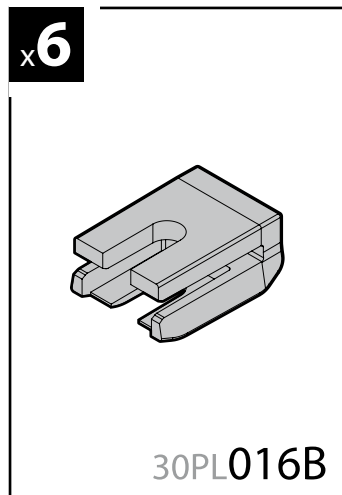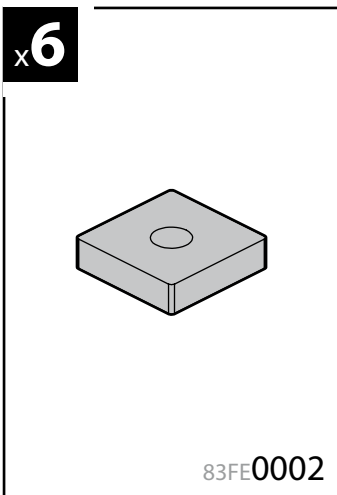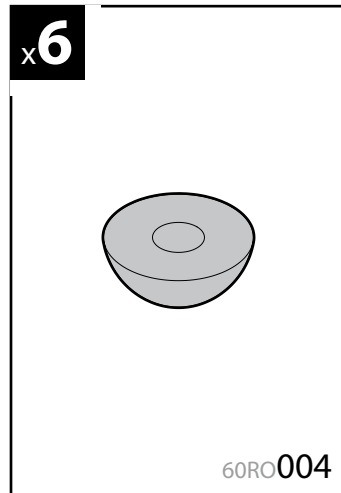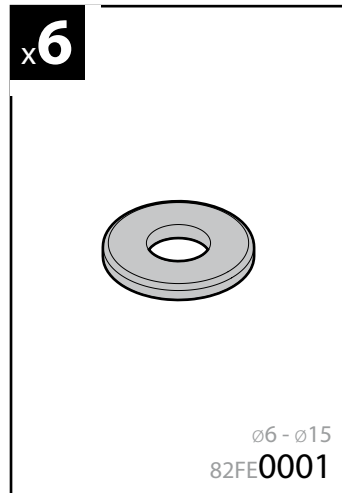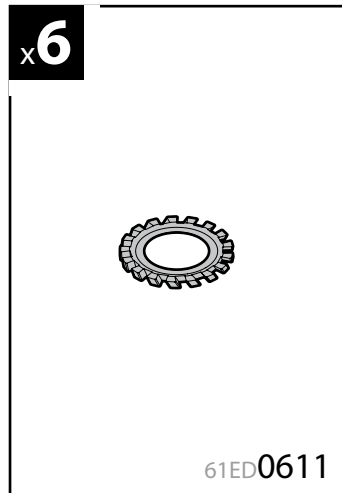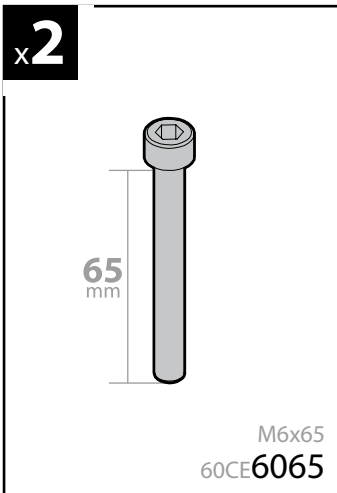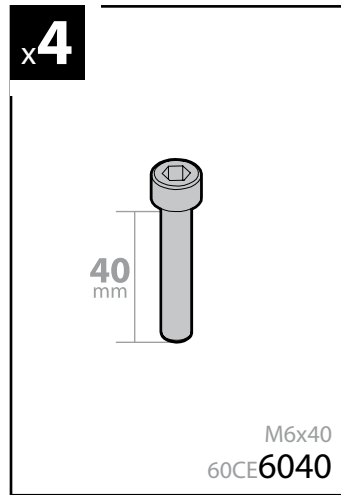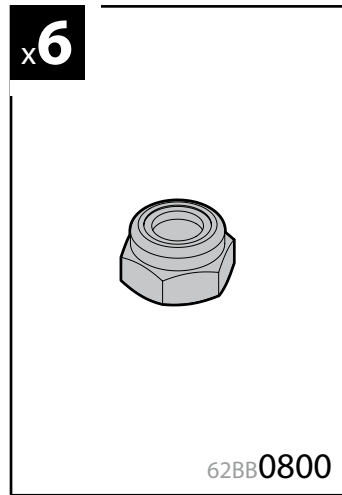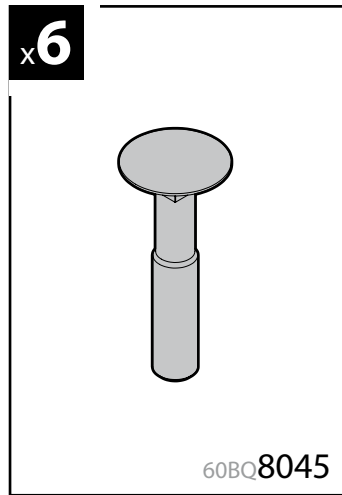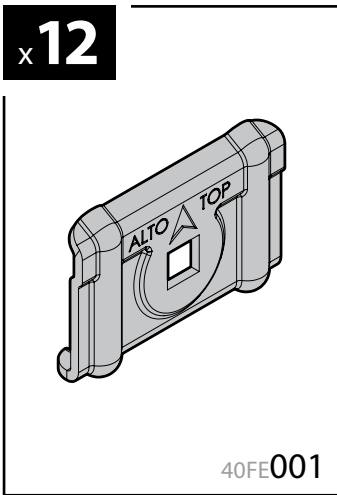



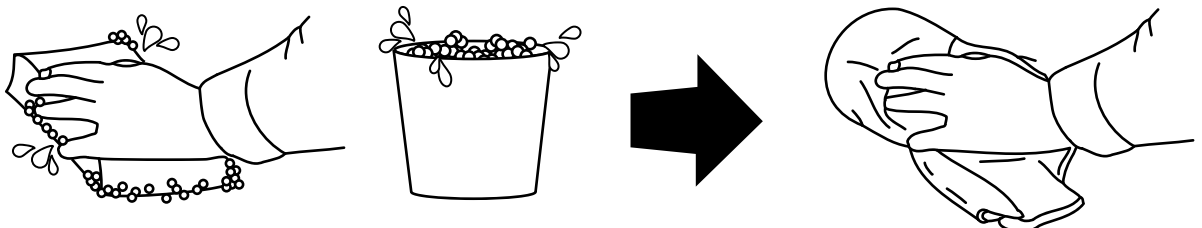
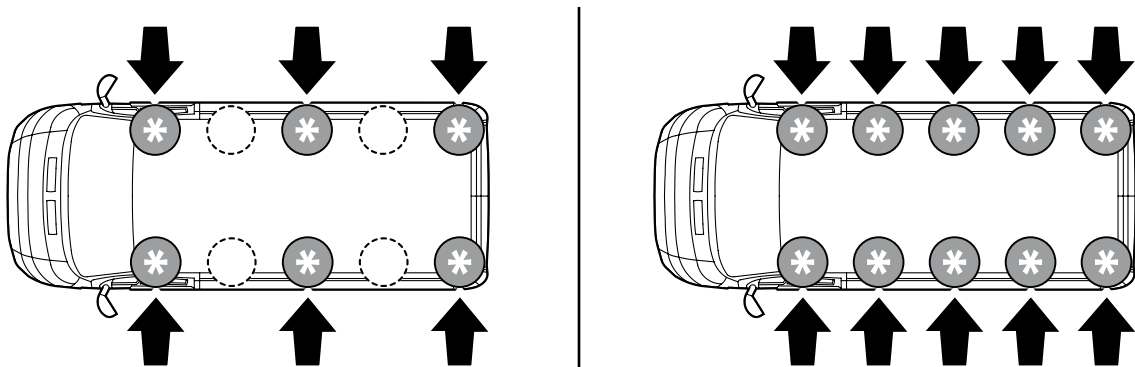
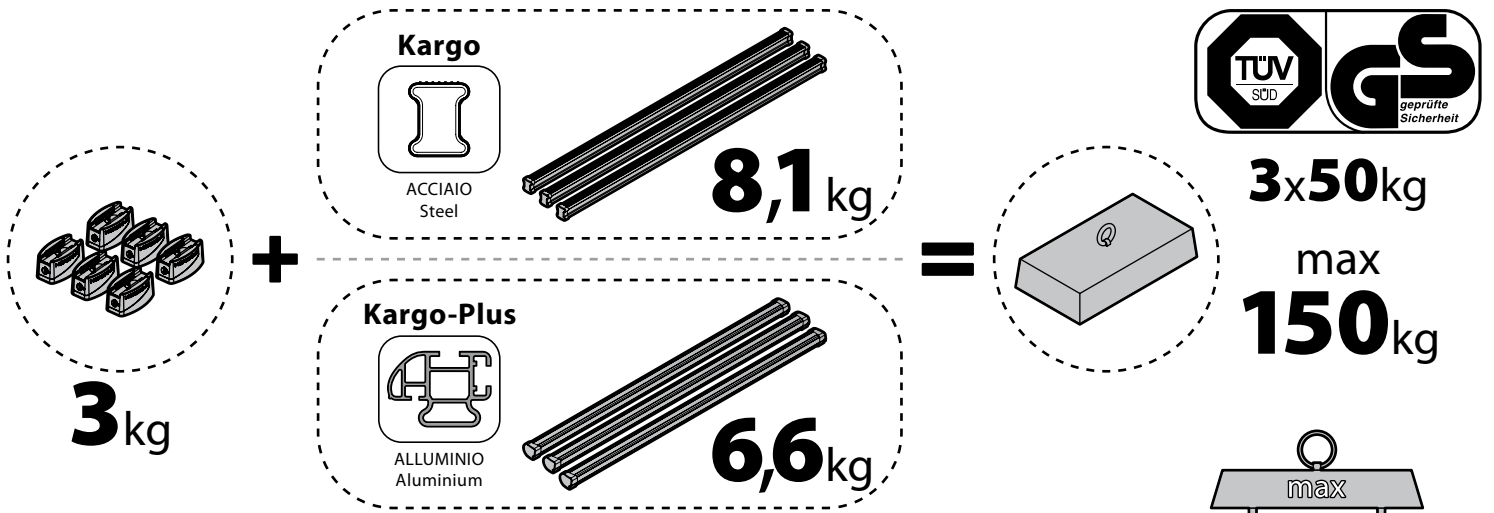


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRIŅĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγία συναρμολόγησης
 (TR) MONTAJ TALIMATLARI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

1

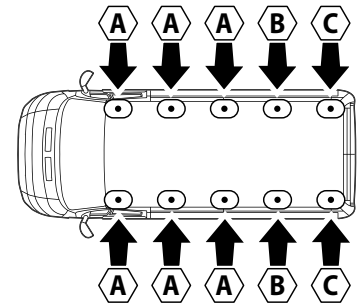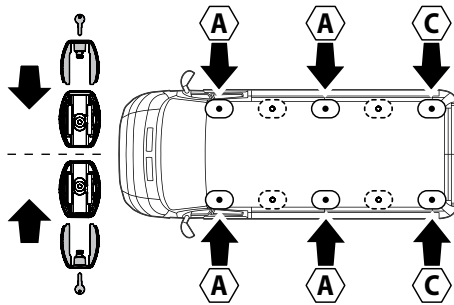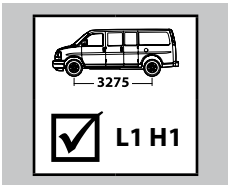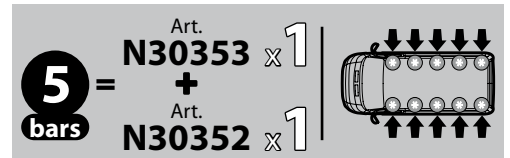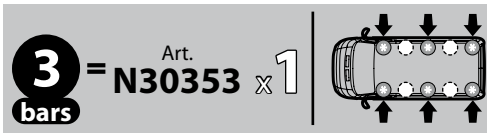


2

A

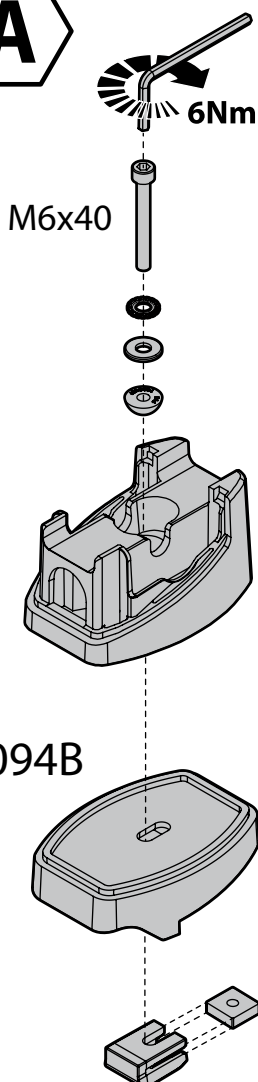


2

B

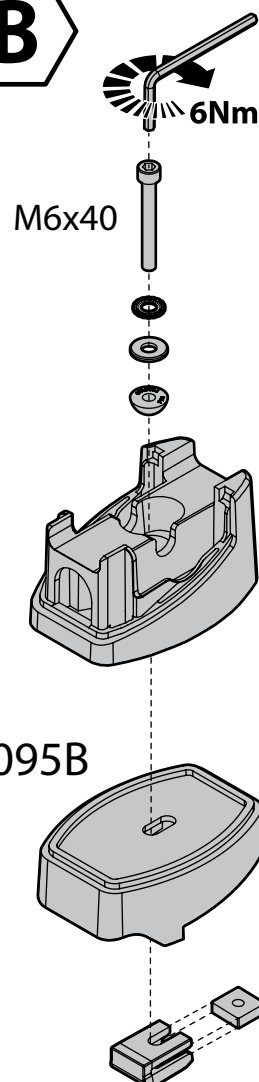


2


C

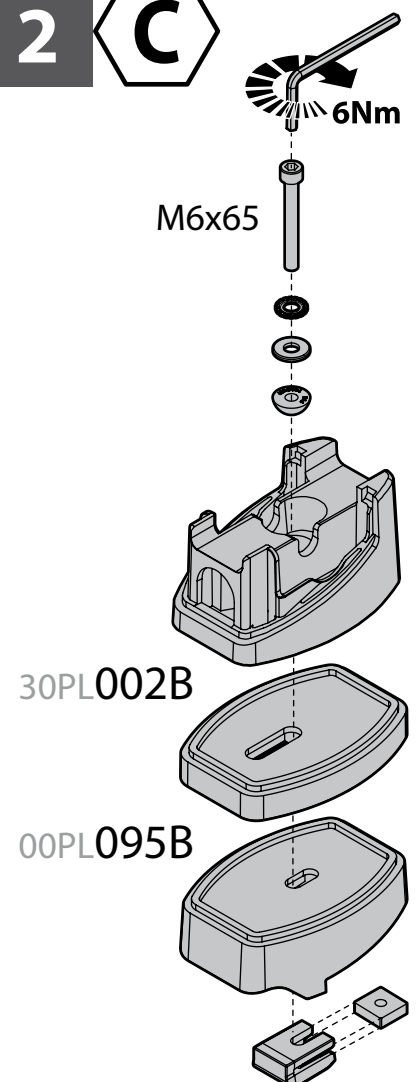

3

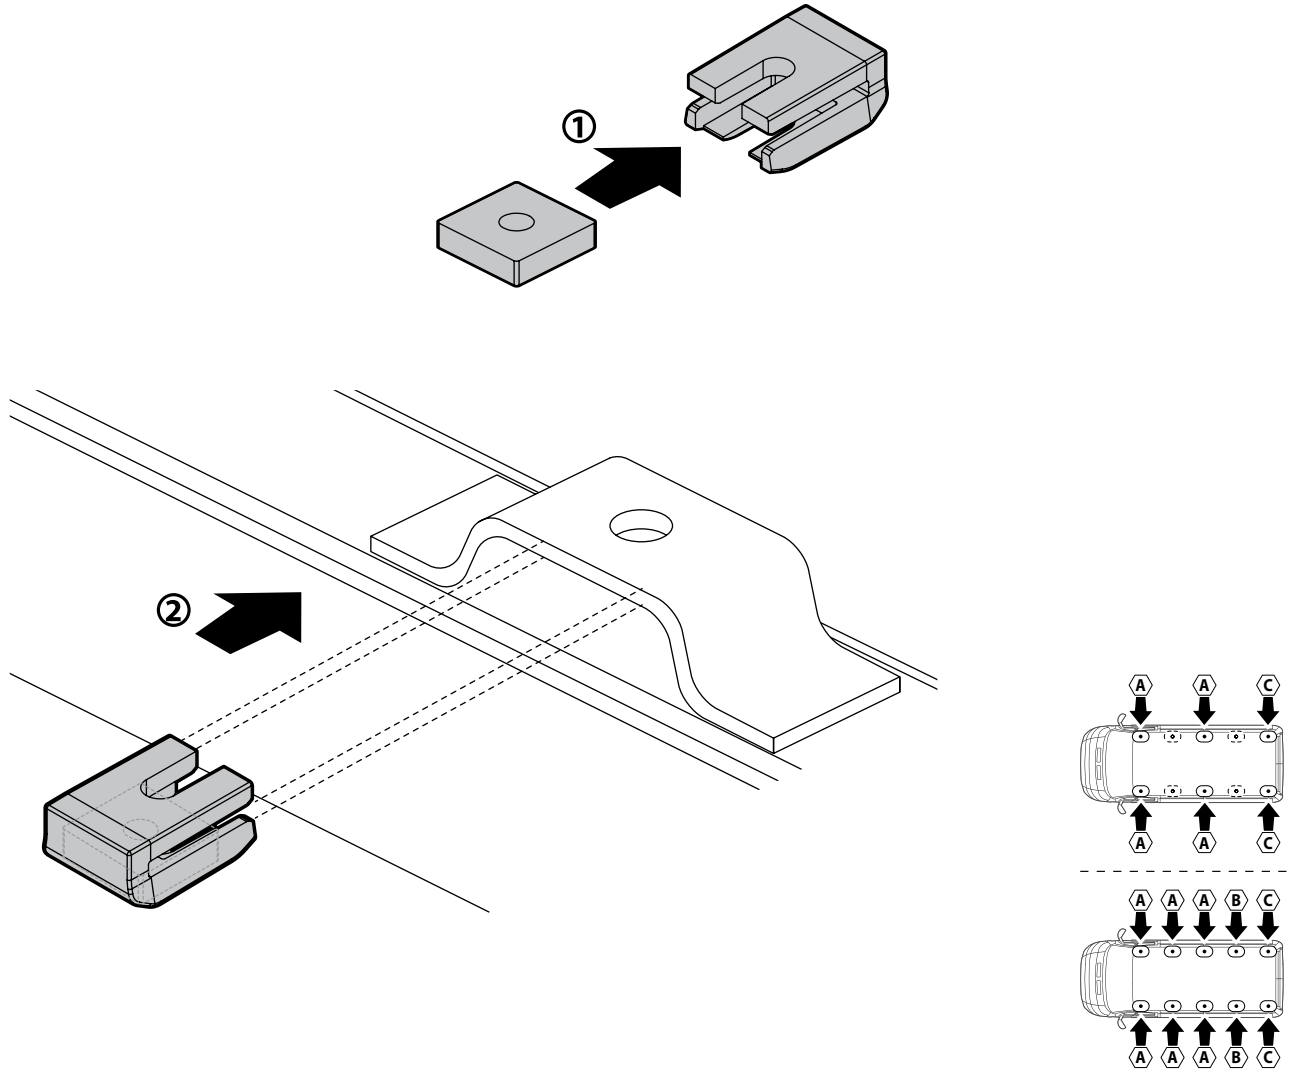

4

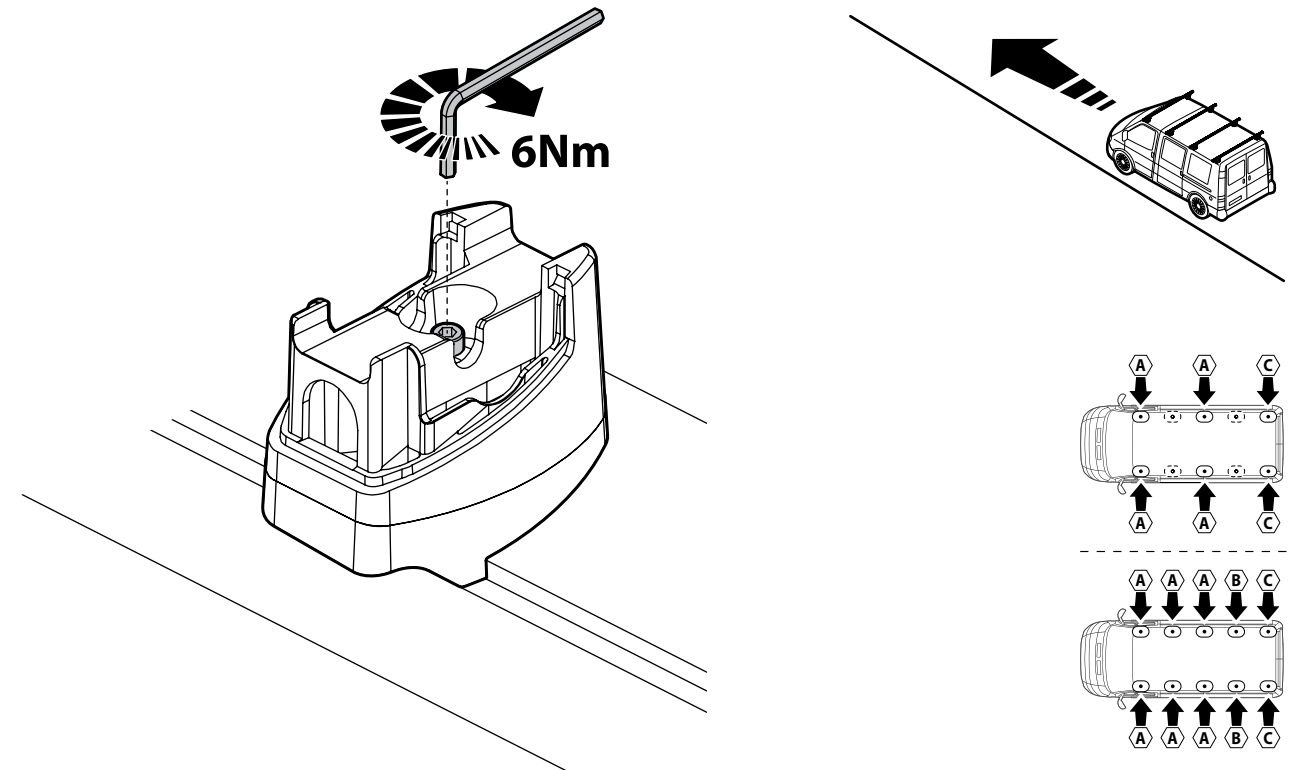



ATTENZIONE WARNING




A

Kargo



ACCIAIO
Steel

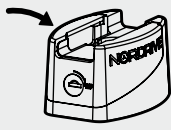


MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

B

Kargo-Plus






ALLUMINIO
Aluminium



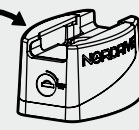


MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE


OK ✓

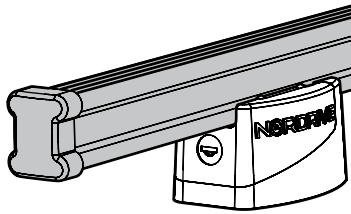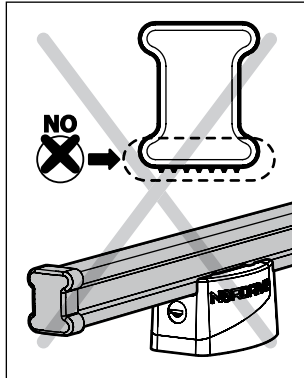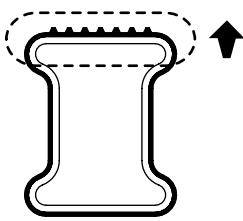



OK ✓

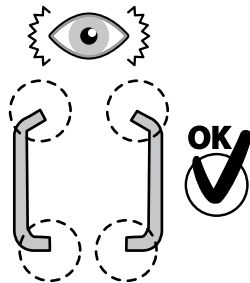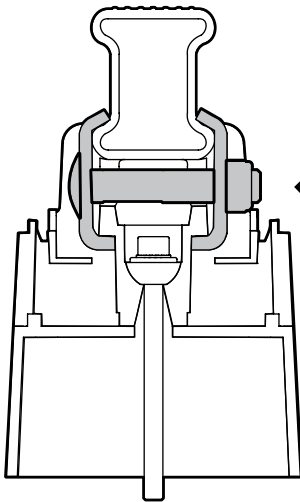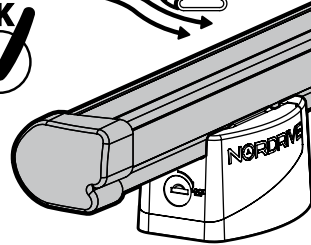


OK ✓

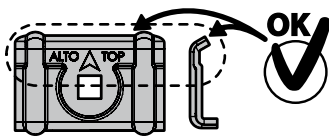



OK ✓

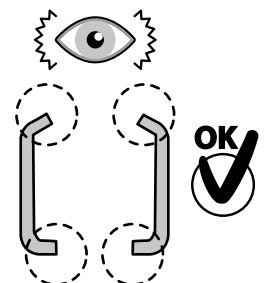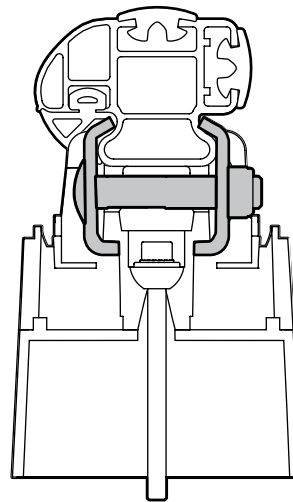

OK ✓

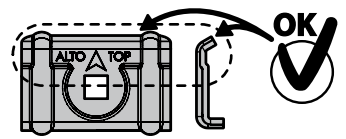


OK ✓

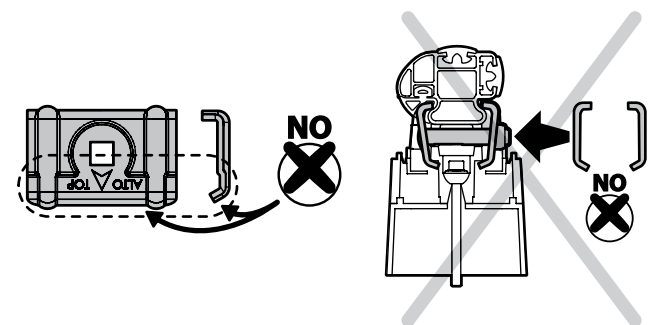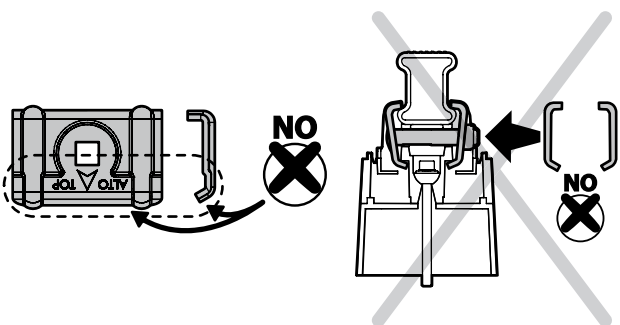


5

A

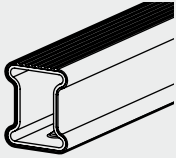

Kargo



ACCIAIO
Steel


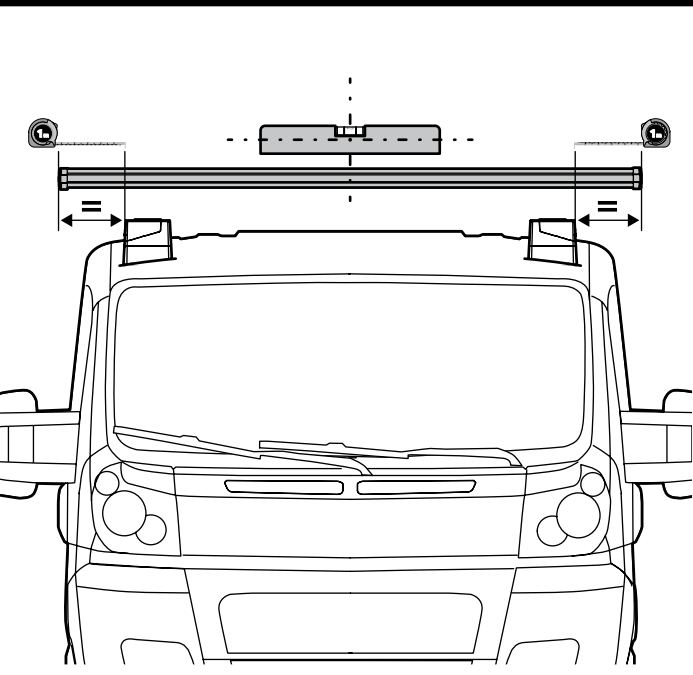



Diagram showing the Kargo steel bar being installed on a vehicle roof. The bar is positioned across the roof rails, and the diagram includes dimension lines and arrows indicating the correct placement and alignment.

B



Kargo-Plus

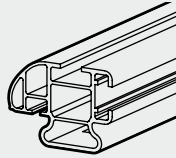

ALLUMINIO
Aluminium

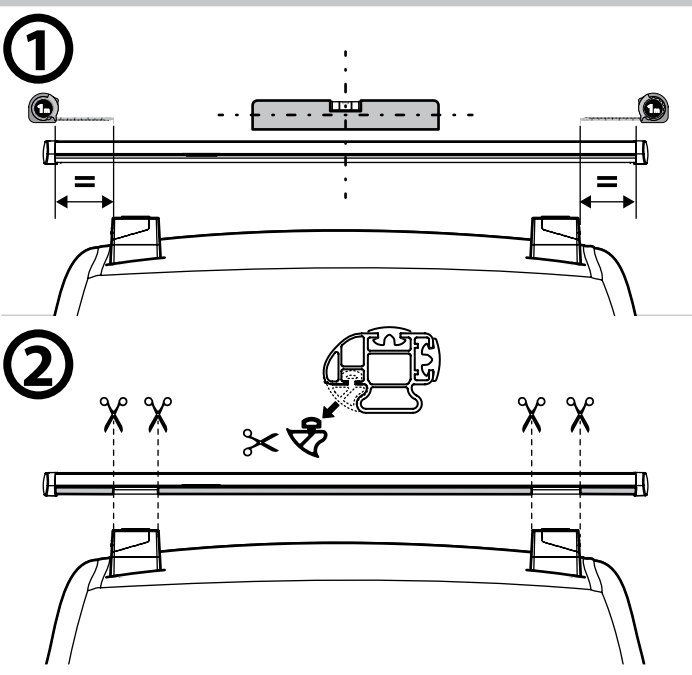


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. Step 1 shows the bar being placed on the roof rails. Step 2 shows the bar being secured with clips, with scissors icons indicating where to cut the clips. The diagram includes dimension lines and arrows indicating the correct placement and alignment.

6

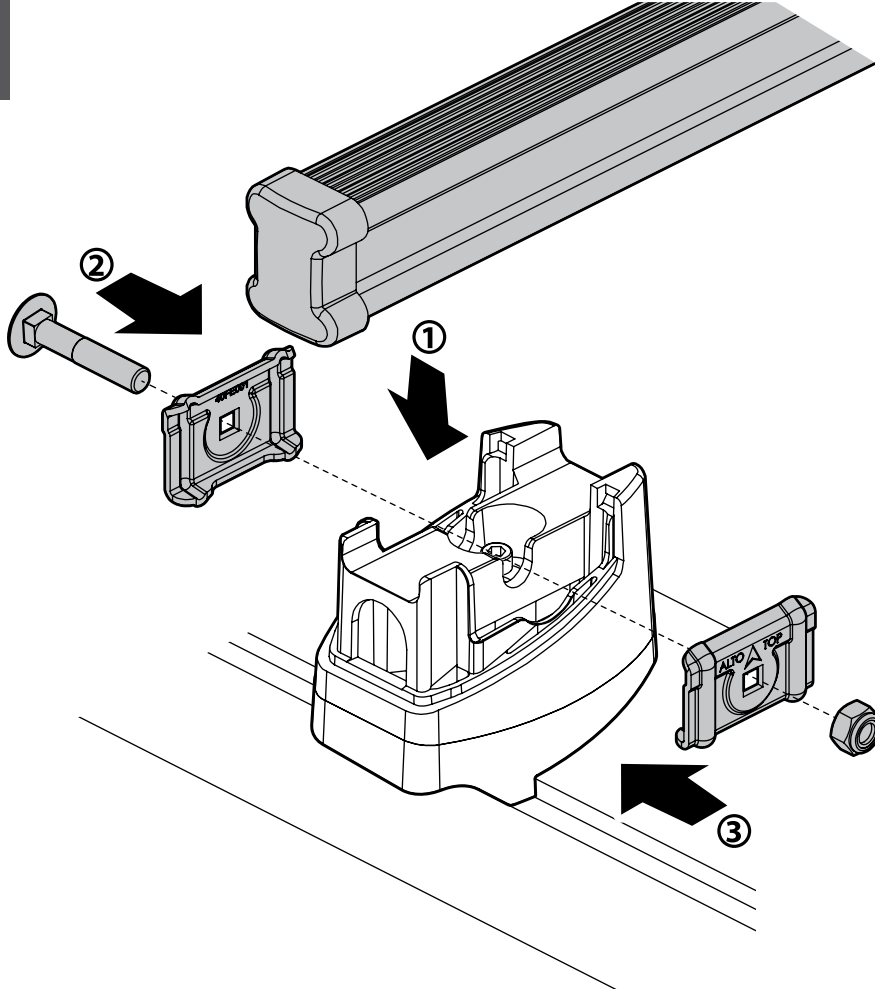


Diagram showing the Kargo bar being attached to a vehicle roof rack. Step 1 shows the bar being inserted into the rack. Step 2 shows the bar being secured with a bolt. Step 3 shows the bar being secured with a nut. The diagram includes arrows and numbers indicating the correct sequence of steps.



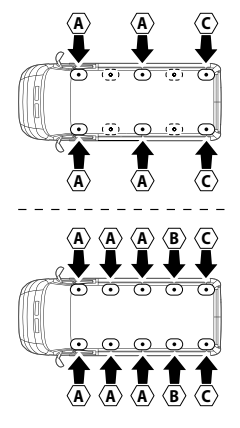


Diagram showing the Kargo bar being attached to a vehicle roof rack. The diagram includes arrows and letters (A, B, C) indicating the correct sequence of steps for attaching the bar to the rack.

7

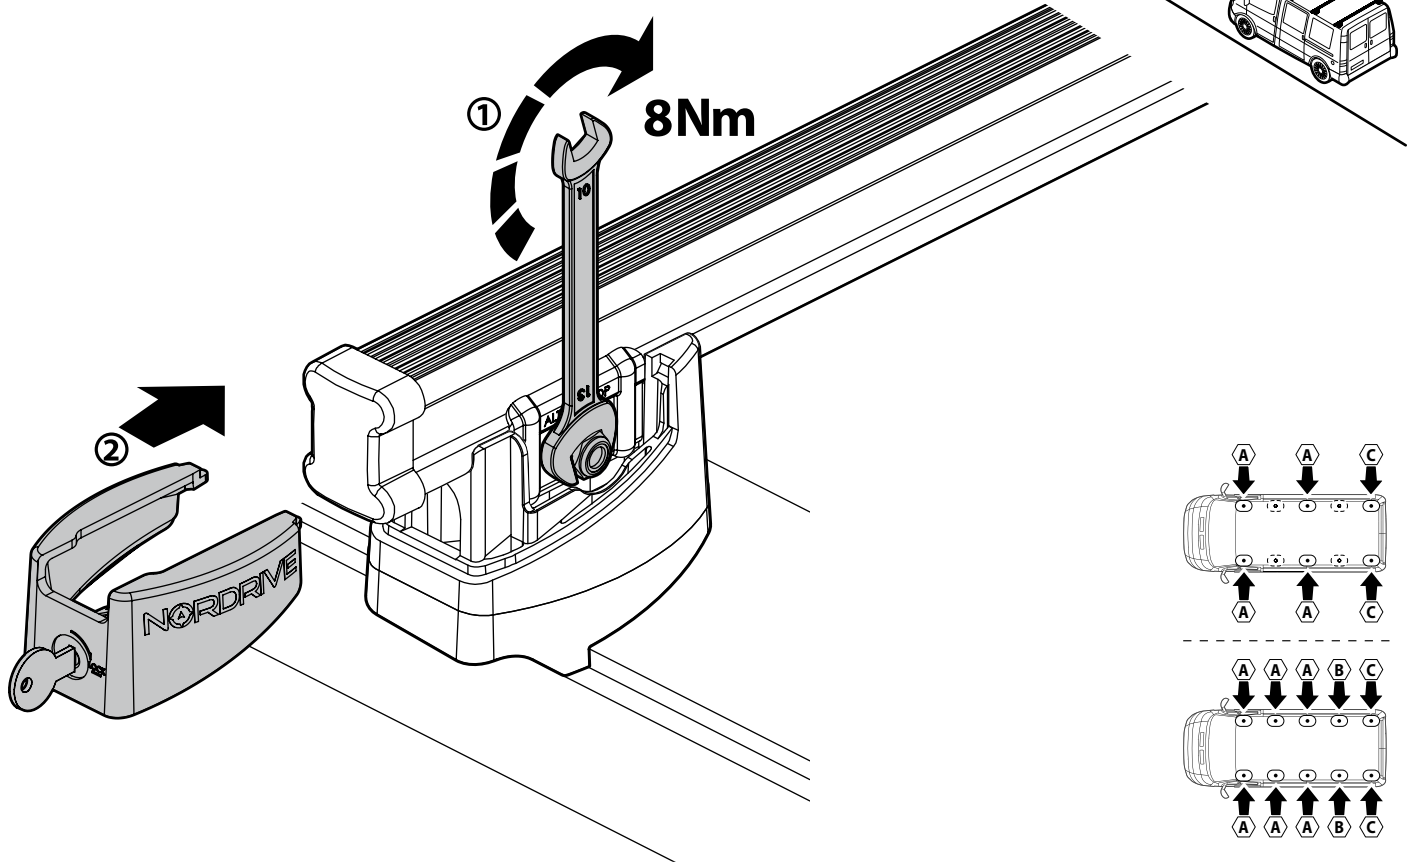


8

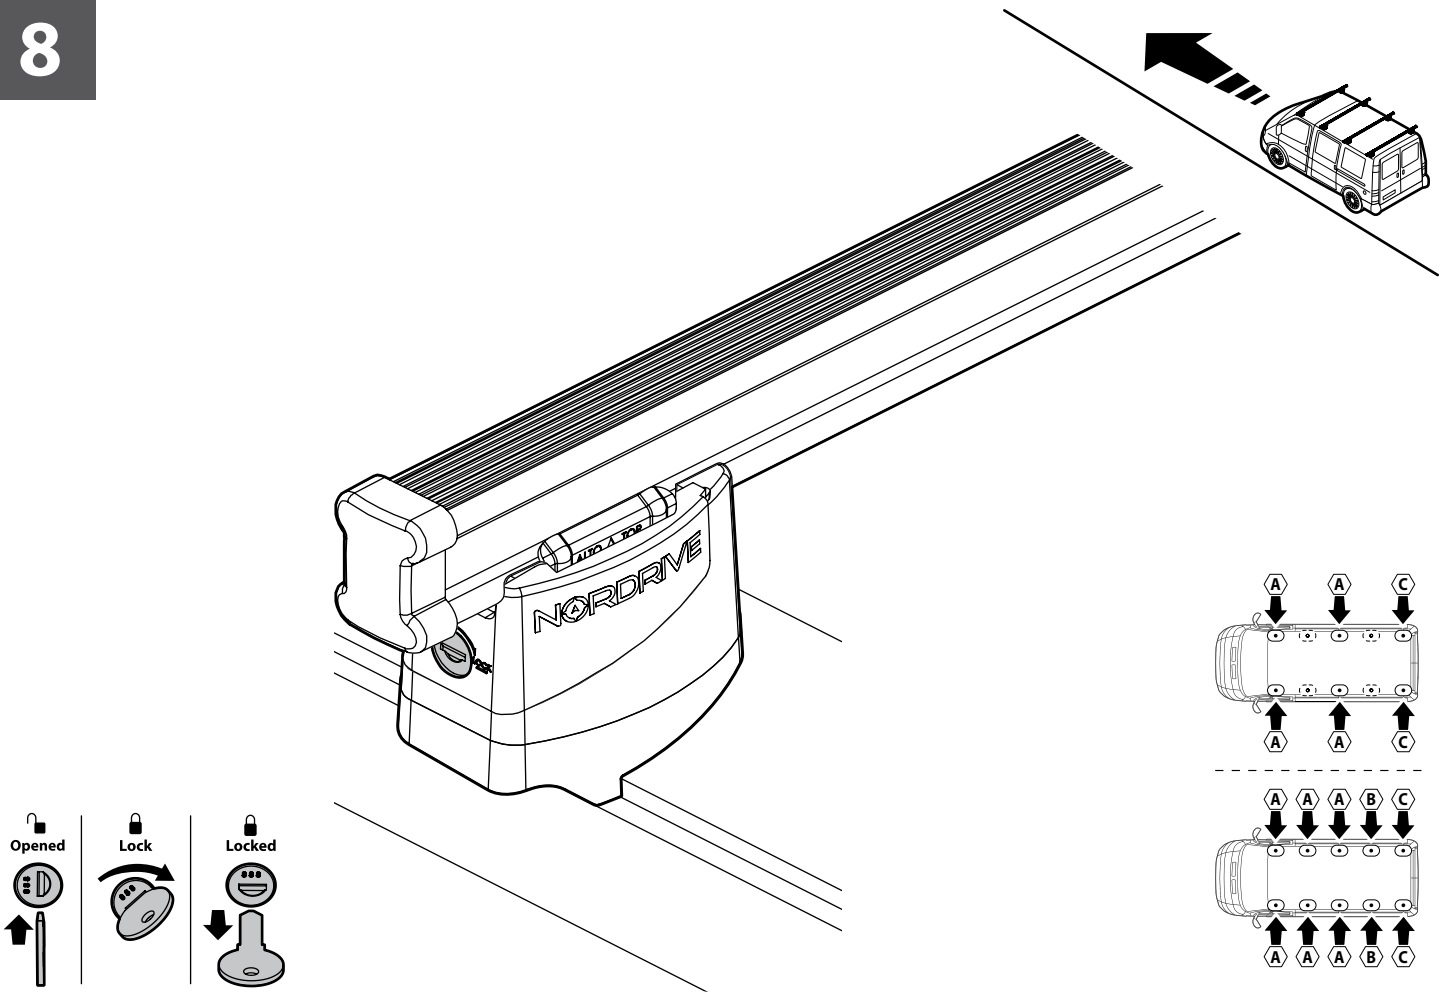

Kargo series




Acciaio / Steel

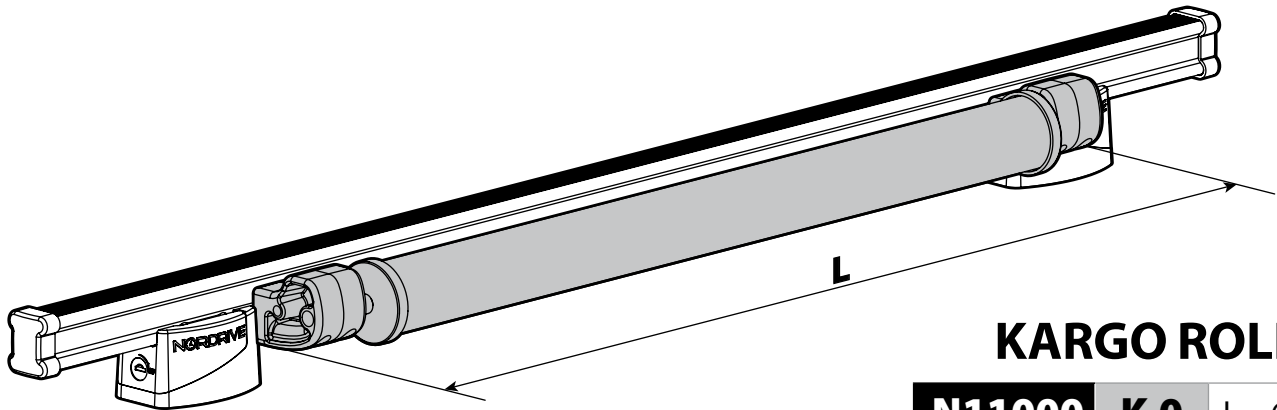


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

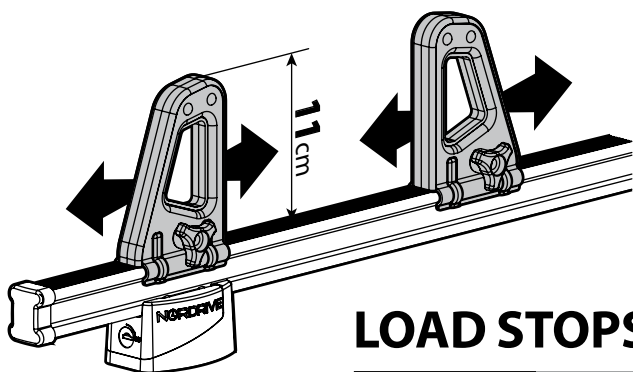


LOAD STOPS

N11001 K-1

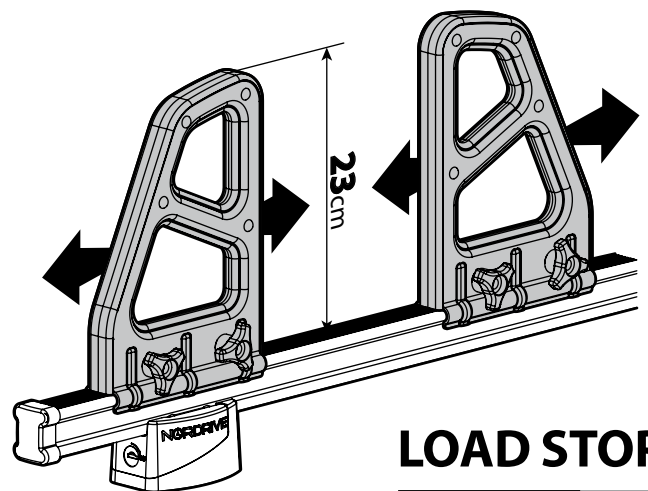

LOAD STOPS

N11002 K-2

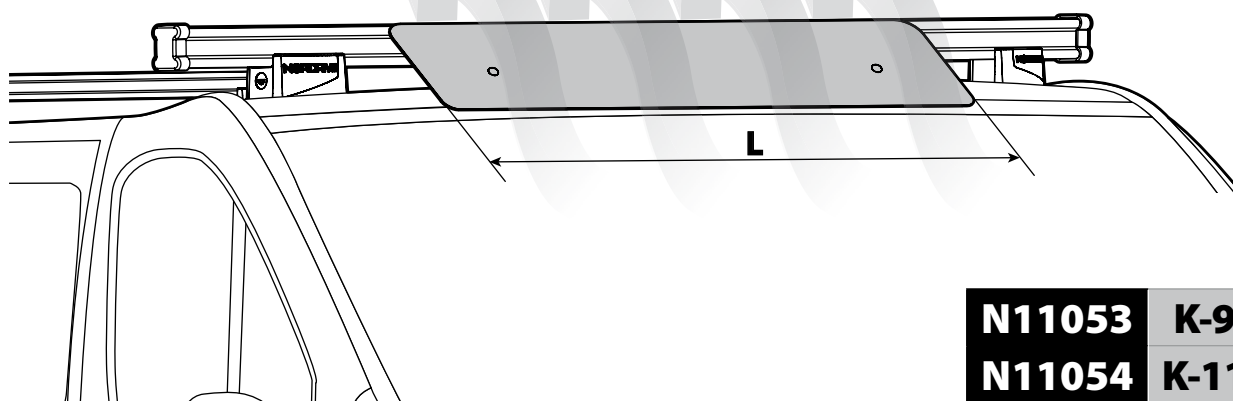


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series


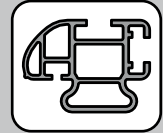


Alluminio / Aluminium

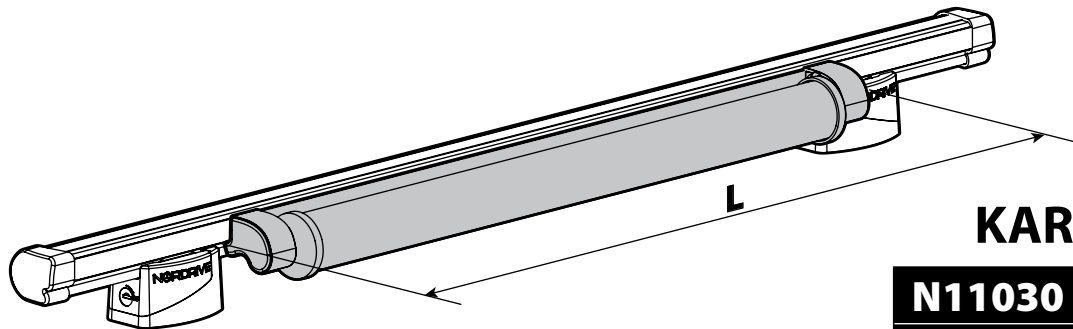


KARGO ROLLER

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

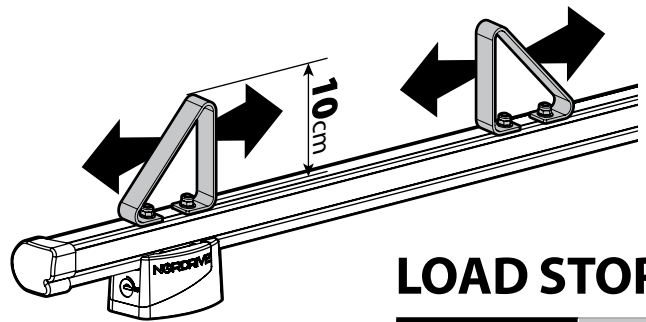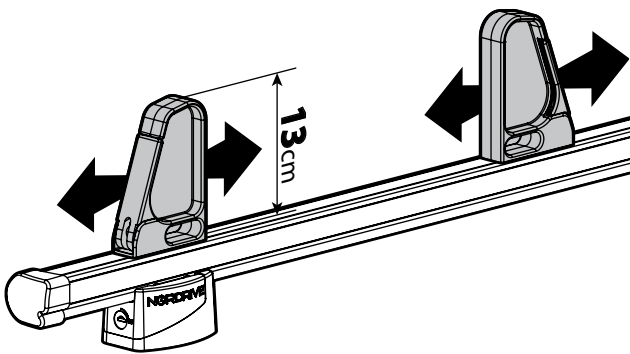


LOAD STOPS

N11031 KP-1

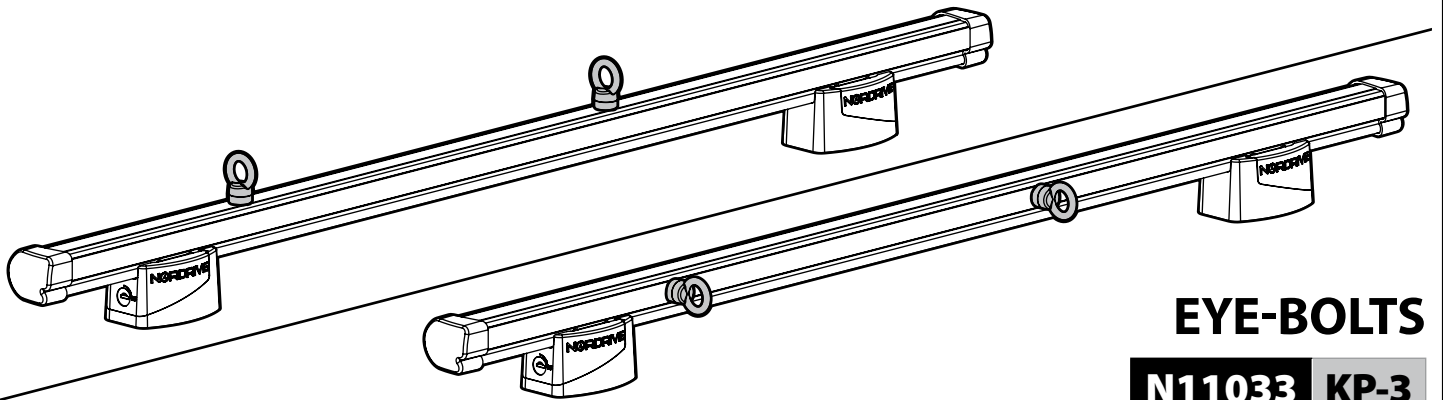

EYE-BOLTS

N11033 KP-3

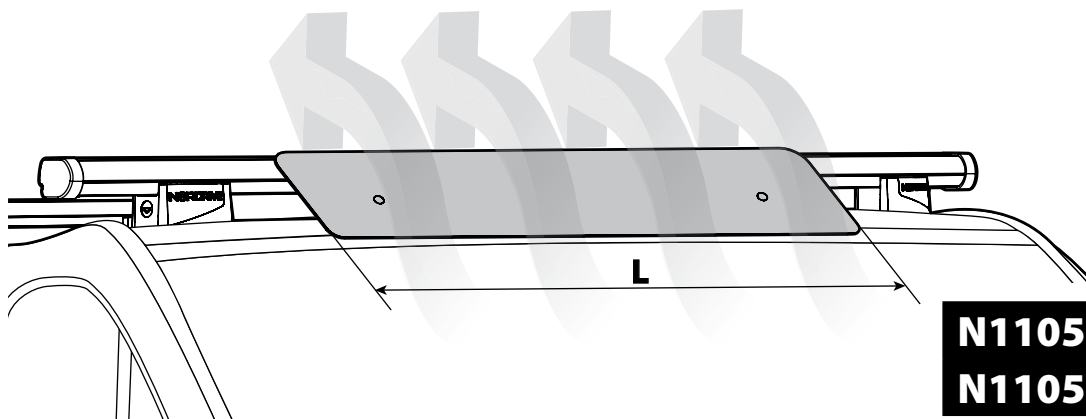

SPOILER

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series



Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

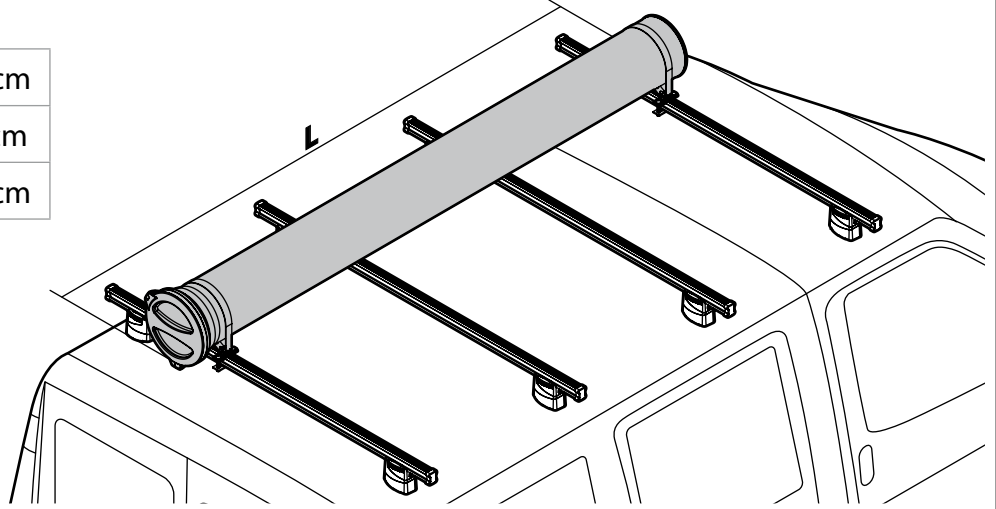


LADDER HOLDER STRAPS

N11065 U-5

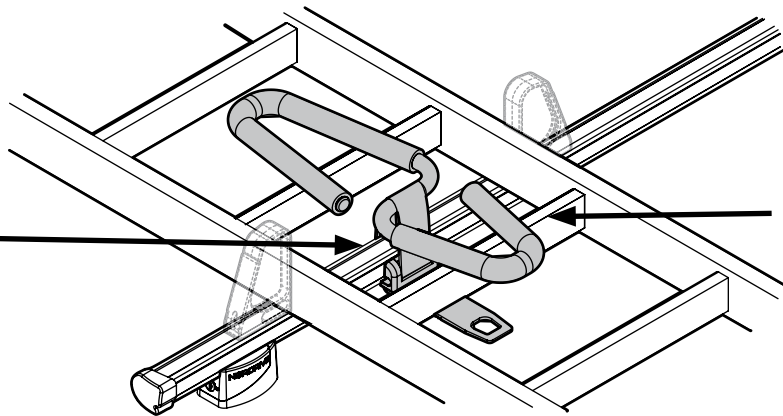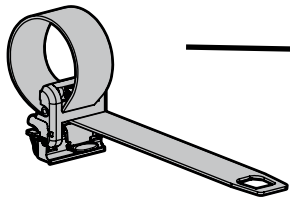


LADDER STEP ADAPTER

N11067 U-6

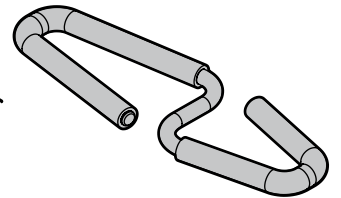

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

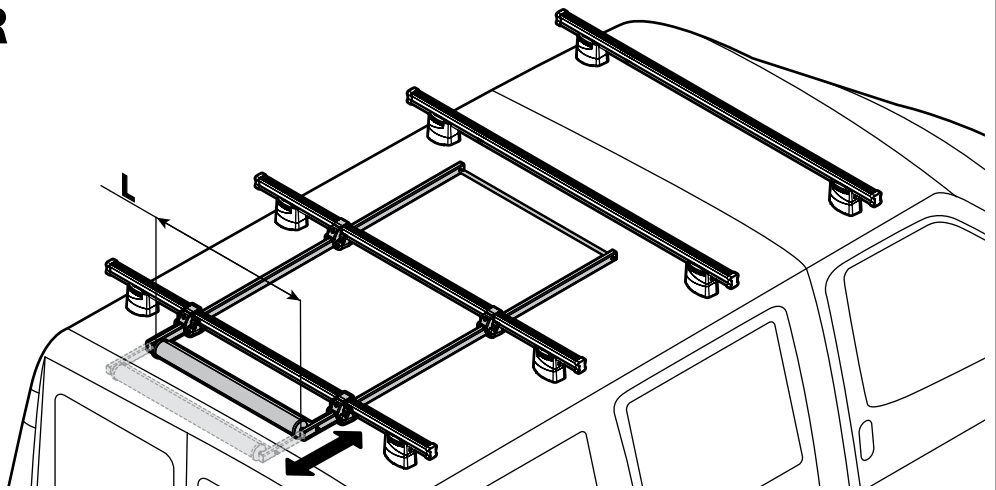

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it