

# Art. N30363

**CITROËN BERLINGO** (no railing)

09/18➔

**CITROËN BERLINGO VAN** (no railing)

06/18➔

**OPEL COMBO CARGO** (no railing)

09/18➔

**OPEL COMBO LIFE** (no railing)

01/18➔

**PEUGEOT PARTNER** (no railing)

09/18➔

**PEUGEOT RIFTER** (no railing)

08/18➔

**TOYOTA PROACE CITY** (no railing)

05/20➔

**TOYOTA PROACE CITY VERSO** (no railing)

06/19➔




✓ L1 = 4403mm




✓ L2 = 4753mm

## KIT x6

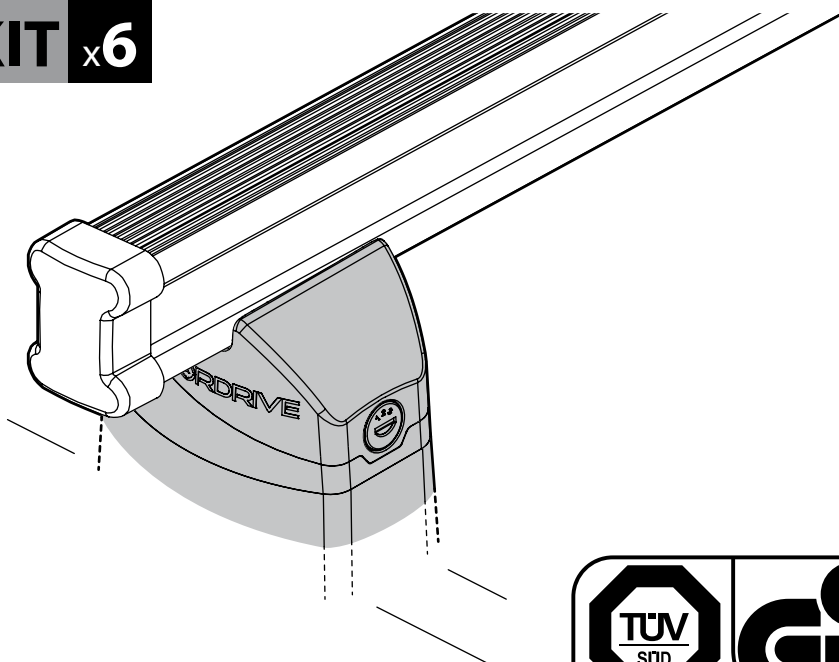


- ⓘ ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

### NORDRIVE KARGO SERIES

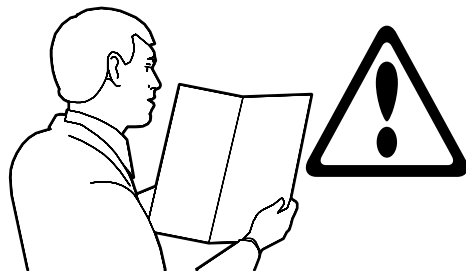

- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓘ MONTERINGSANVISNING
- Ⓙ ASENNUSOHJE
- Ⓚ PAIGALDUSJUHEND
- Ⓛ STIPRINĀŠANAS INSTRUKCIJA
- Ⓜ PRITVIRTINIMO INSTRUKCIJOS
- Ⓝ INSTRUKCJA MONTAŻU
- Ⓟ Инструкции по установке
- Ⓡ NÁVOD NA MONTÁŽ
- Ⓢ NÁVOD NA MONTÁŽ
- Ⓣ NAVODILA ZA PRITRJEVANJE
- Ⓡ UPUTA ZA SASTAVLJANJE
- Ⓜ A FELSZERELÉS MÓDJA
- Ⓝ Οδηγίες συναρμολόγησης
- Ⓡ MONTAJ TALIMATLARL
- Ⓝ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓡ UPUTSTVA ZA MONTAŽU

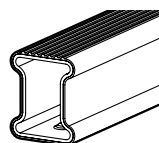


**Kargo**  
ACCIAIO  
Steel

- ⓘ BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

150cm

Art. N10010 x3

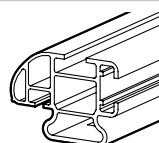


**Kargo-Plus**  
ALLUMINIO  
Aluminium


- ⓘ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS

150cm

Art. N10040 x3

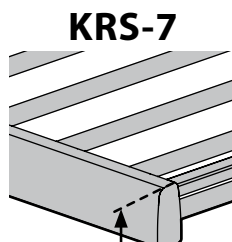

7cm

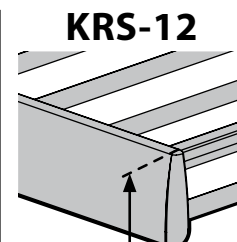


12cm

- ⓘ CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

# NORDRIVE®




TRANSPORT SOLUTIONS

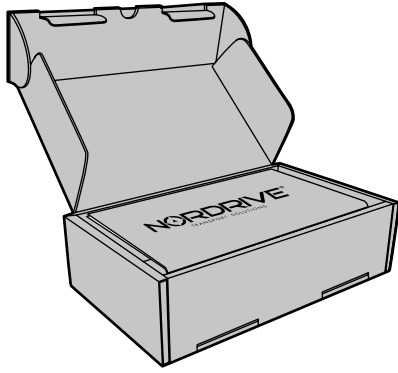











# NORDRIVE<sup>®</sup>













TRANSPORT SOLUTIONS



Art. **N30363**

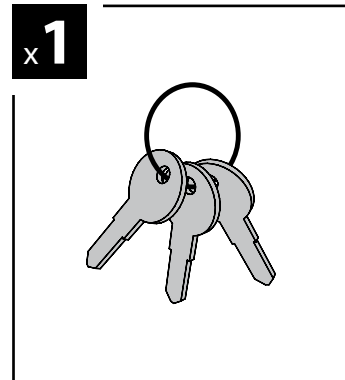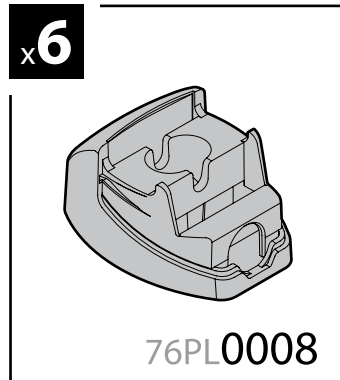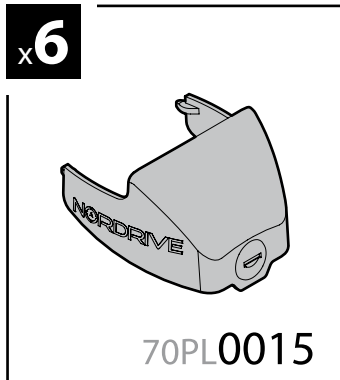


1 x Year

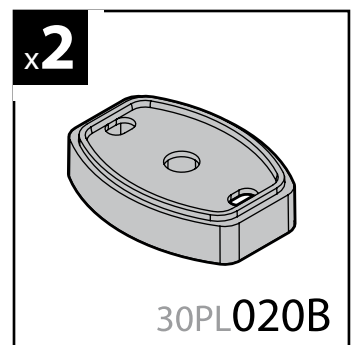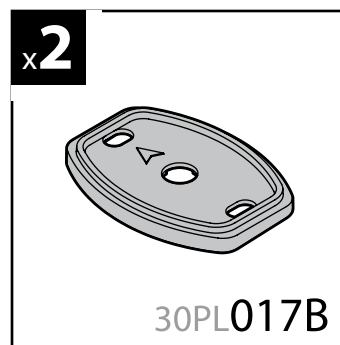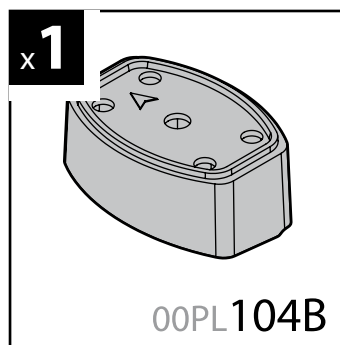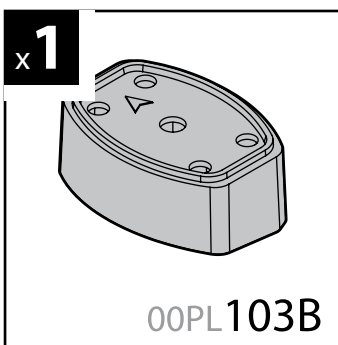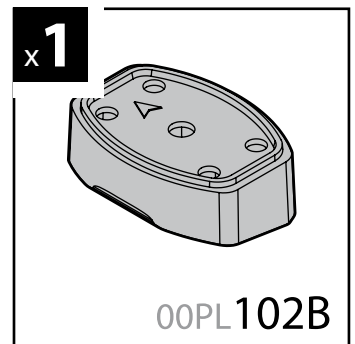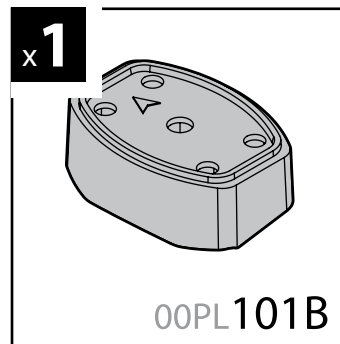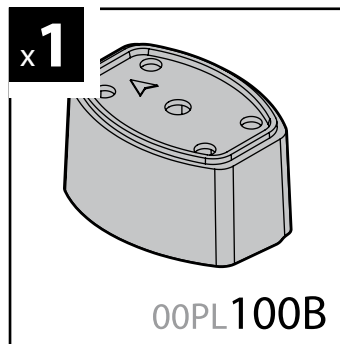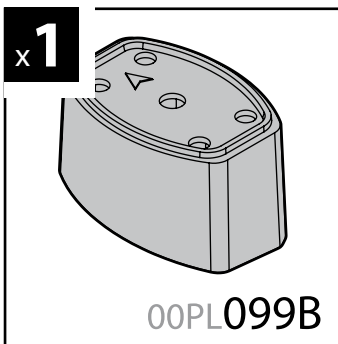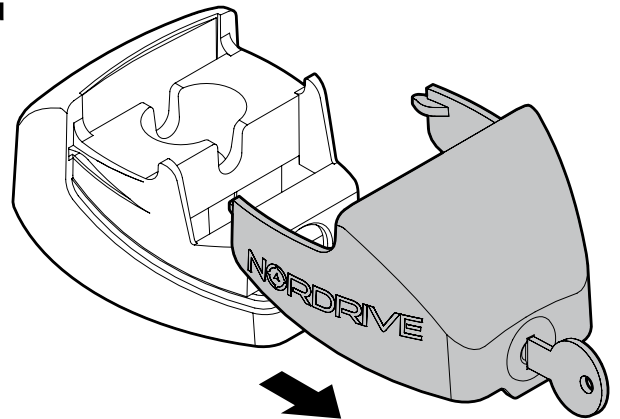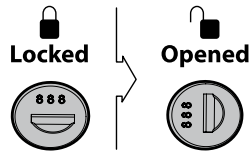

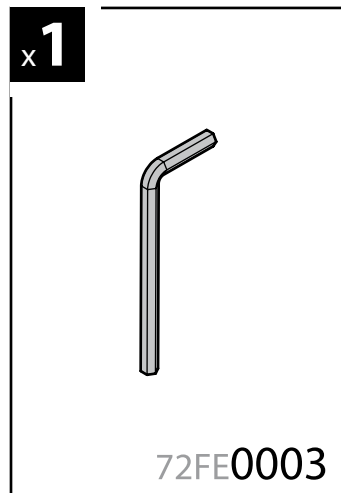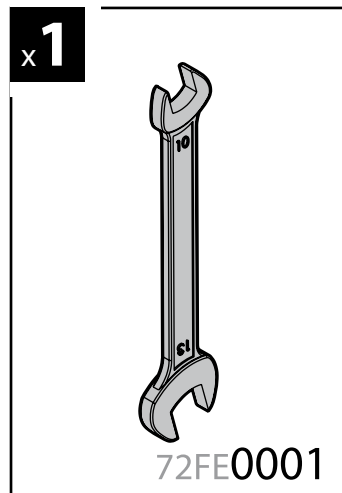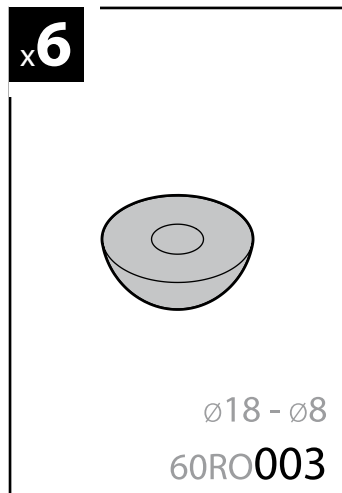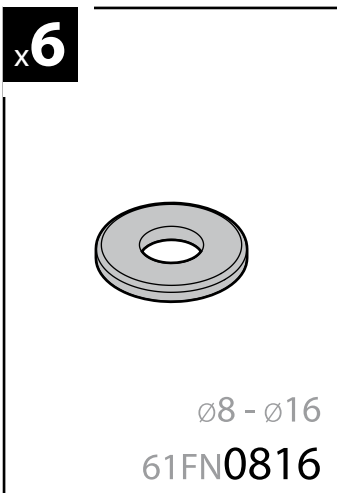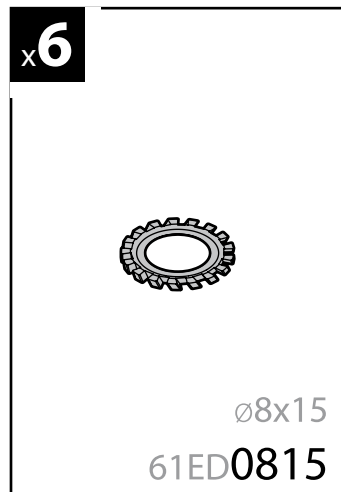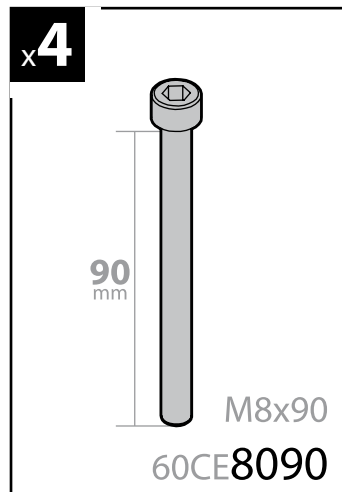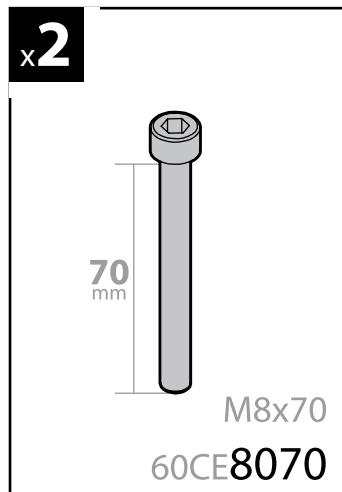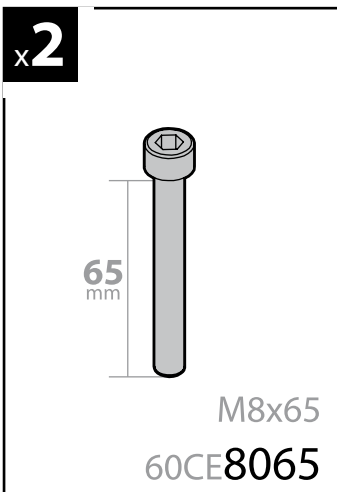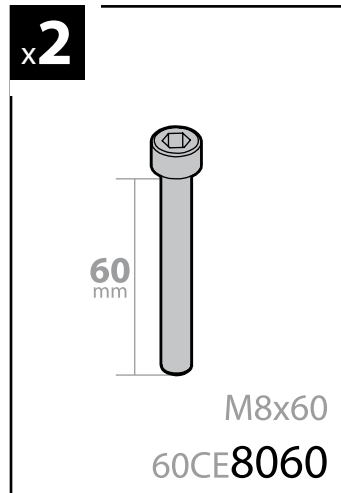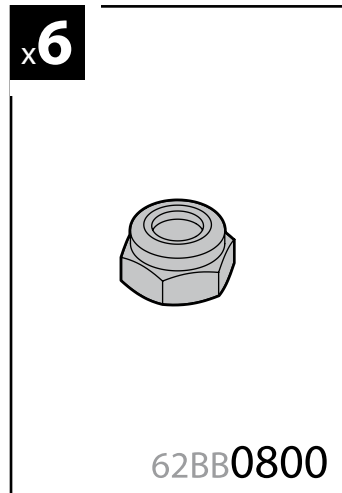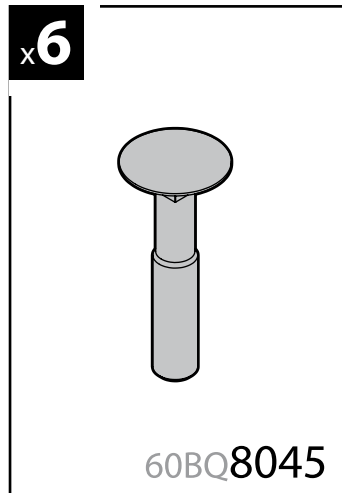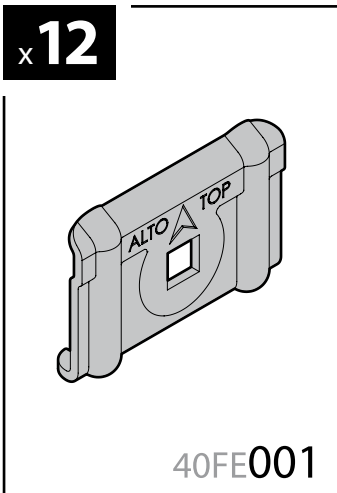

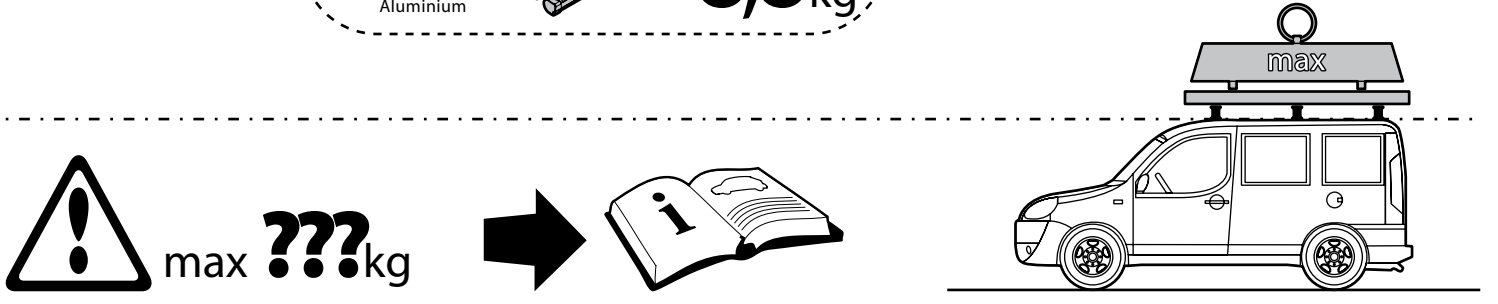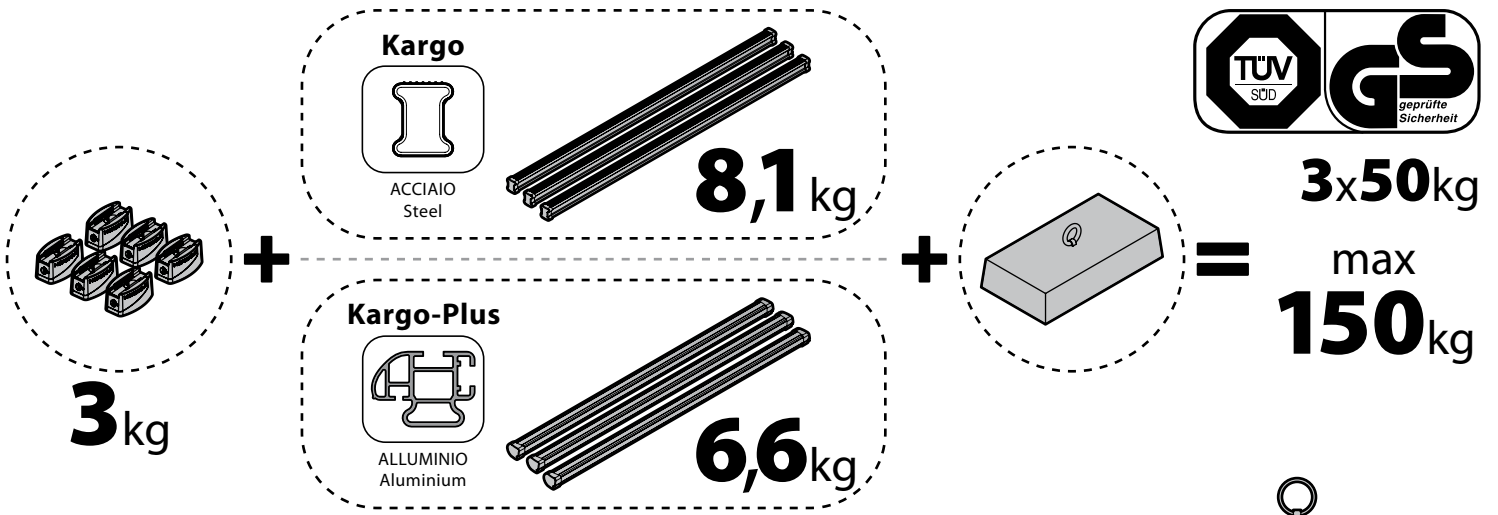

**SAFETY REGULATIONS**

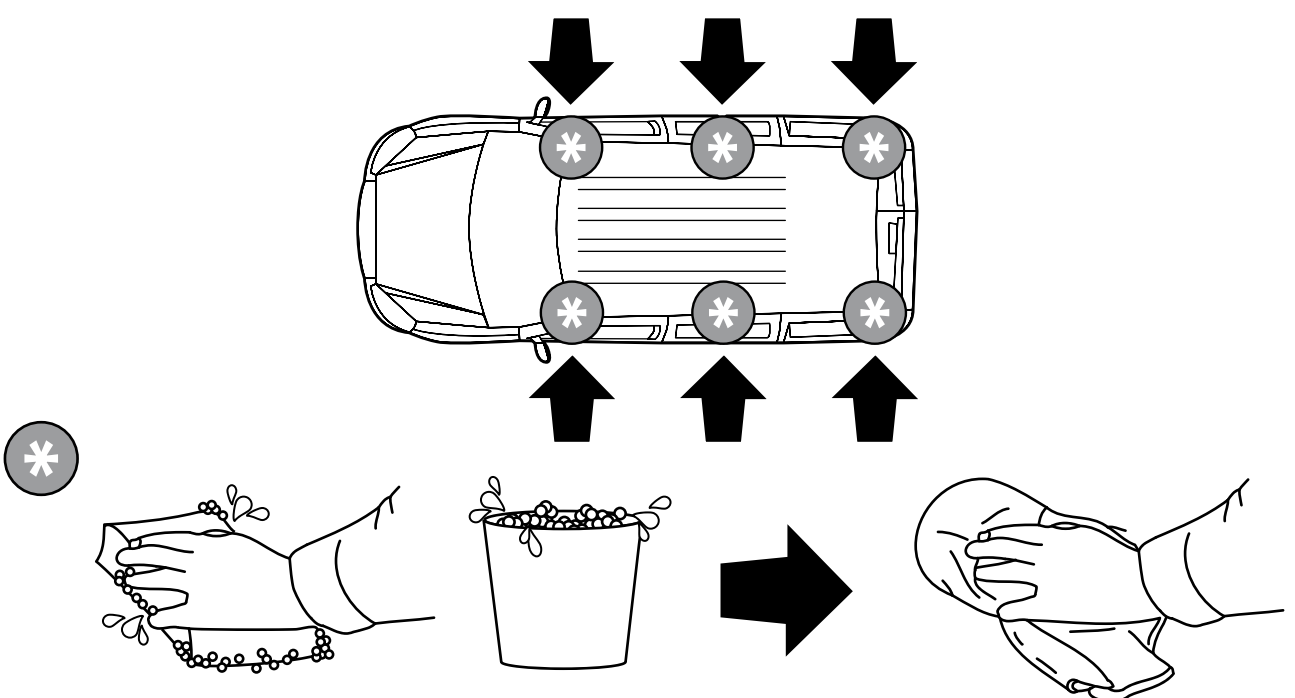


(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) ISTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγίες συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

1

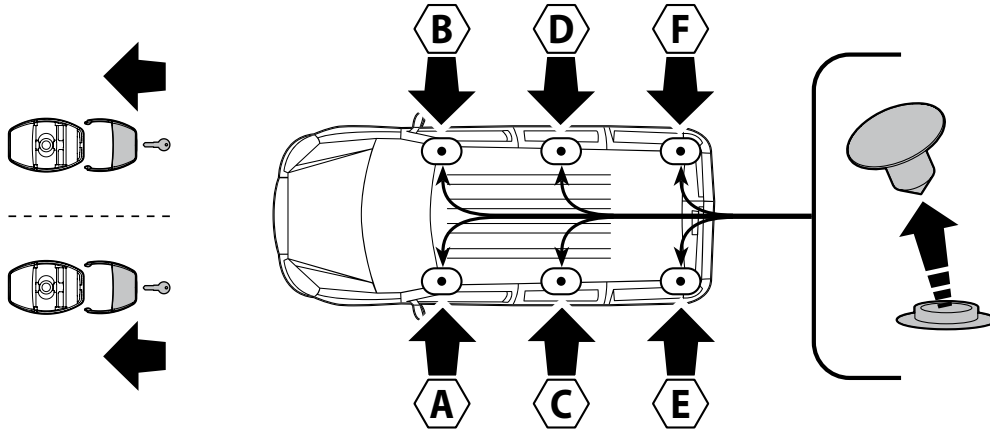


2

A

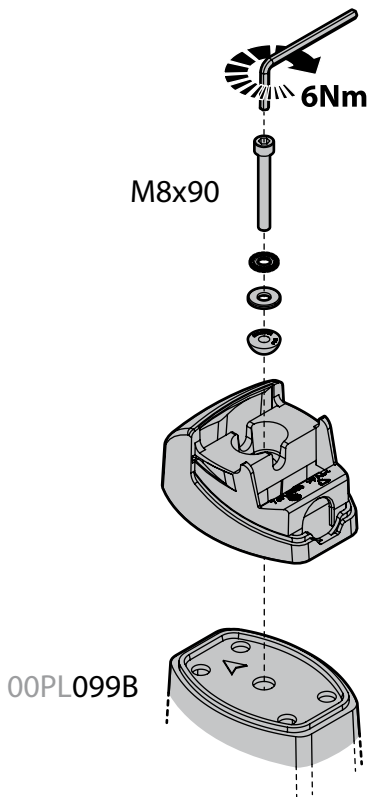


2

B

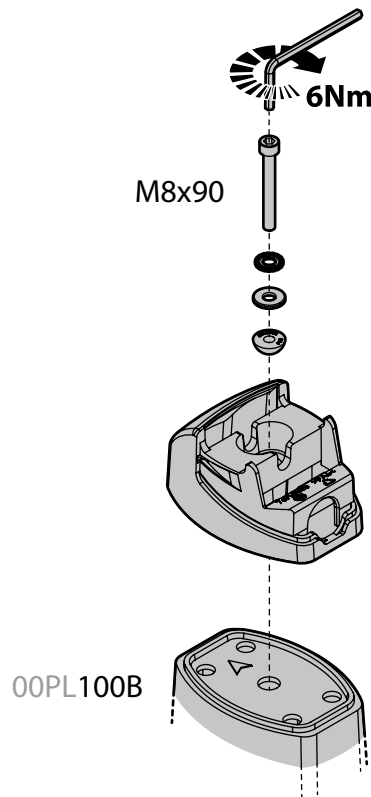

2

C

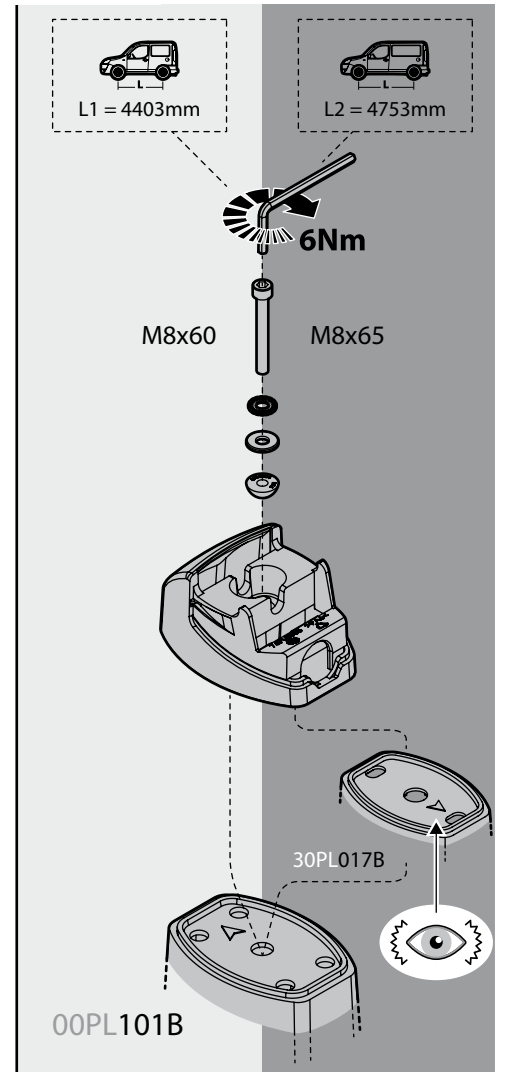

2


D

2


E

2

F

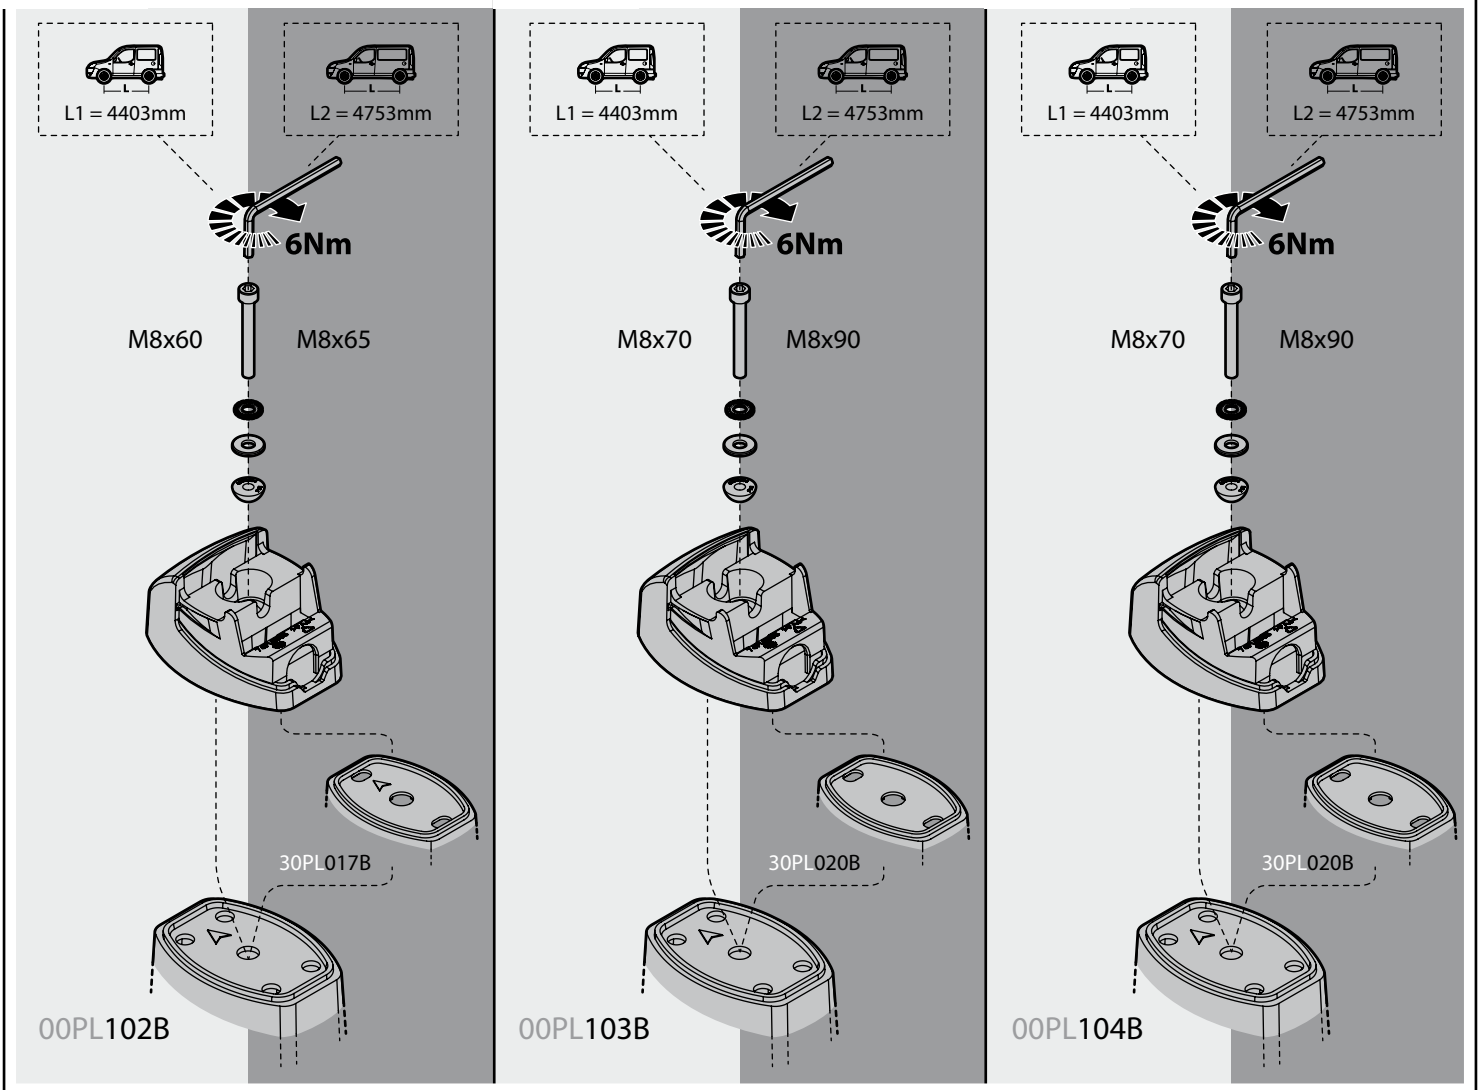

3

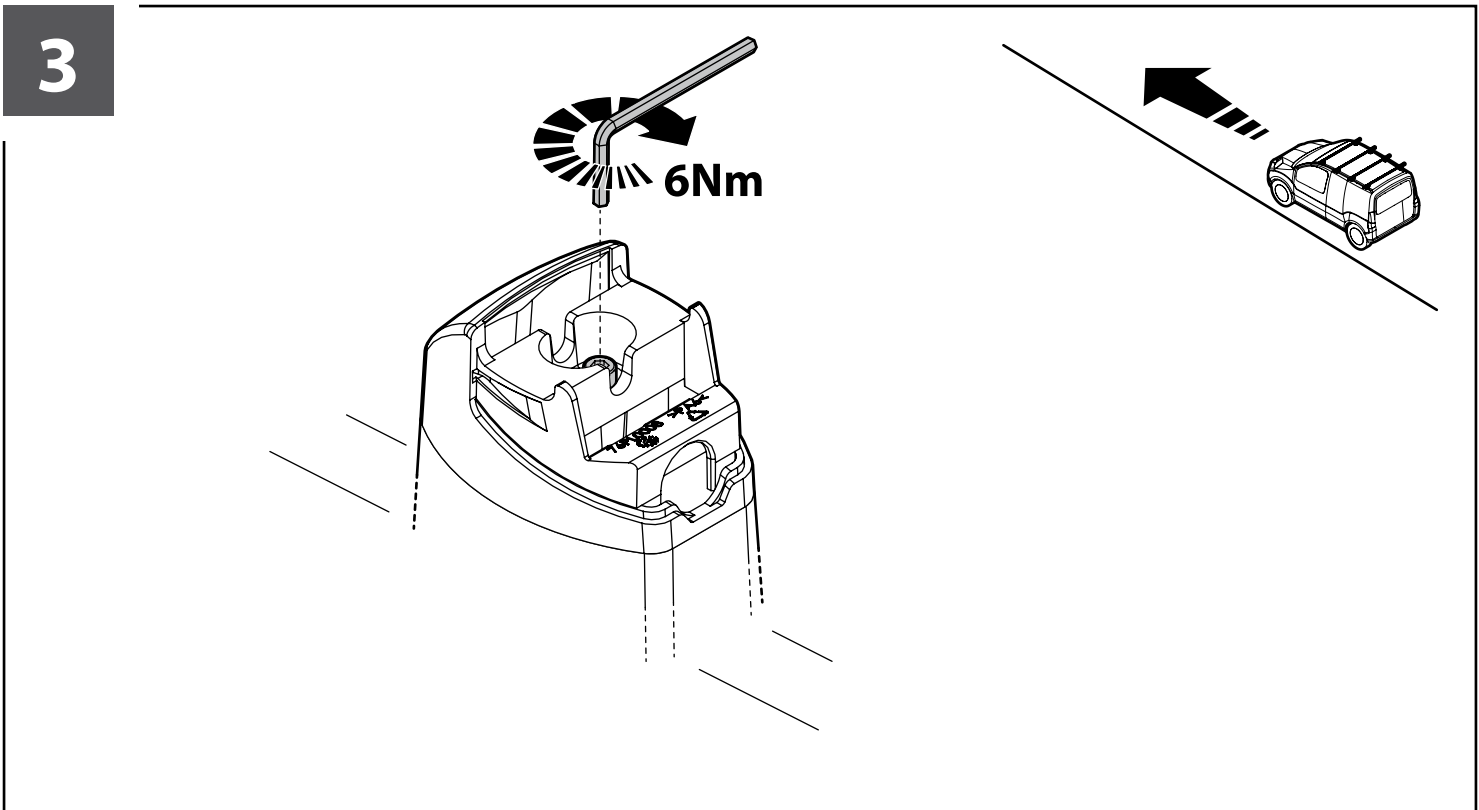




# ATTENZIONE WARNING



## Kargo

# A

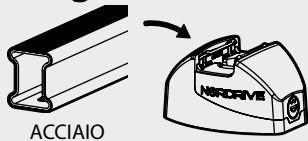


ACCIAIO  
Steel

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE












## Kargo-Plus

# B




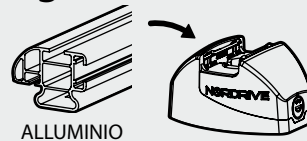


ALLUMINIO  
Aluminium





MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

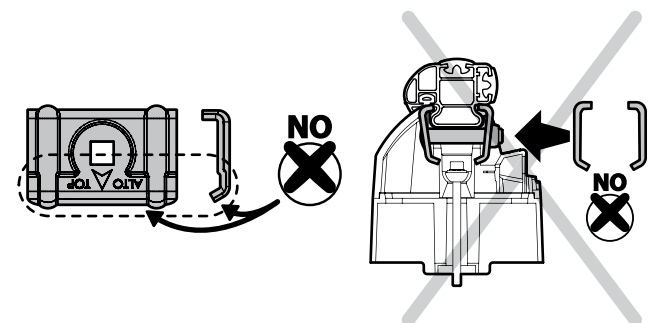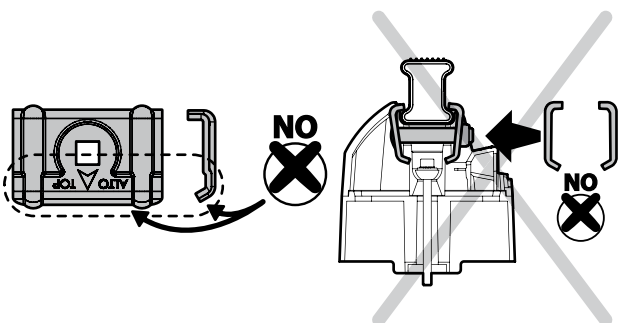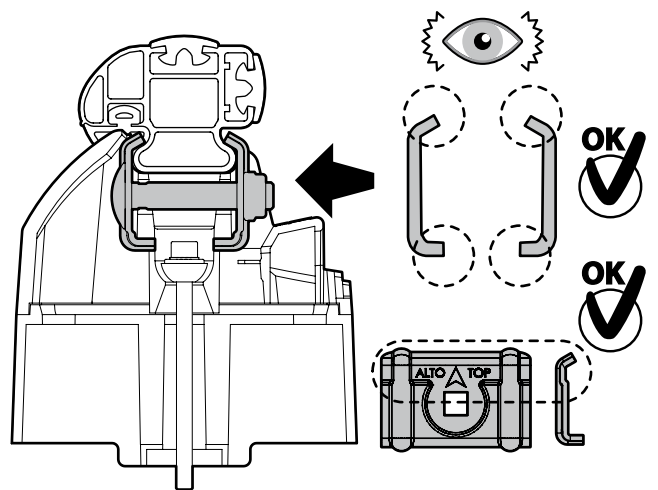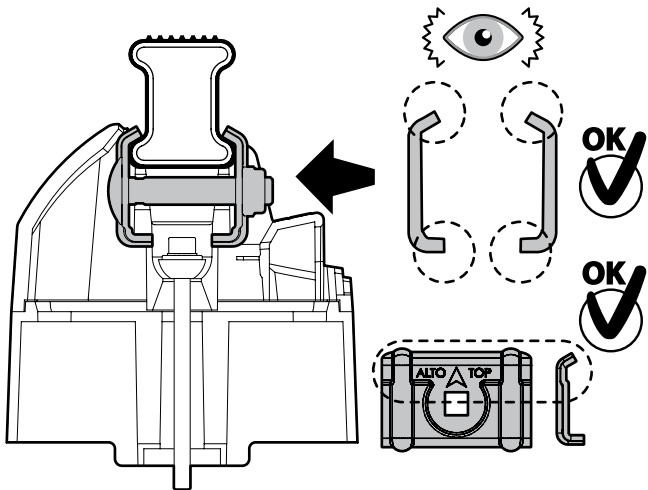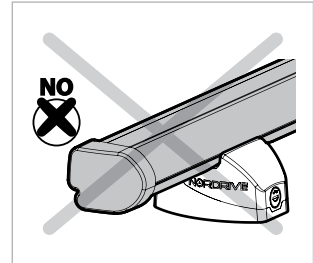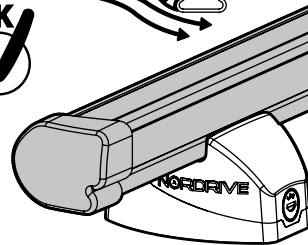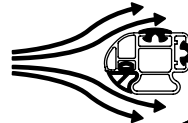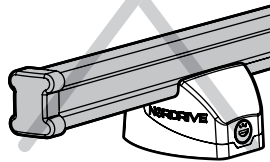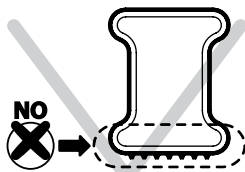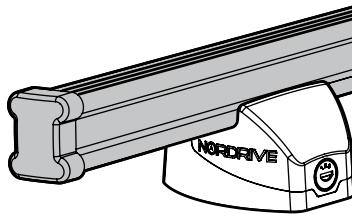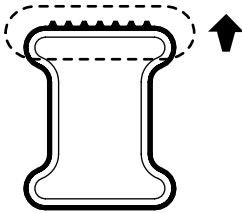

4

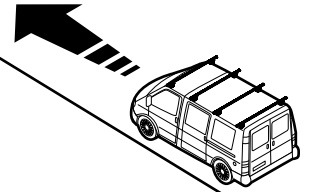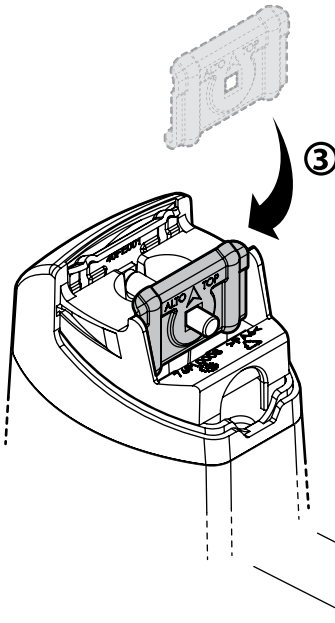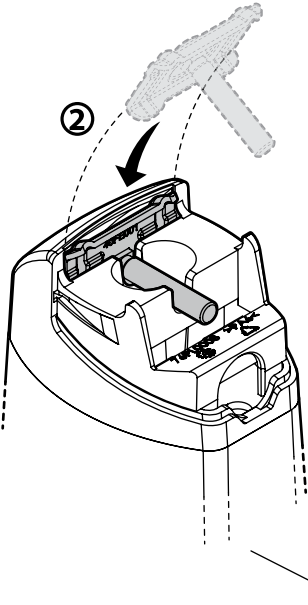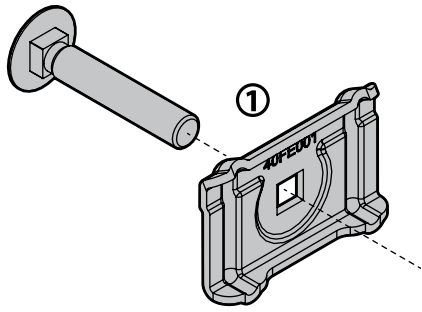


5

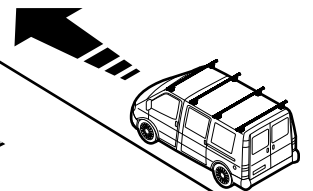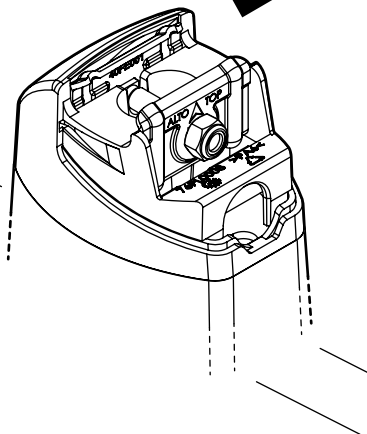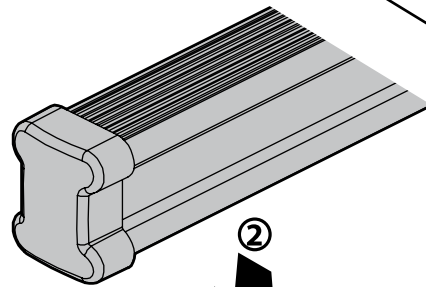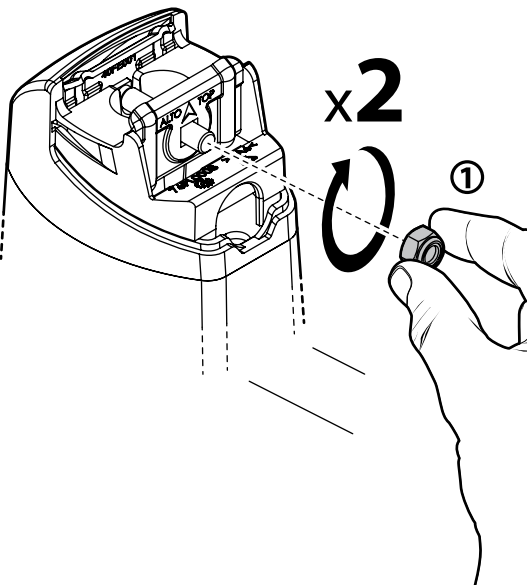




6


**A**

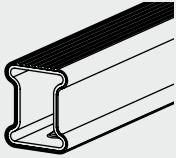

**Kargo**



ACCIAIO  
Steel

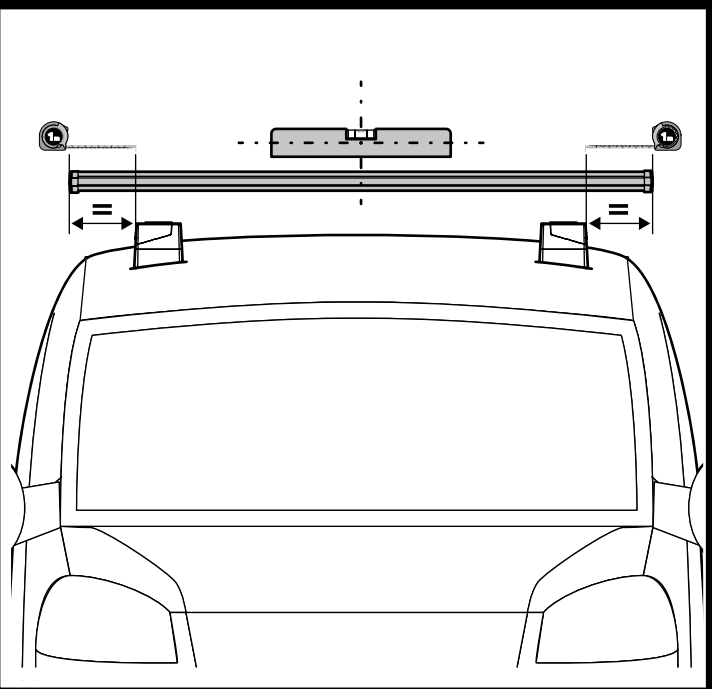


**B**





**Kargo-Plus**




ALLUMINIO  
Aluminium

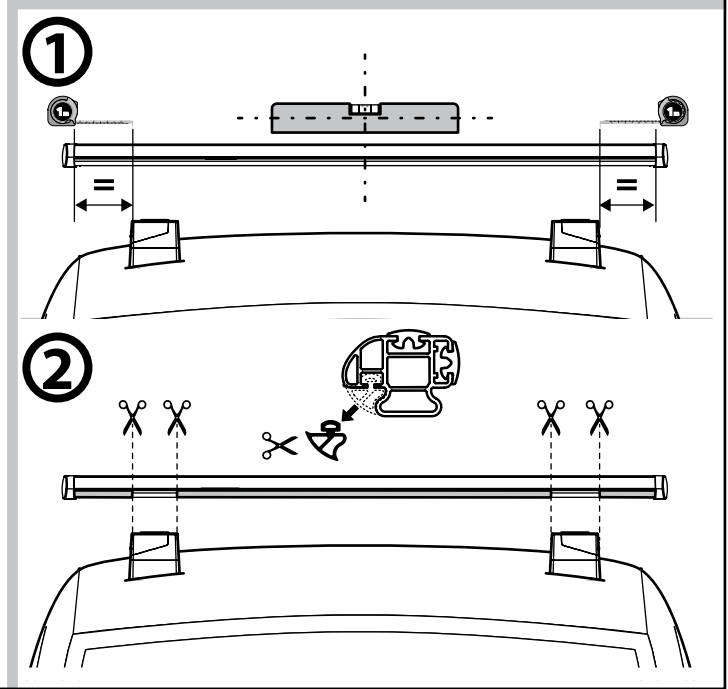


7

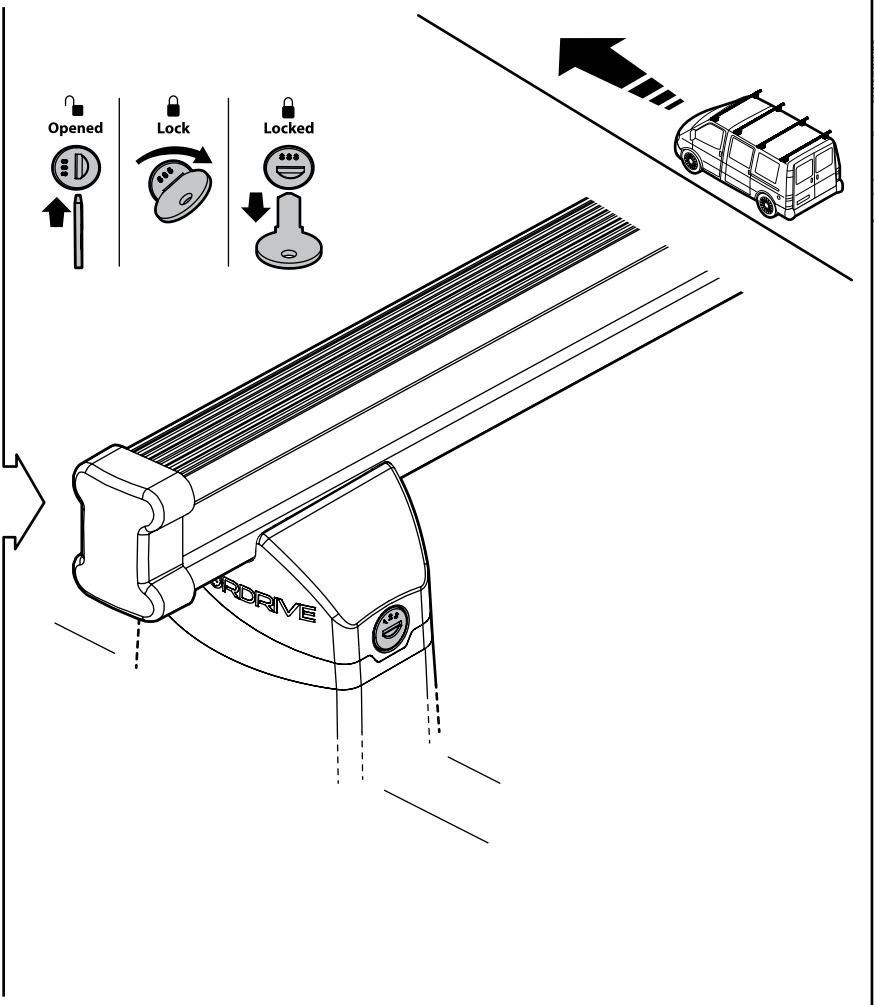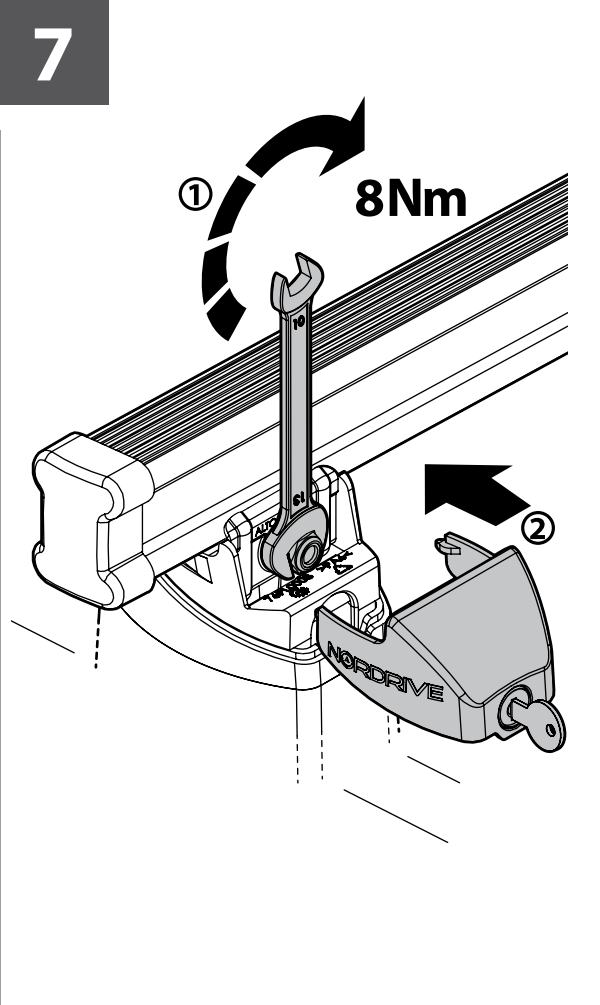

# Kargo series

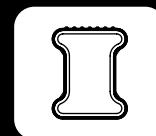


Acciaio / Steel

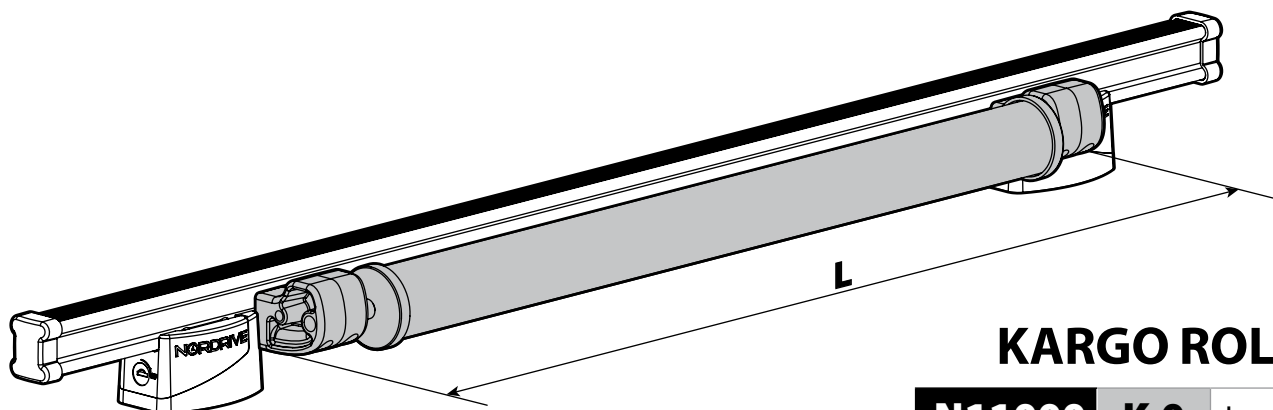


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

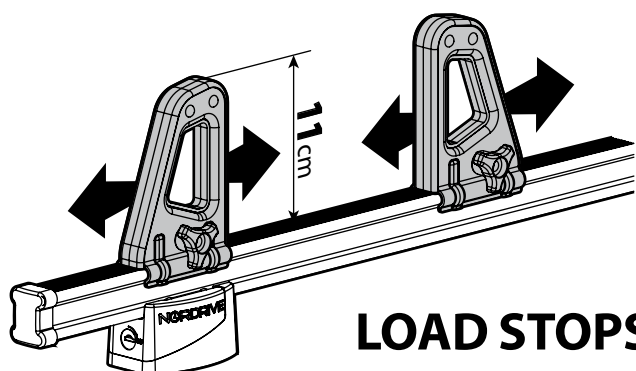


## LOAD STOPS

**N11001** K-1

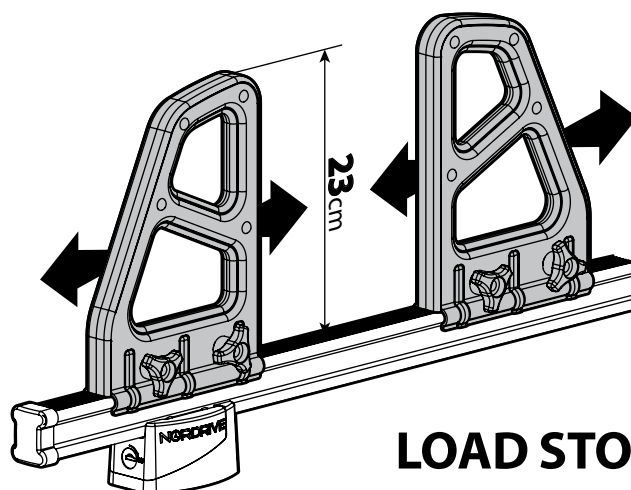

## LOAD STOPS

**N11002** K-2

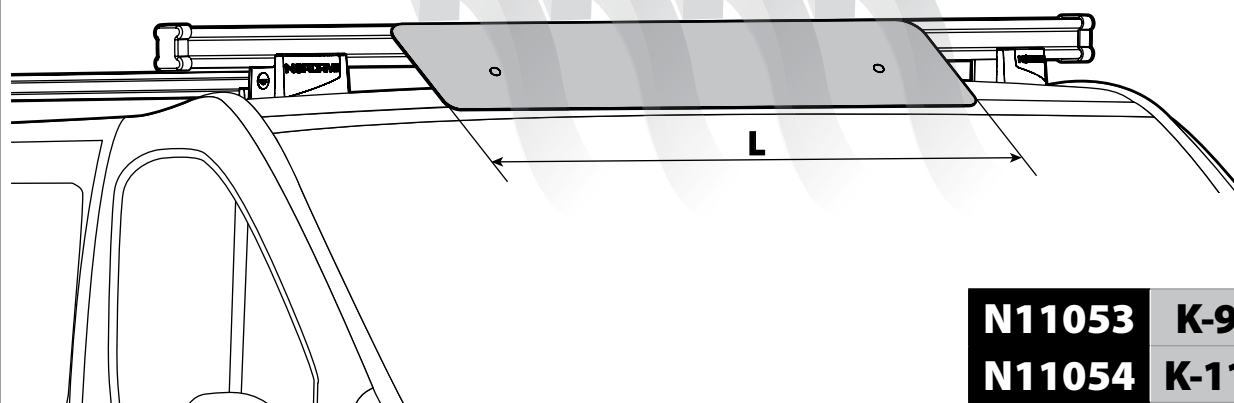


## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series


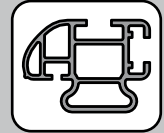


Alluminio / Aluminium

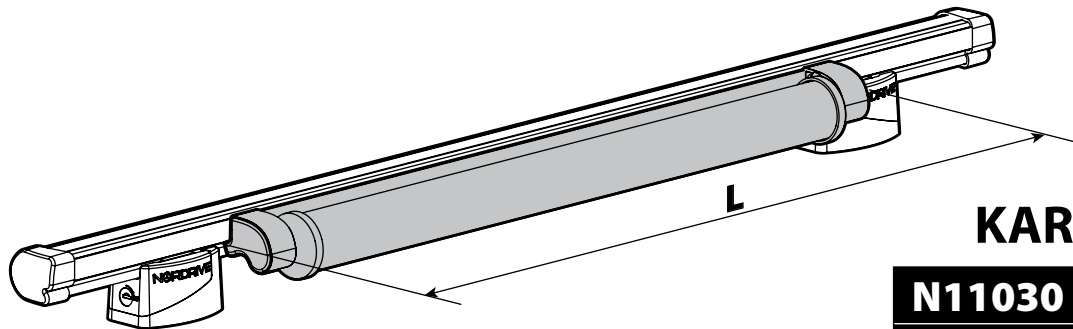


## KARGO ROLLER

<b>N11030</b>	<b>KP-0</b>	L = 64 cm
<b>N11034</b>	<b>KP-7</b>	L = 96 cm

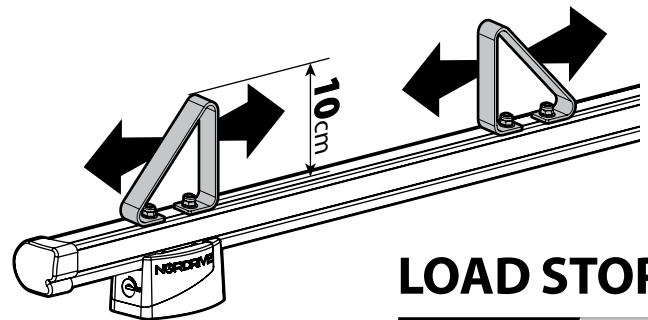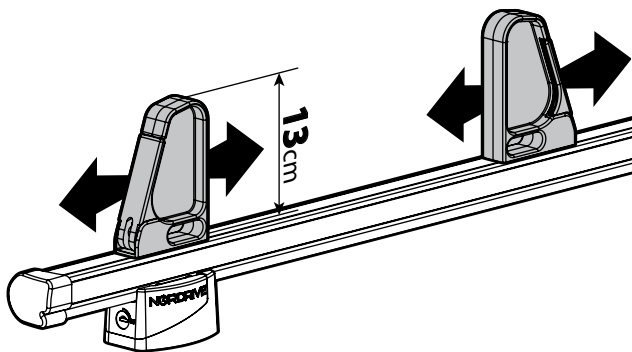


## LOAD STOPS

**N11031** KP-1

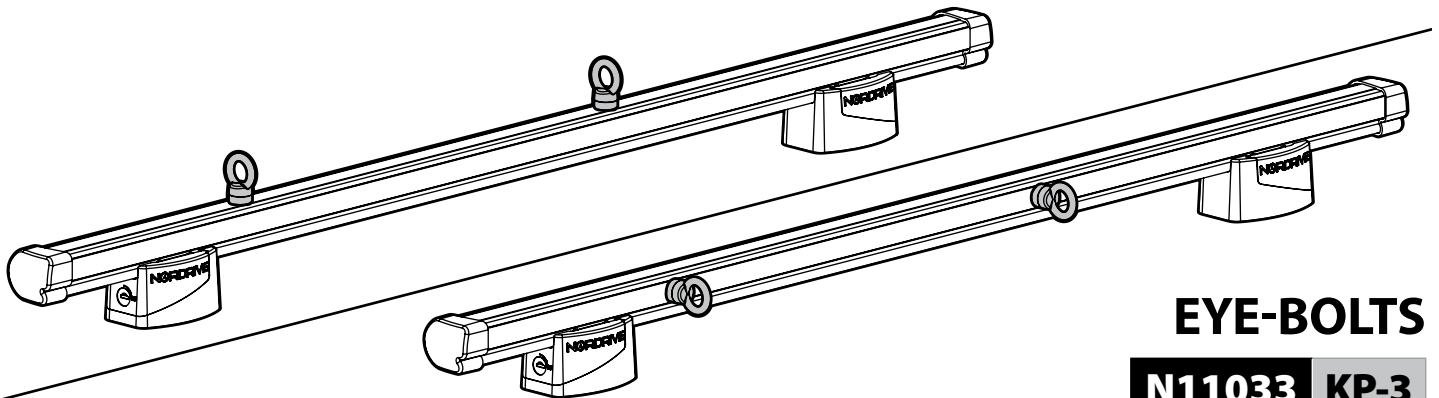

## EYE-BOLTS

**N11033** KP-3

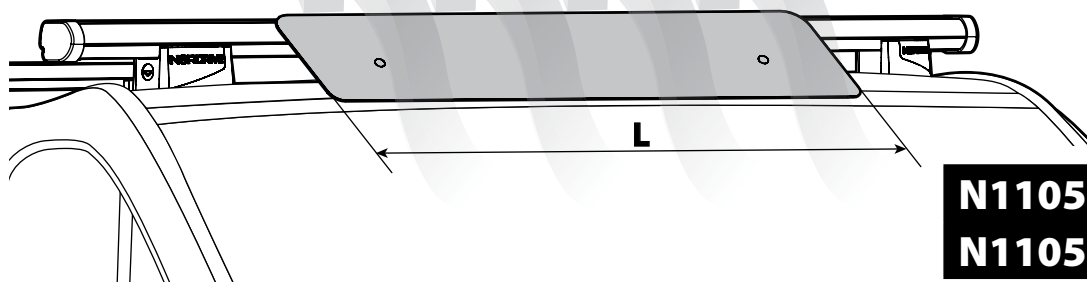

## SPOILER

<b>N11057</b>	<b>KP-9</b>	L = 95 cm
<b>N11058</b>	<b>KP-11</b>	L = 110 cm


**OPTIONALS** PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel

**Kargo-Plus**  
series

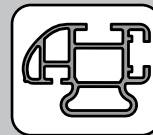


Alluminio / Aluminium

### KARGO-TUBE

**N11050 T200** L = 205 cm



**N11051 T300** L = 305 cm

**N11052 T400** L = 405 cm

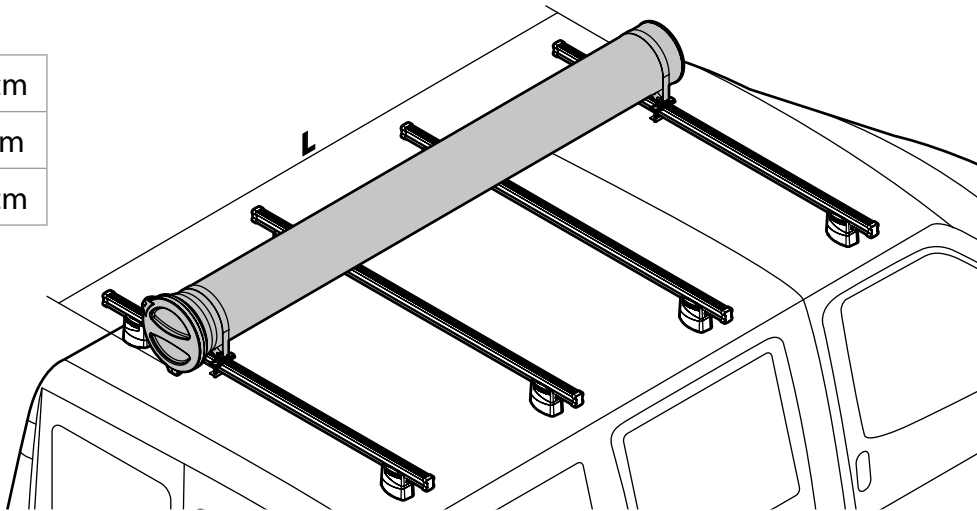


### LADDER HOLDER STRAPS

**N11065 U-5**

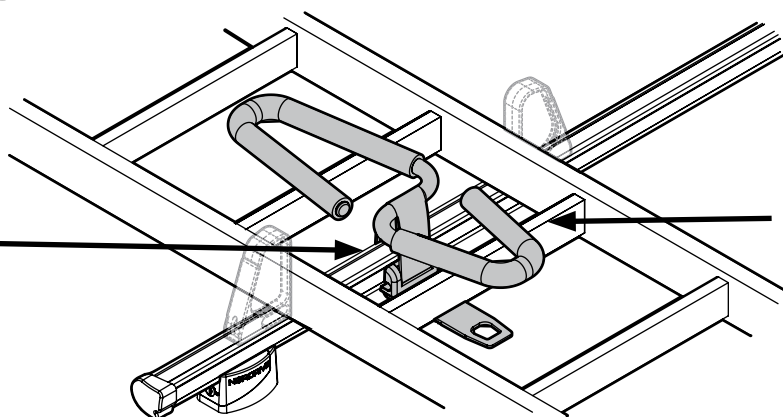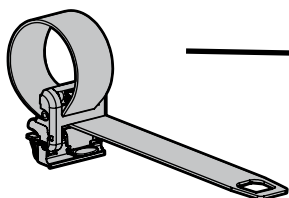

### LADDER STEP ADAPTER


**N11067 U-6**

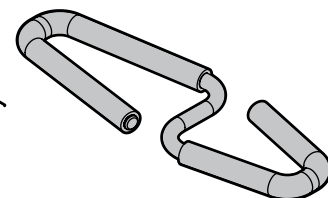

### EXTENSION ROLLER

**N11020 U-0** L = 64 cm

**N11021 U-7** L = 96 cm

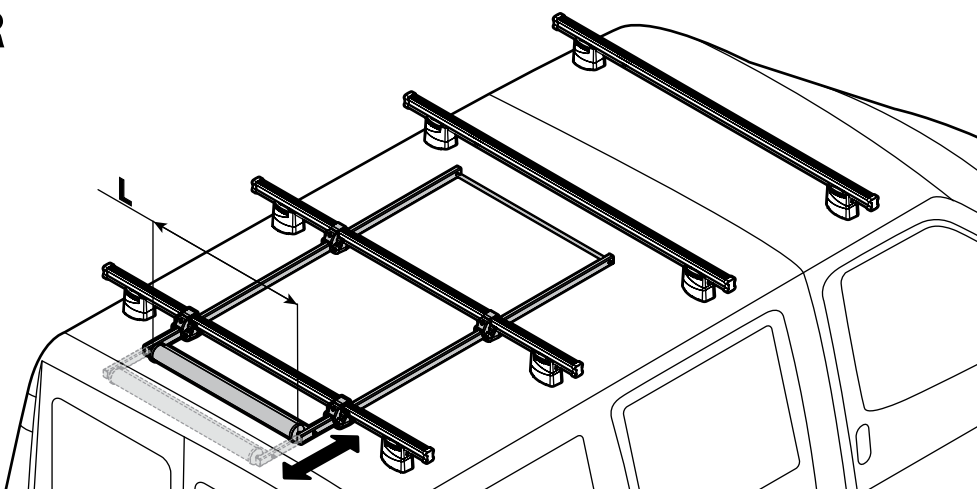

- I** Lotto di produzione da comunicare per eventuali ricambi
- GB** Production lot number to be communicated for any spare parts
- F** Lot de production à communiquer pour toute pièce de rechange
- D** Produktionscharge für eventuelle Ersatzteile
- E** Lote de producción a comunicar por cualquier repuesto

**Lot.**

**NORDRIVE®**  
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)