

Art. **N30402**


**KIT** x4

**FIAT PANDA** (no rail)

2000  
02/12→

**FIAT PANDA VAN** (no rail)

2000  
01/13→

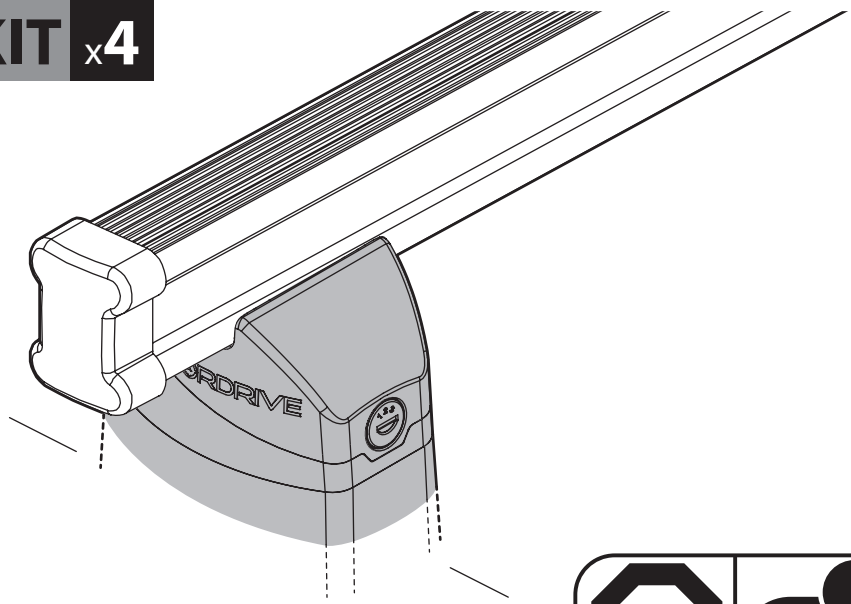

- ⓘ ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA


**NORDRIVE**  
**KARGO SERIES**

- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓒ MONTERINGSANVISNING
- Ⓕ ASENNUSOHJE
- Ⓔ PAIGALDUSJUHEND
- Ⓗ STIPRINĀŠANAS INSTRUKCIJA
- Ⓕ PRITVIRTINIMO INSTRUKCIJOS
- Ⓖ INSTRUKCJA MONTAŻU
- Ⓒ Инструкции по установке
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓒ NÁVOD NA MONTÁŽ
- Ⓕ NAVODILA ZA PRITRJEVANJE
- Ⓖ UPUTA ZA SASTAVLJANJE
- Ⓒ A FELSZERELÉS MÓDJA
- Ⓖ Οδηγίες συναρμολόγησης
- Ⓕ MONTAJ TALIMATLARL
- Ⓖ ИHCTPYKЦИИ 3A MOHTAЖ
- Ⓒ UPUTSTVA ZA MONTAŽU




**Kargo**  
ACCIAIO  
Steel

- ⓘ BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

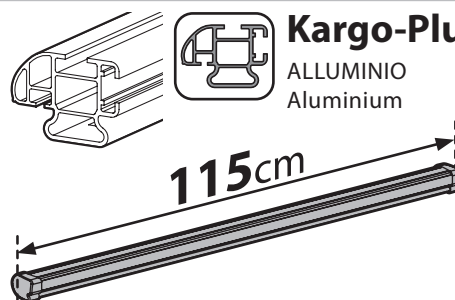

**Kargo-Plus**  
ALLUMINIO  
Aluminium

- ⓘ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS

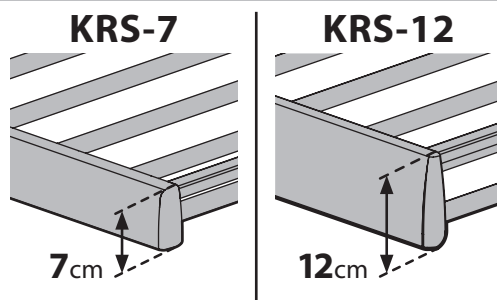

**KRS-7**


**KRS-12**

- ⓘ CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

Art. **N10000** x2

Art. **N10030** x2










**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS

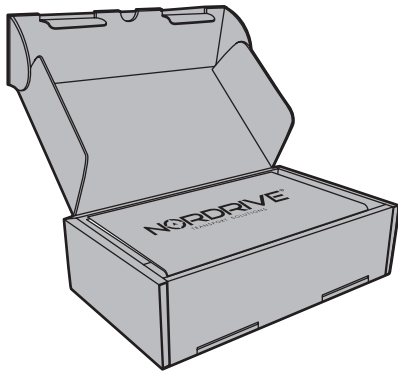


# NORDDRIVE®

TRANSPORT SOLUTIONS

Art. **N30402**

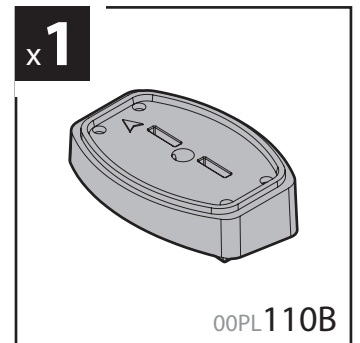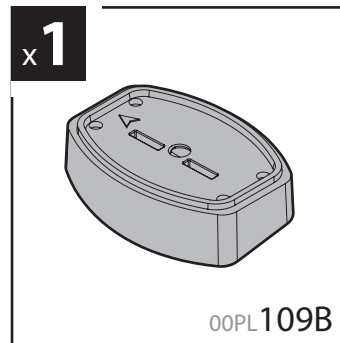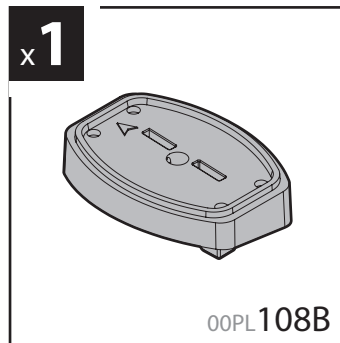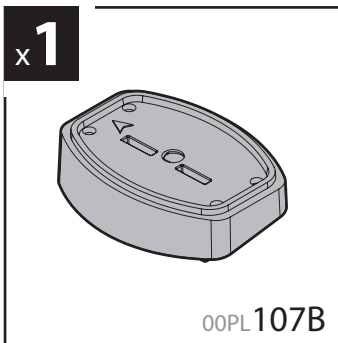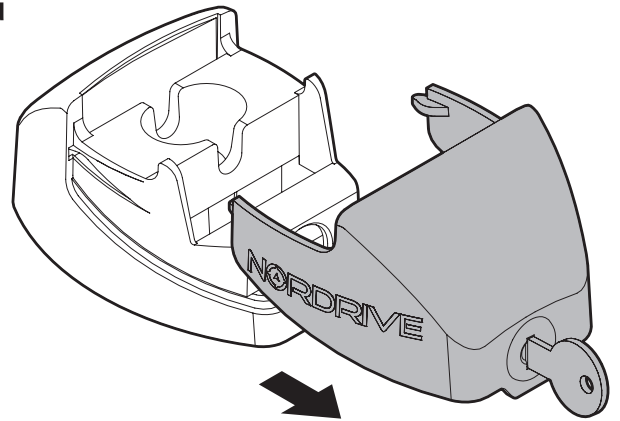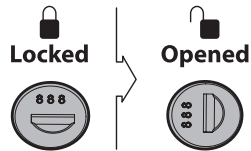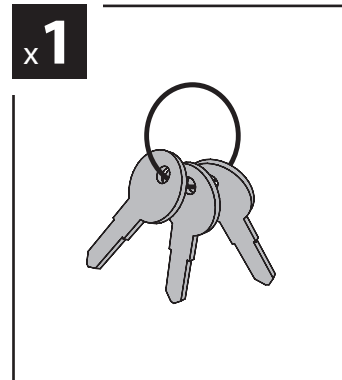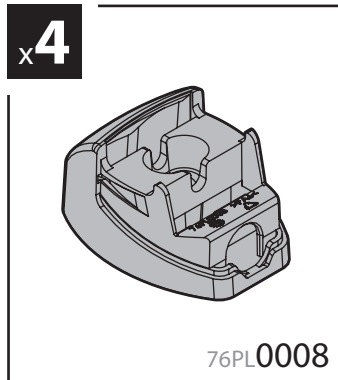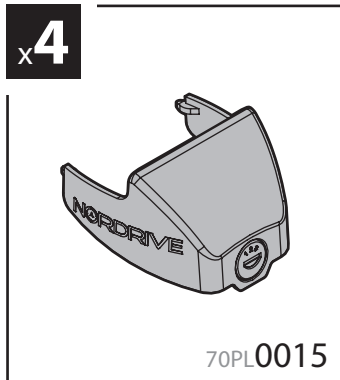


x8

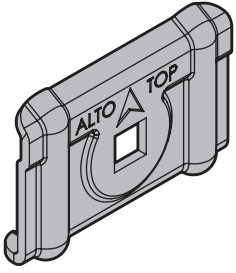


40FE001

x4

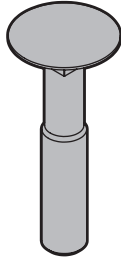


60BQ8045

x4



62BB0800

x4

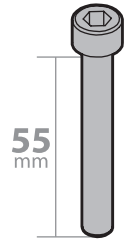


M6x55  
60CE6055

x4




61ED0611

x4




ø6 - ø15  
82FE0001

x4

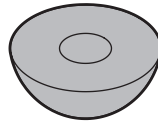


60RO004

x1




72FE0001


x1



72FE0002

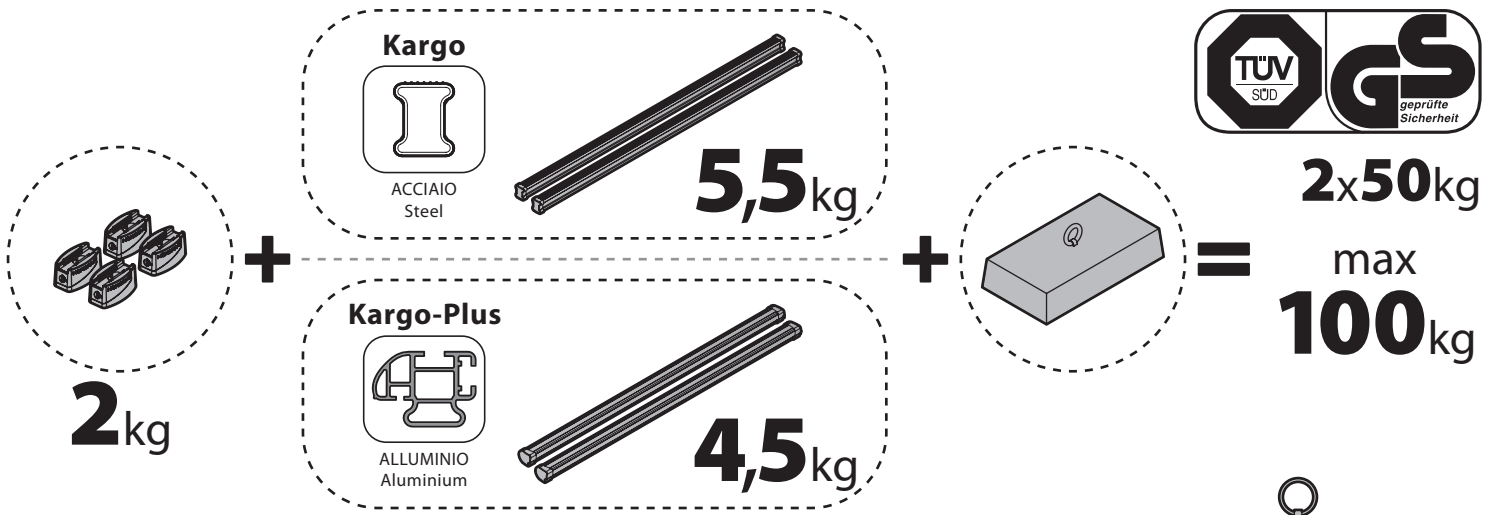

**SAFETY REGULATIONS**

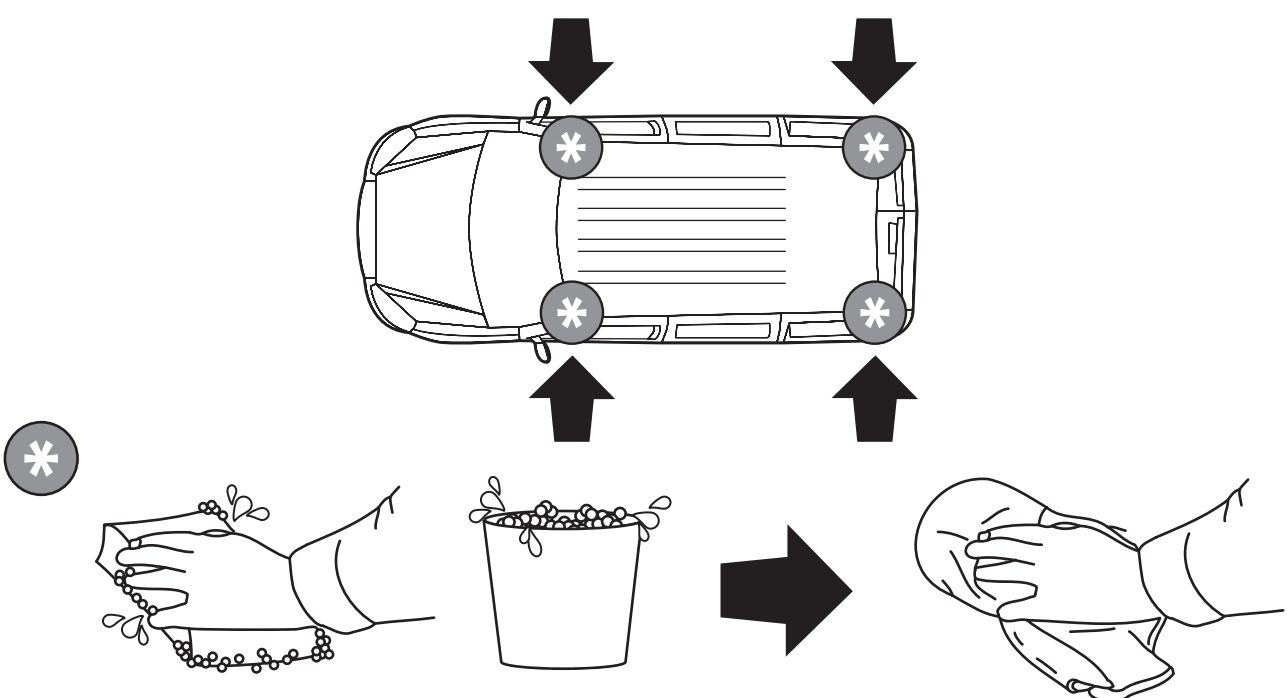


(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) INSTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγία συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

1

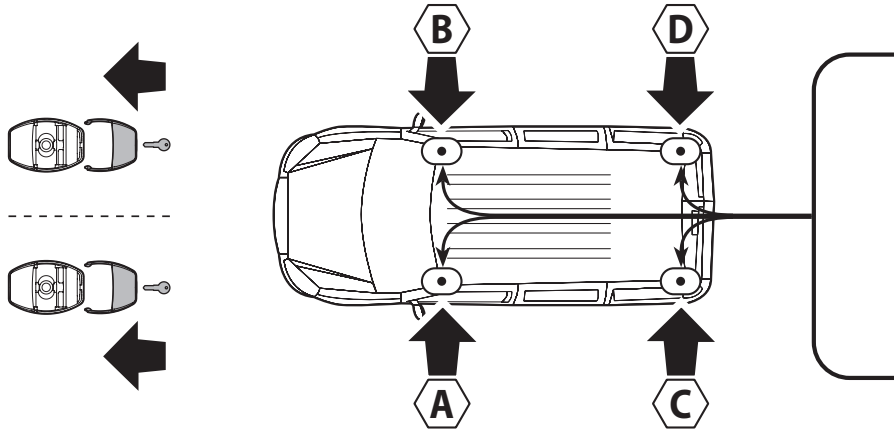


2

A

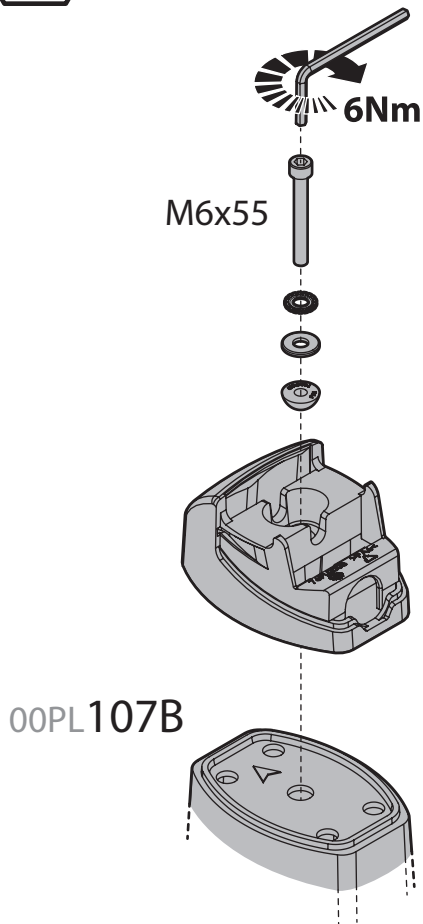


2

B

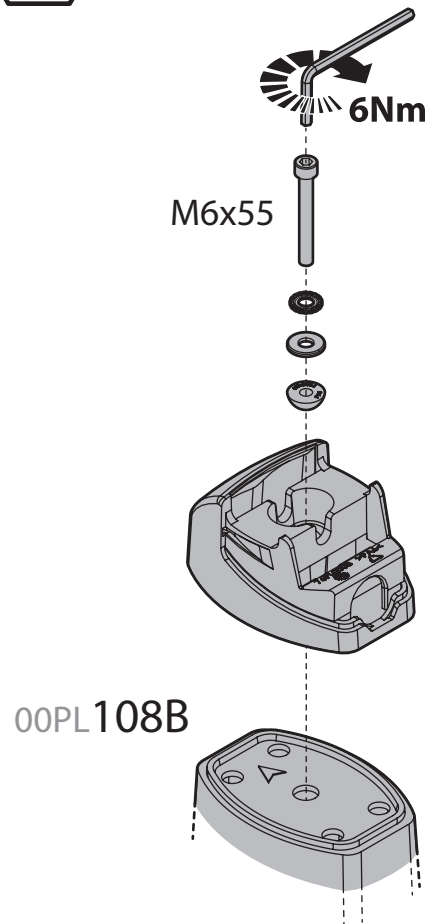


2

C

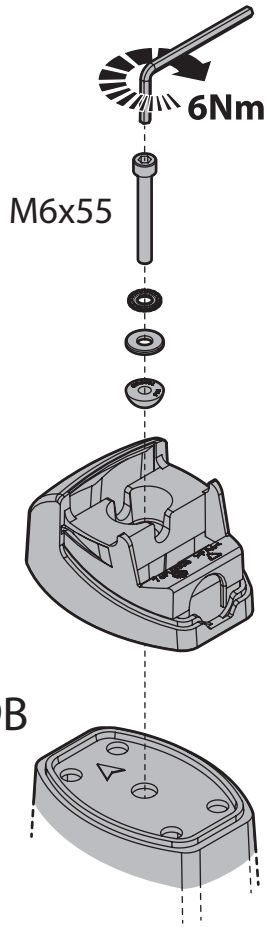


2

D

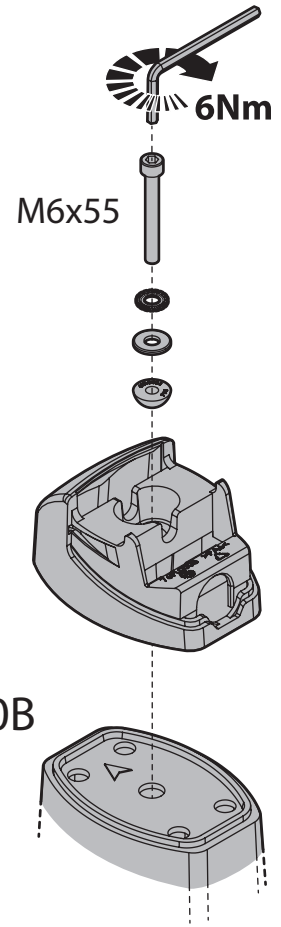

3

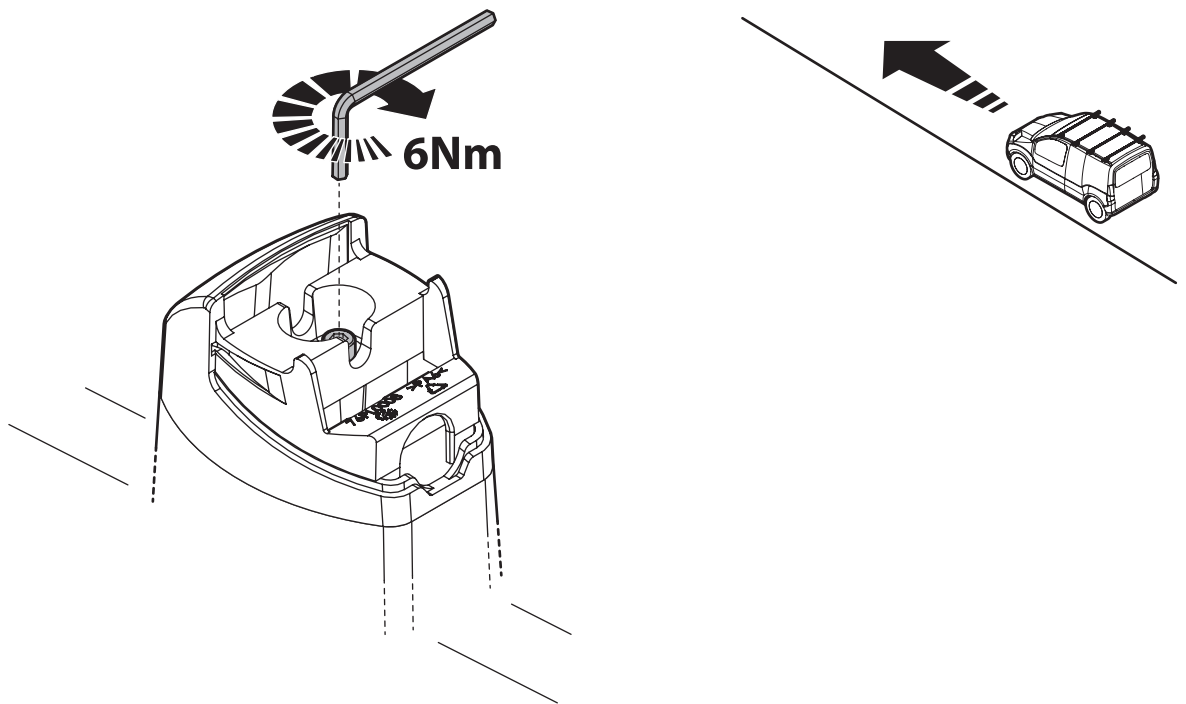



# ATTENZIONE WARNING



## Kargo

# A




ACCIAIO  
Steel

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

## Kargo-Plus



# B

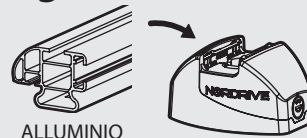



ALLUMINIO  
Aluminium

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE



OK ✓

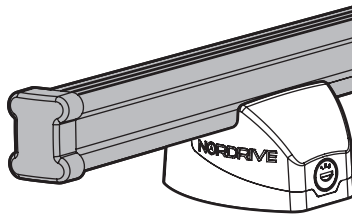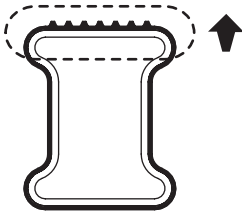






NO ✗

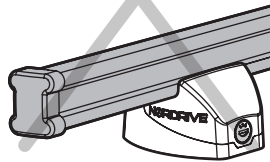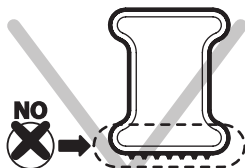





OK ✓

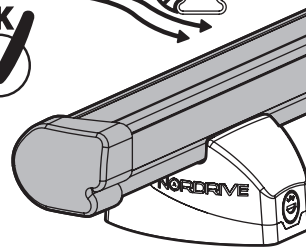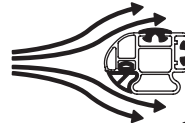





NO ✗

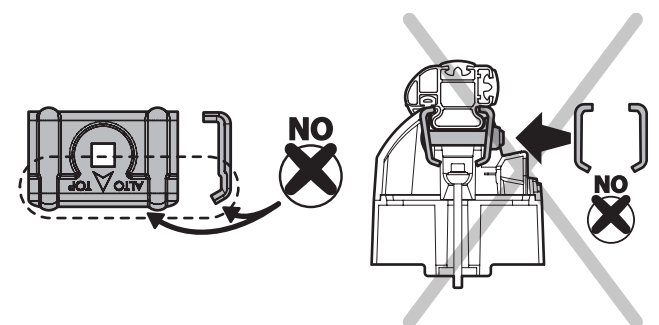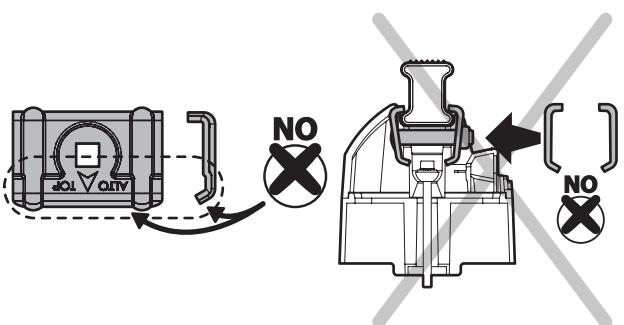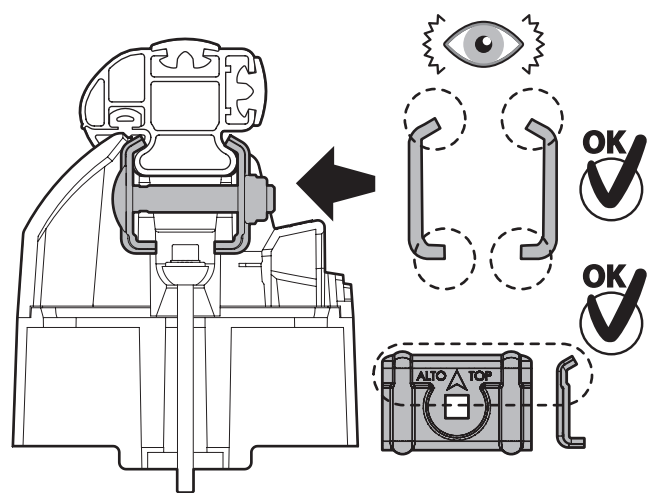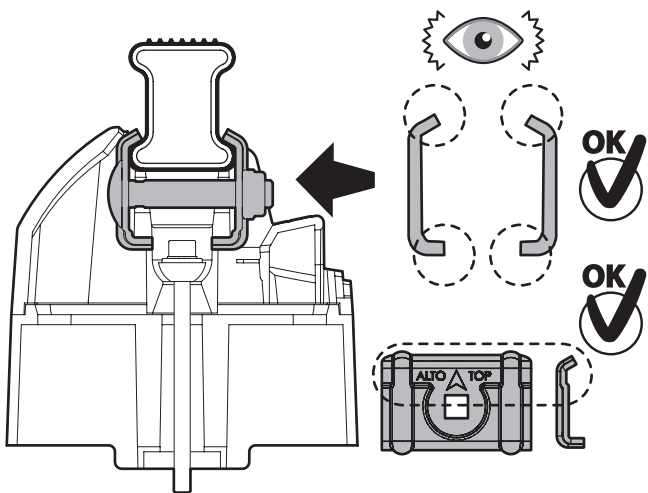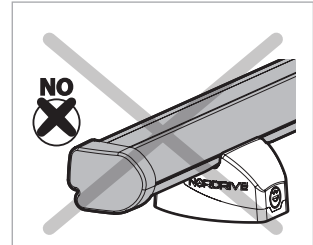

4

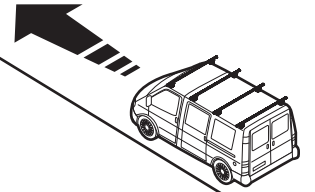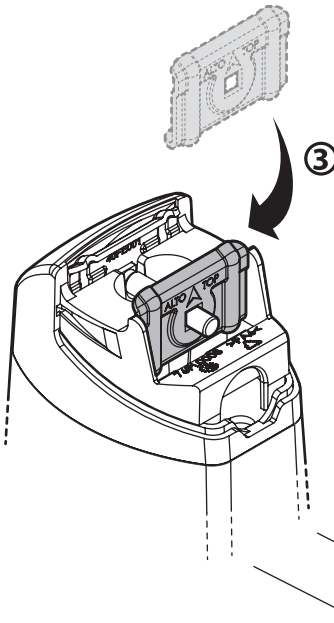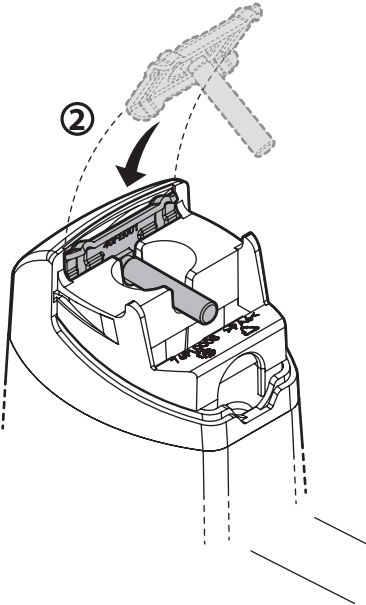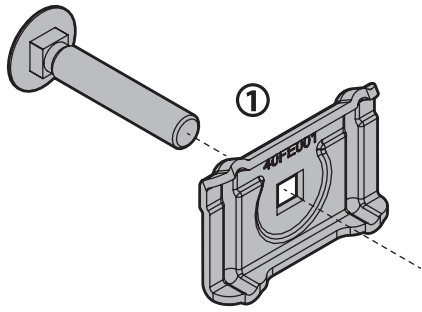


5

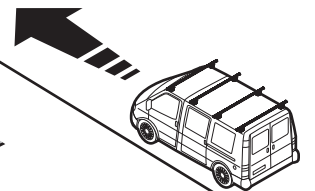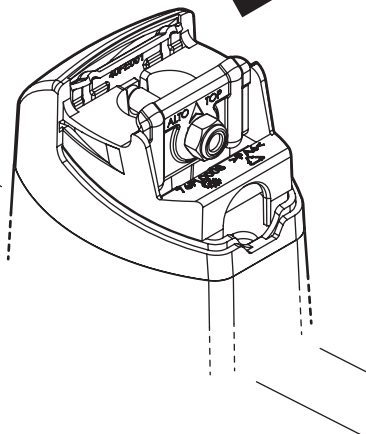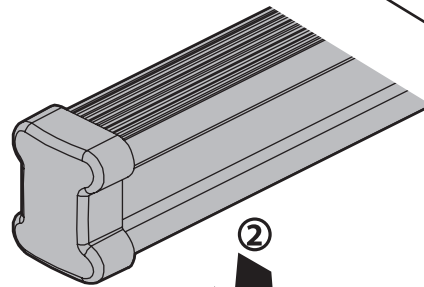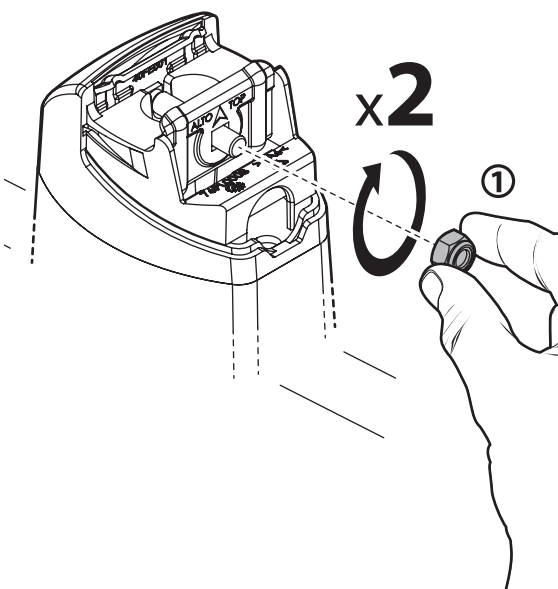




# 6

## A

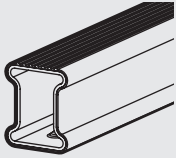

### Kargo



ACCIAIO  
Steel


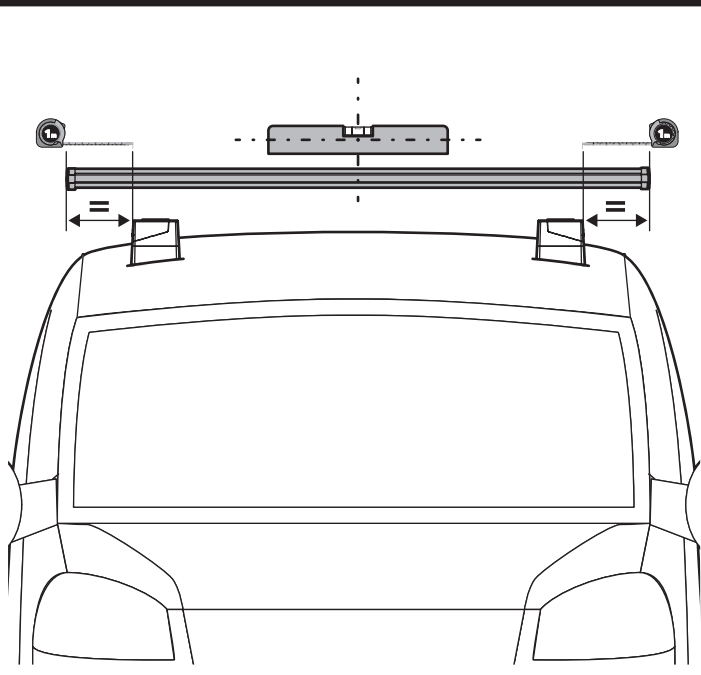



Diagram showing the Kargo steel bar being installed on a car roof. The bar is positioned between two roof rails, with arrows indicating the distance from the center of the bar to the rails. The bar is secured with nuts and washers at both ends.

## B



### Kargo-Plus

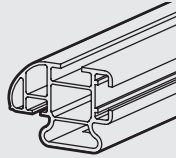

ALLUMINIO  
Aluminium

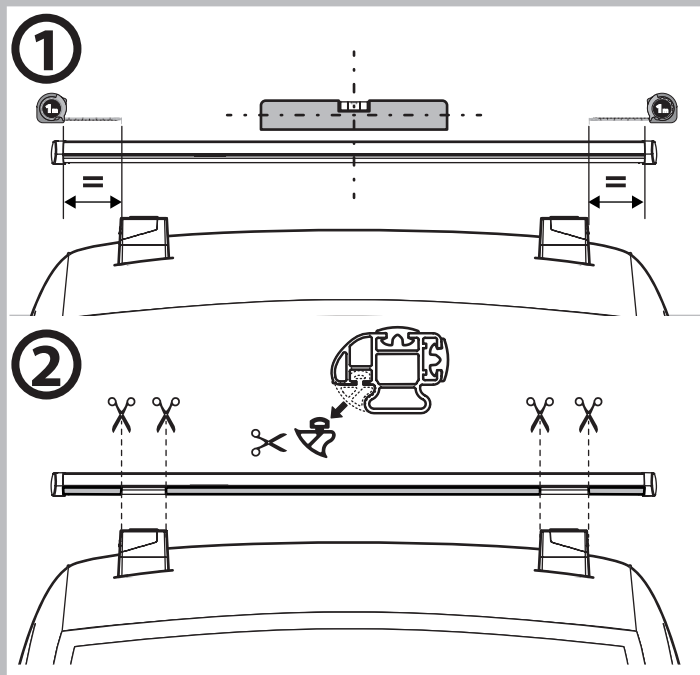


Diagram showing the Kargo-Plus aluminium bar being installed on a car roof. Step 1 shows the bar being placed between the roof rails. Step 2 shows the bar being secured with a lock mechanism. The lock is a circular device that fits into the bar and is secured with a key. The diagram shows the bar being inserted into the roof rails and the lock being placed on top of the bar. The lock is secured with a key, and the bar is then secured to the roof rails with nuts and washers.

# 7

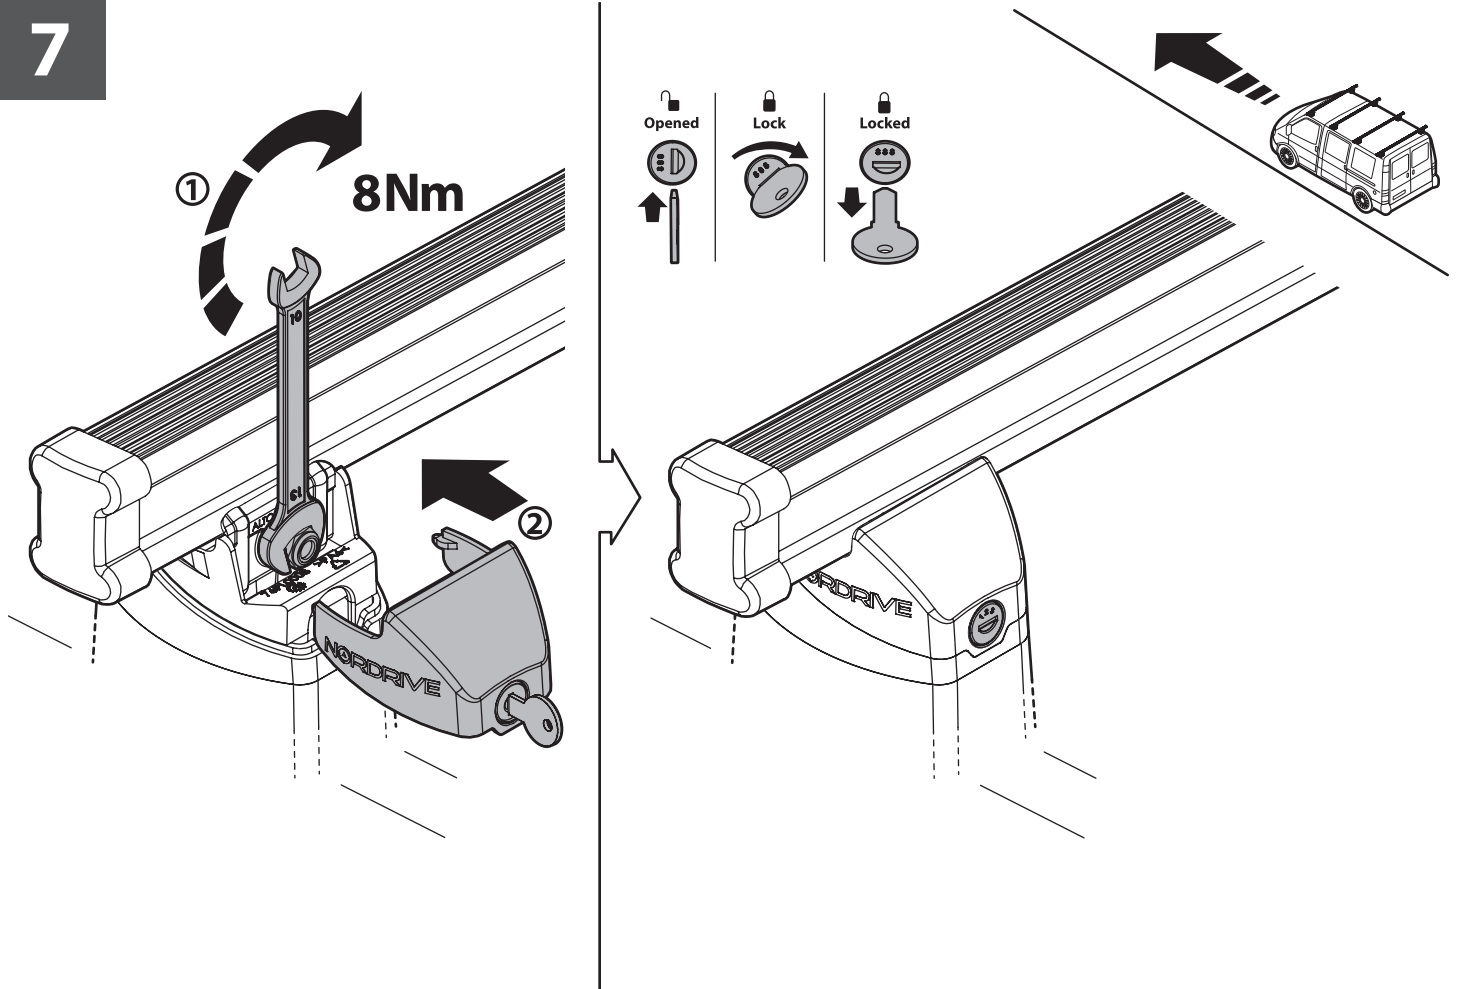


Diagram showing the lock being installed on the bar. Step 1 shows the lock being inserted into the bar. Step 2 shows the lock being secured with a key. The lock is secured with a key, and the bar is then secured to the roof rails with nuts and washers. The diagram shows the lock being inserted into the bar and the key being used to lock it. The lock is secured with a key, and the bar is then secured to the roof rails with nuts and washers.

① 8Nm

②

Opened Lock Locked


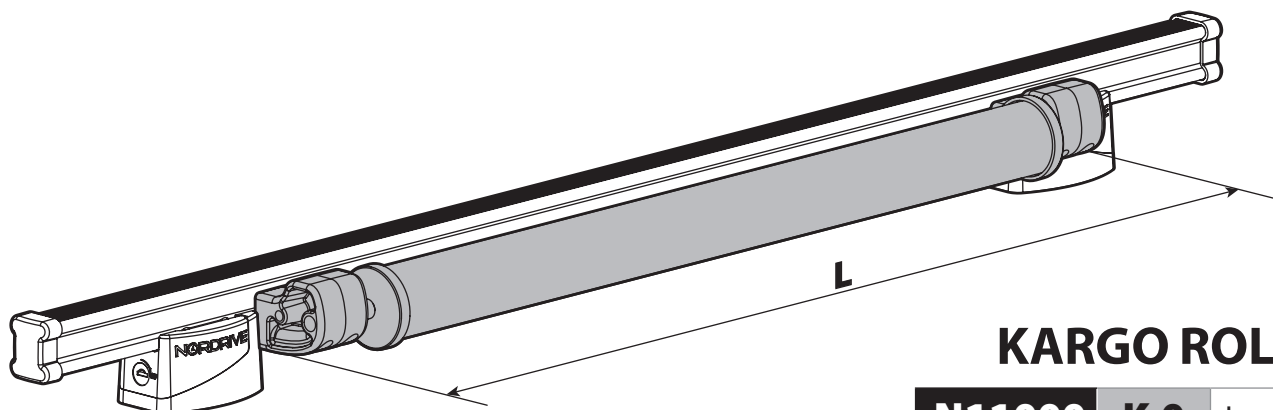


Diagram showing a car with the Kargo-Plus bar installed on its roof. An arrow points to the car, indicating the final step of the installation process.

# Kargo series




Acciaio / Steel




## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

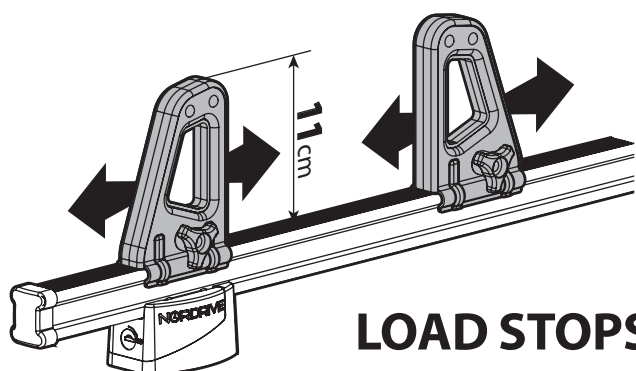


## LOAD STOPS

**N11001** K-1

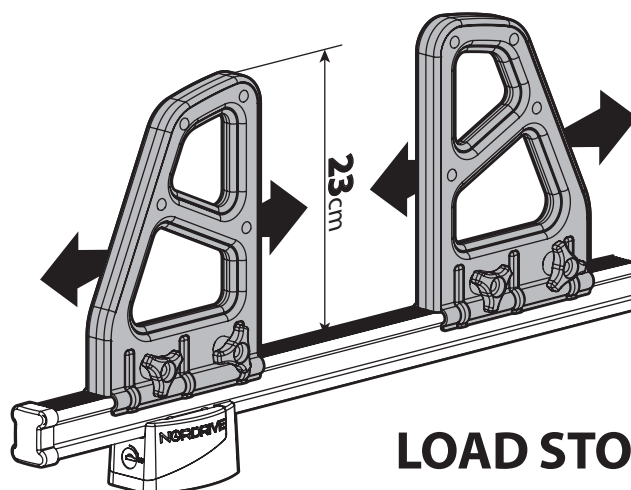

## LOAD STOPS

**N11002** K-2

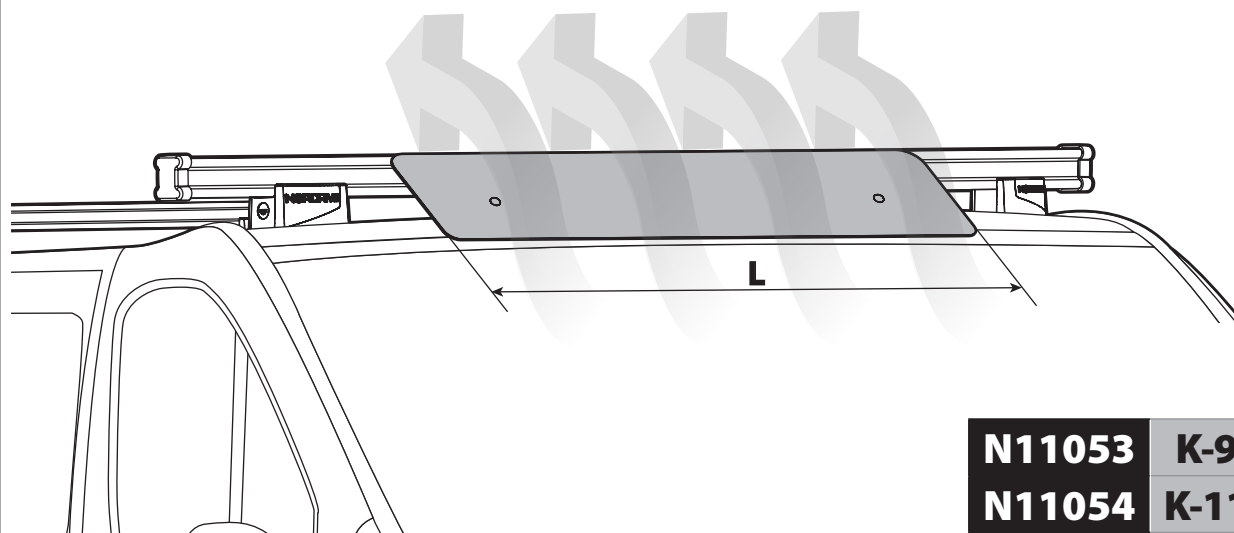

## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series





Alluminio / Aluminium

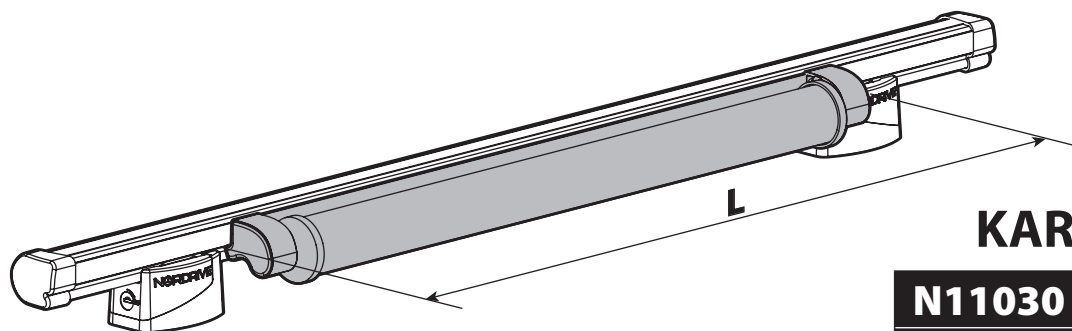

## KARGO ROLLER


**N11030** KP-0 L = 64 cm

**N11034** KP-7 L = 96 cm

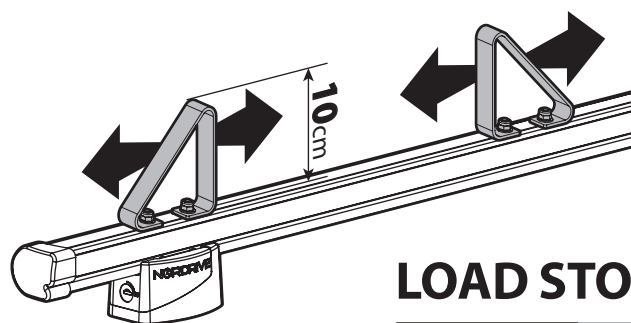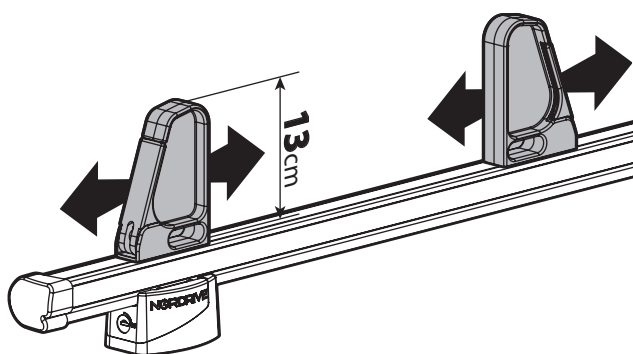


## LOAD STOPS

**N11031** KP-1

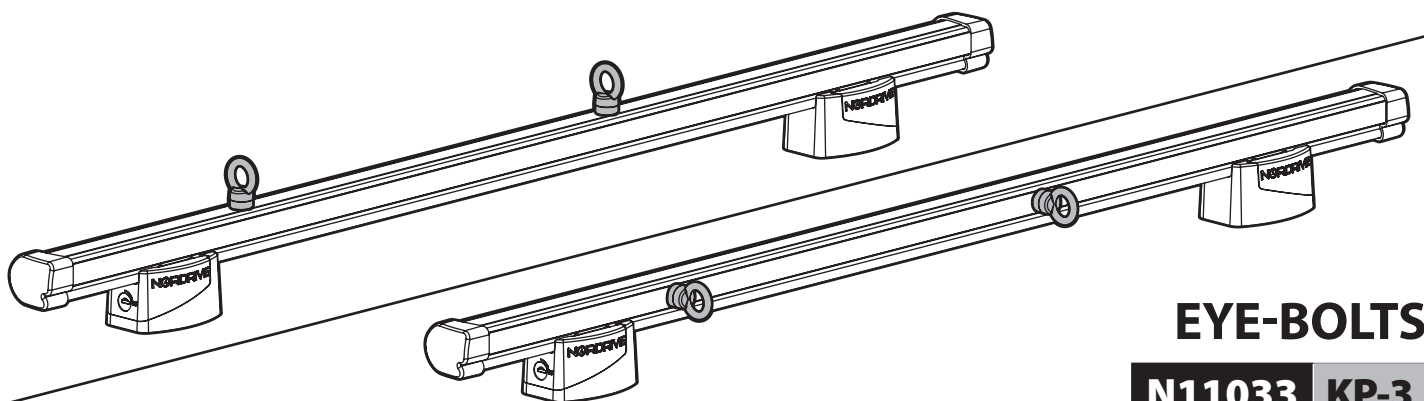

## EYE-BOLTS

**N11033** KP-3

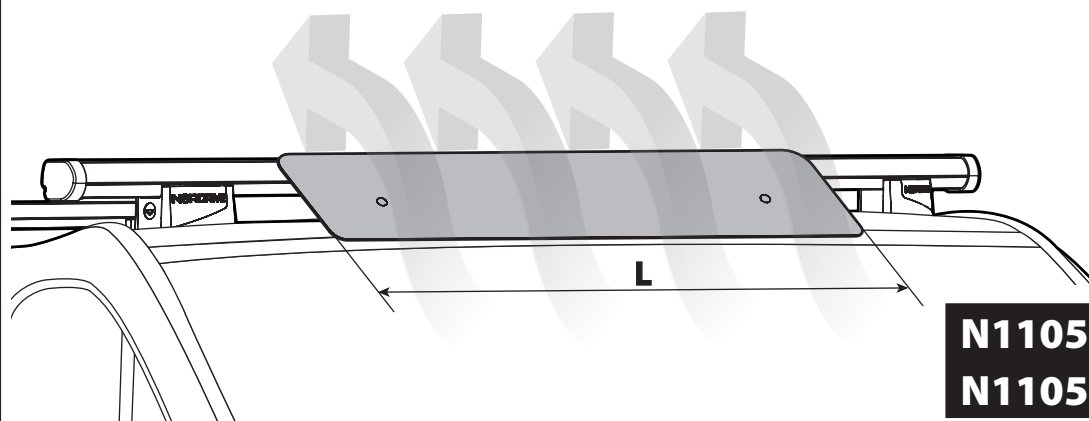

## SPOILER

**N11057** KP-9 L = 95 cm

**N11058** KP-11 L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel


**Kargo-Plus**  
series



Alluminio / Aluminium



**KARGO-TUBE**

<b>N11050</b>	<b>T200</b>	L = 205 cm
<b>N11051</b>	<b>T300</b>	L = 305 cm
<b>N11052</b>	<b>T400</b>	L = 405 cm

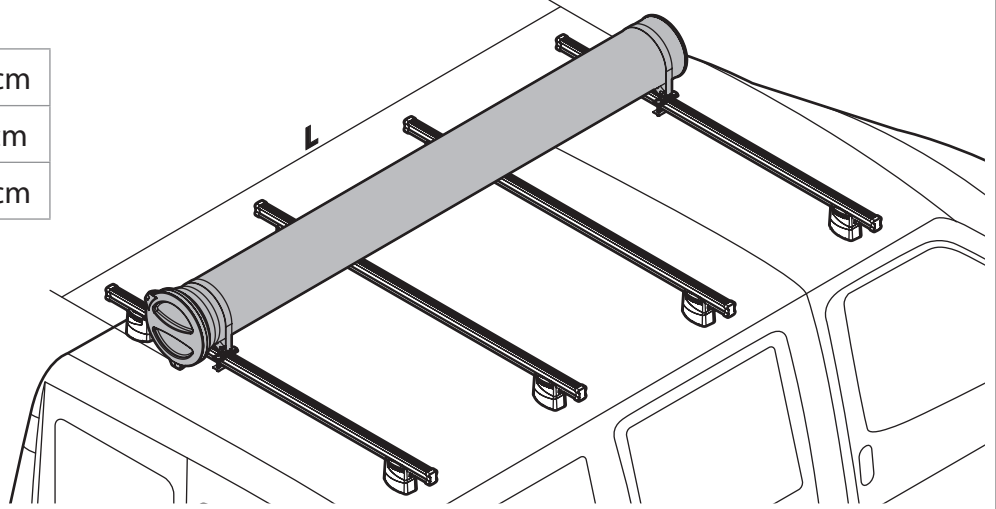


**LADDER HOLDER STRAPS**

**N11065 U-5**

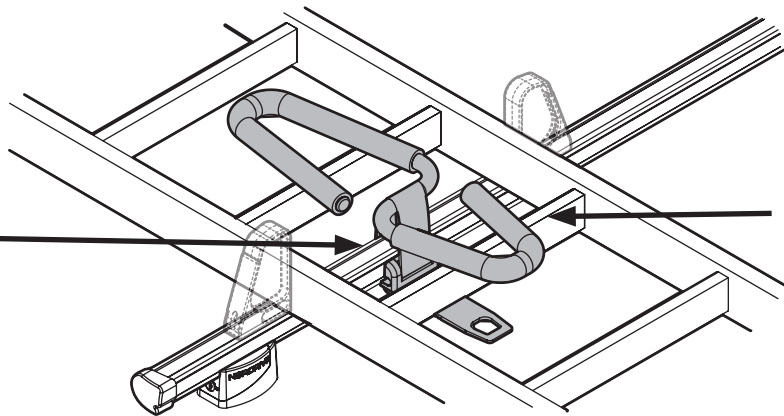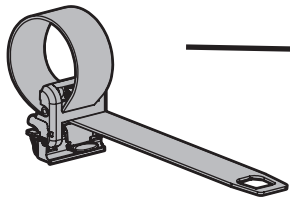


**LADDER STEP ADAPTER**

**N11067 U-6**

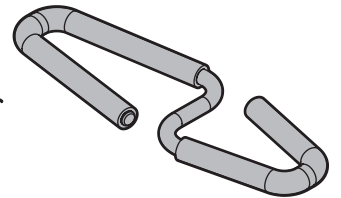

**EXTENSION ROLLER**

<b>N11020</b>	<b>U-0</b>	L = 64 cm
<b>N11021</b>	<b>U-7</b>	L = 96 cm

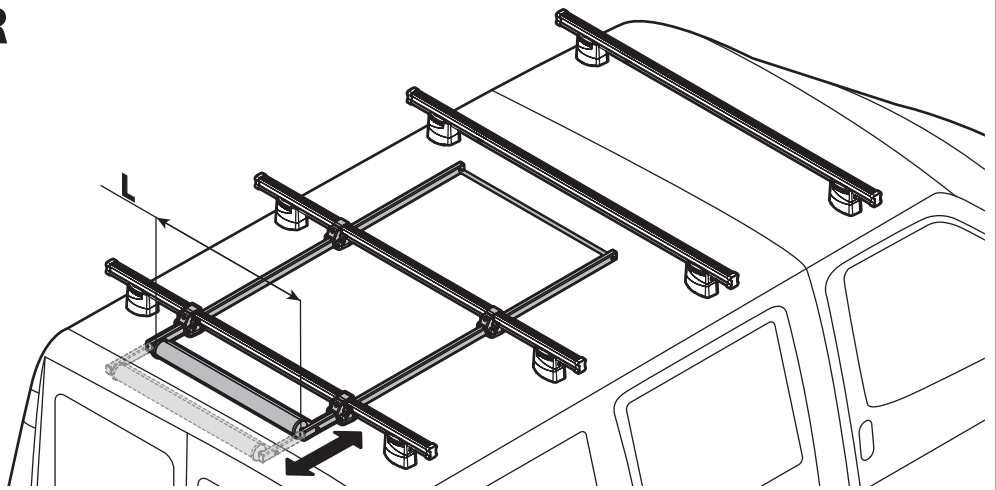

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

**Lot.**

**NORDRIVE®**  
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)