




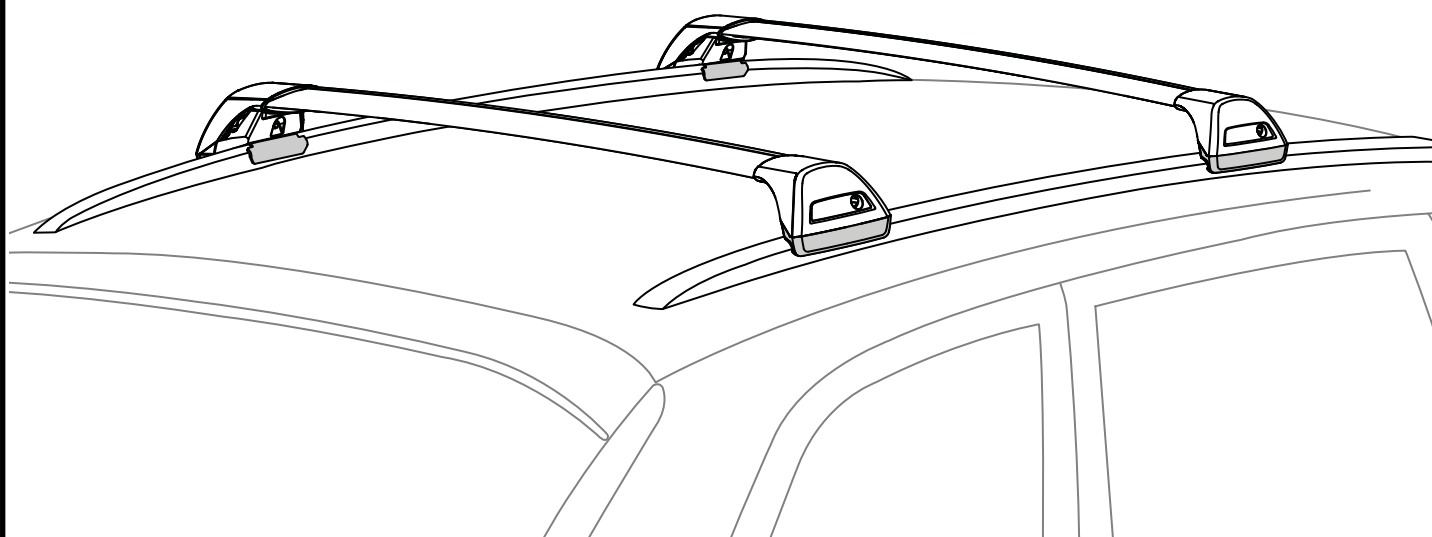



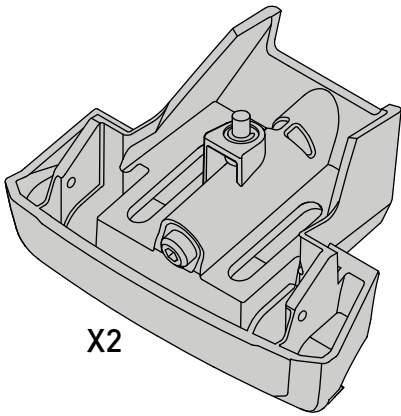
# K695

# Fitting Kit




MAX kg (lb)					
		<b>F</b> 	<b>T</b> 	<b>HD</b> 	<b>P</b> 
Audi A3, 5dr Sportback, 2004-12	AU, NZ, ZA, EU	75 kg (165 lb)			
Audi A6, 5dr Avant, 2011+	AU, NZ, ZA, EU, US	75 kg (165 lb)			
Audi Q3, 5dr SUV, 2012+	AU, NZ, ZA, EU	75 kg (165 lb)			


**CONTENTS • CONTENUTO • CONTENIDO • INHALT • CONTENUTI**



X2

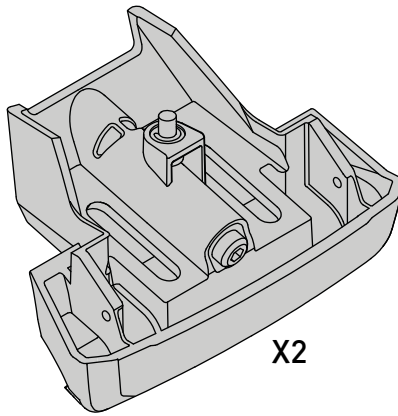


X2

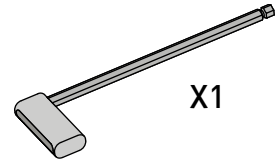


X1




X8

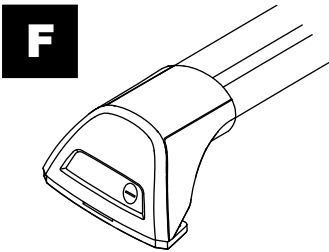


Flush Bar (F)

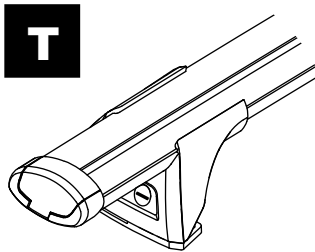


Through Bar (T)

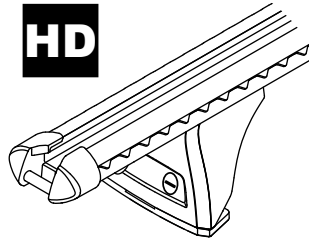


Heavy Duty Bar (HD)

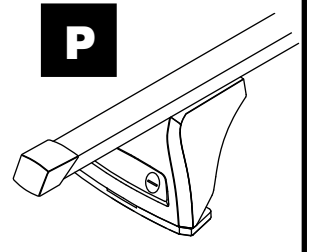







Square Bar/P-Bar (P)




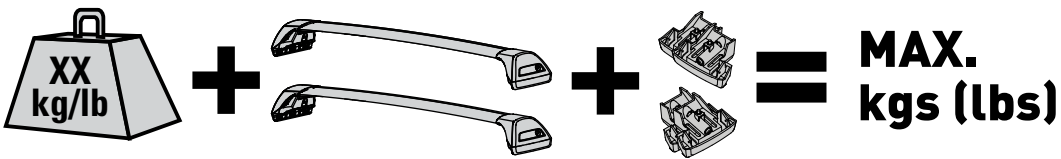








**K695**

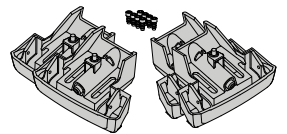




**= 1.1 kg**  
**(2.5 lbs.)**

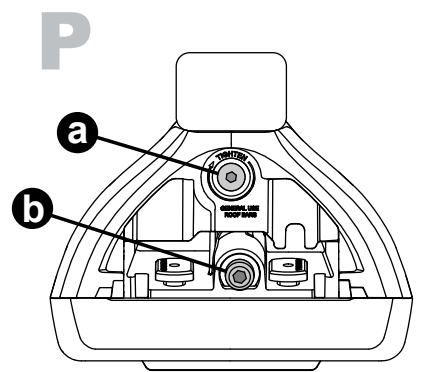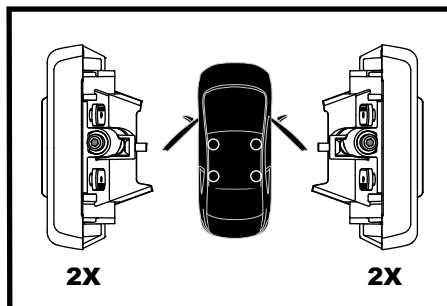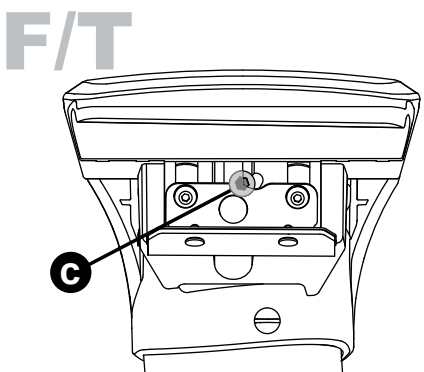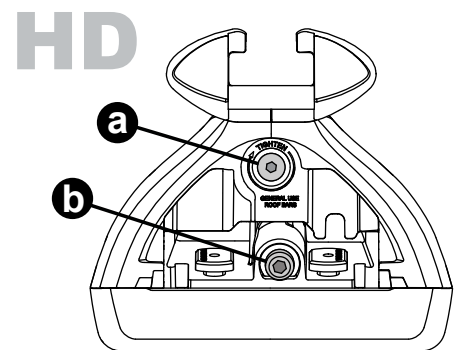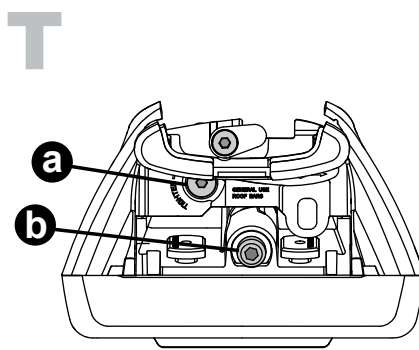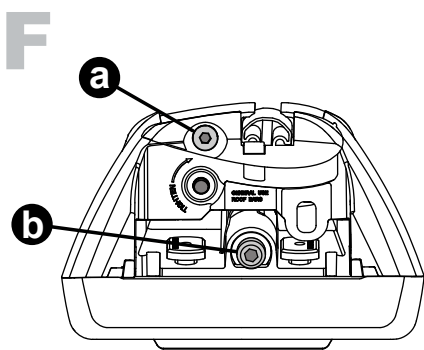


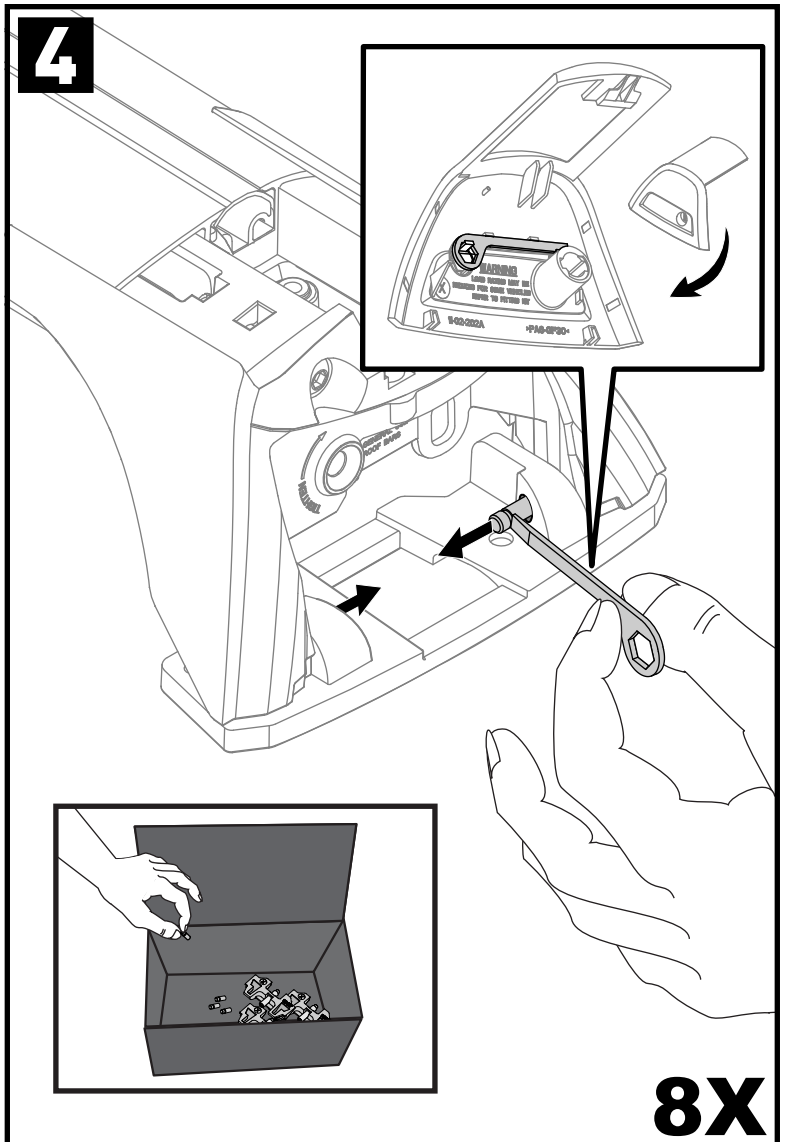
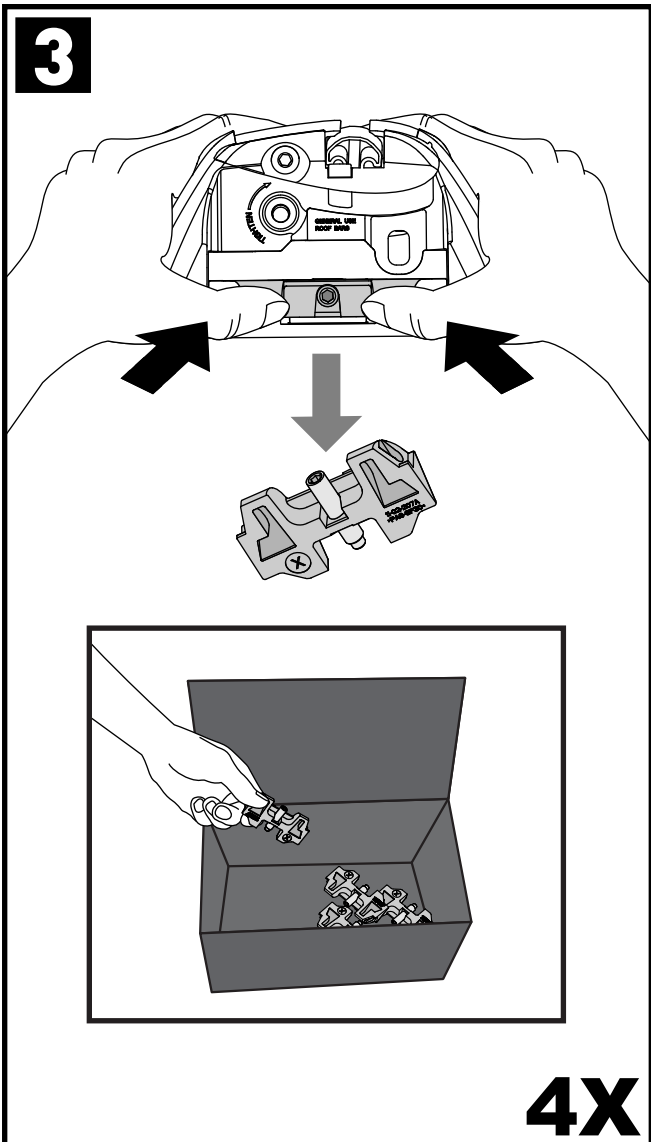
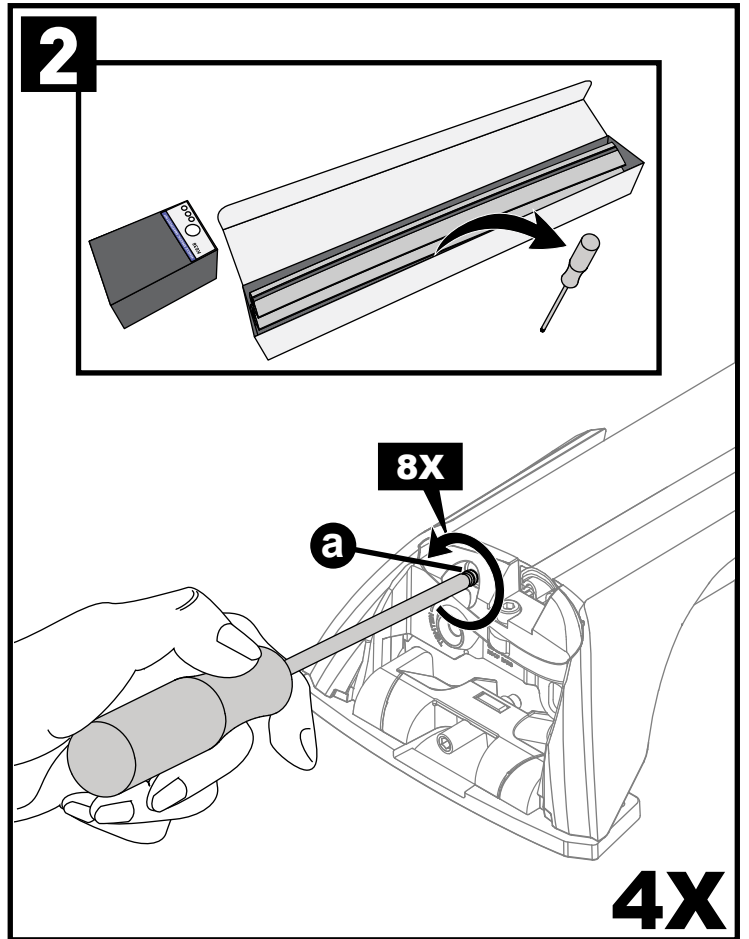
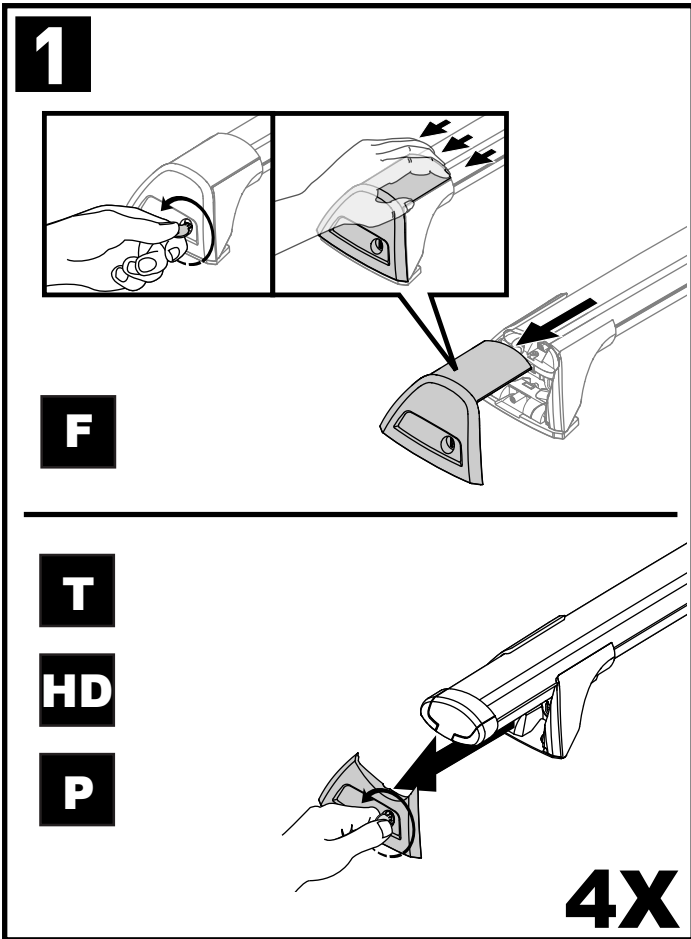


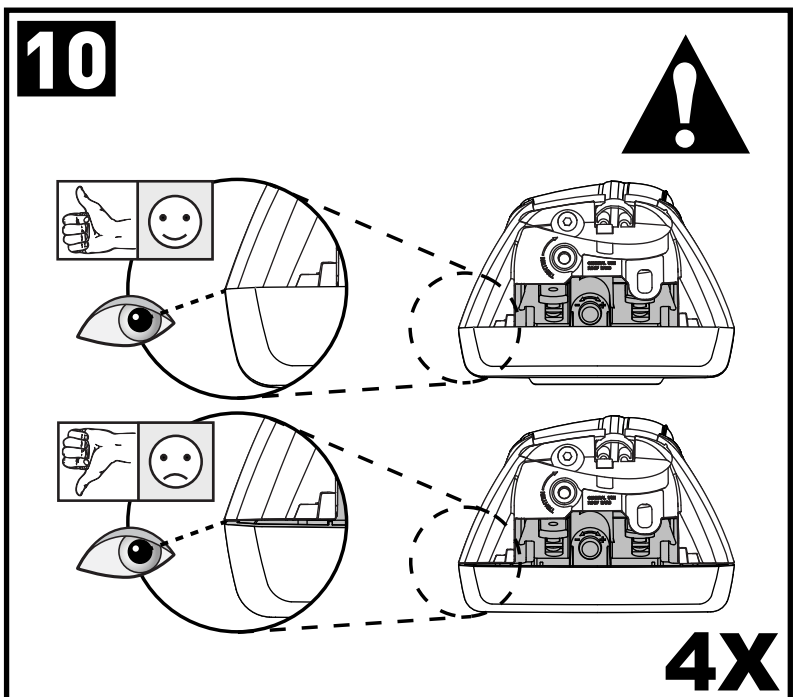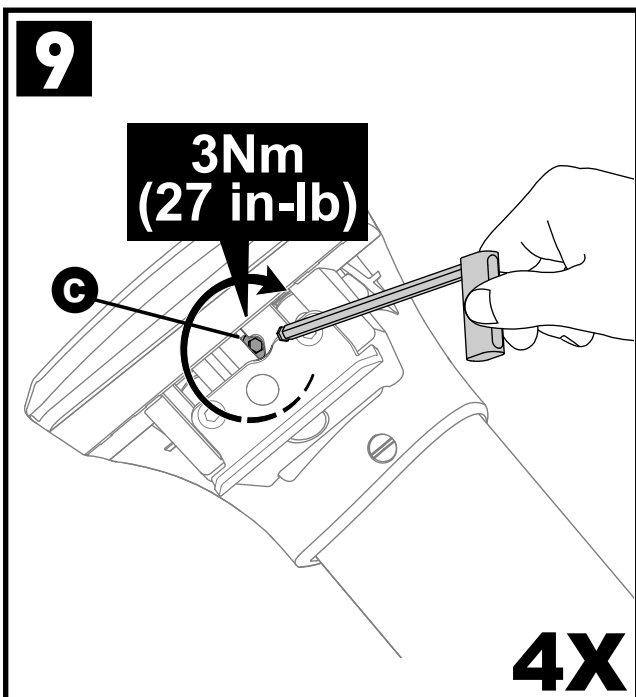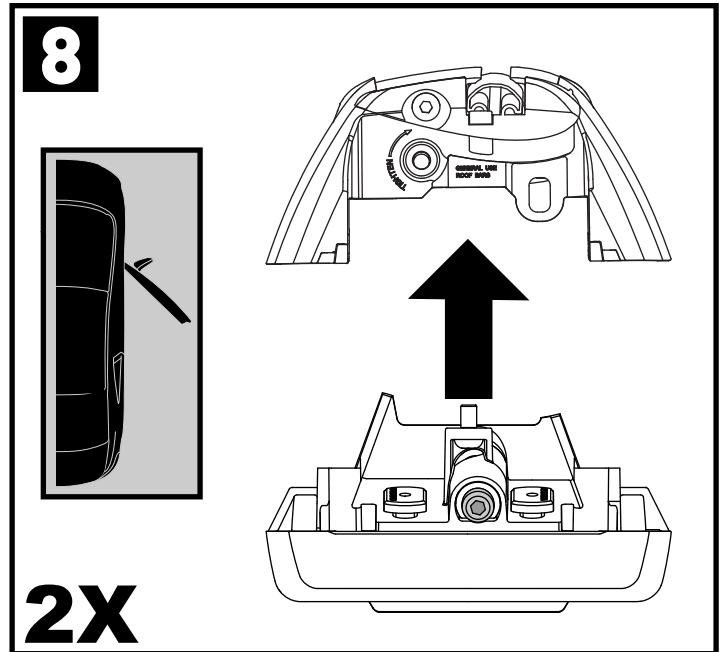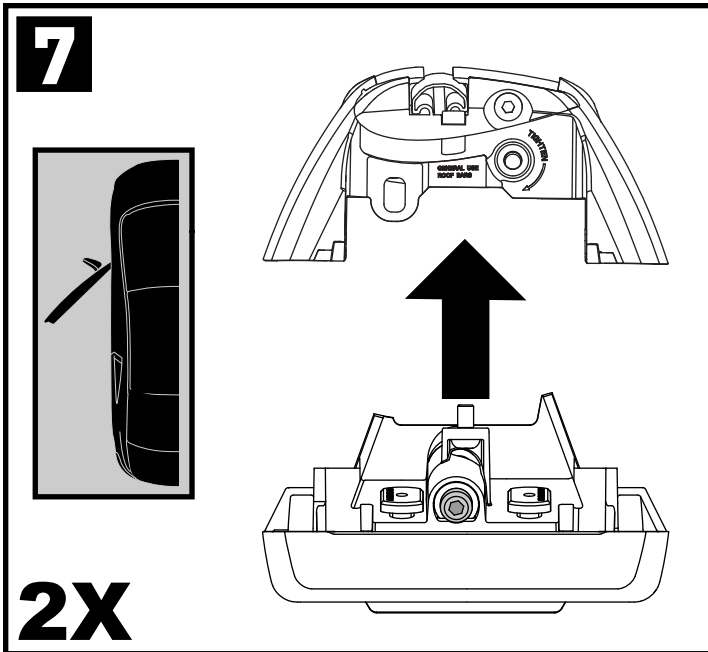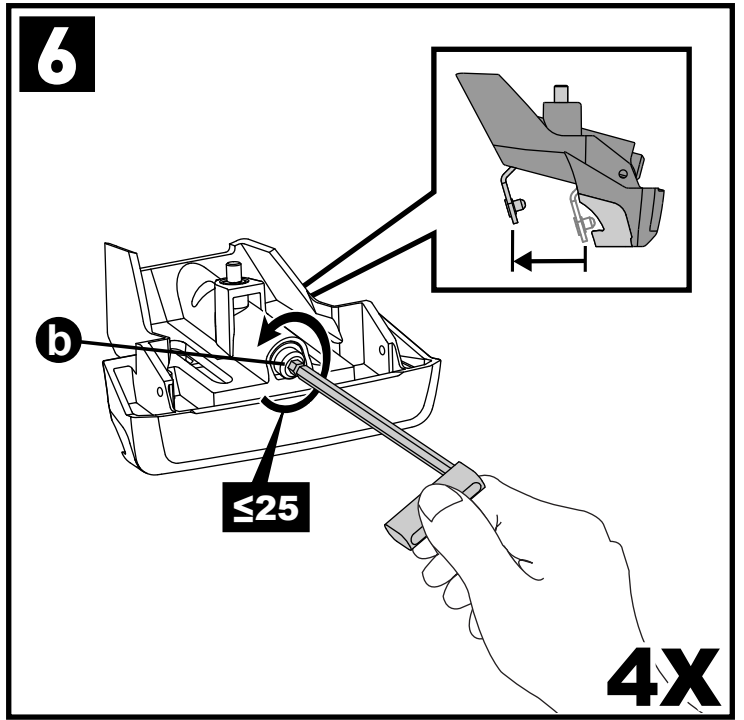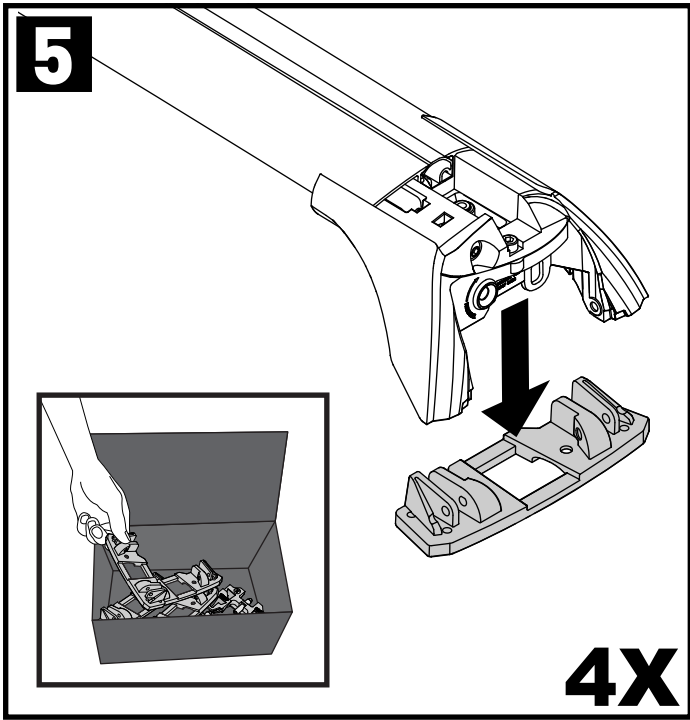



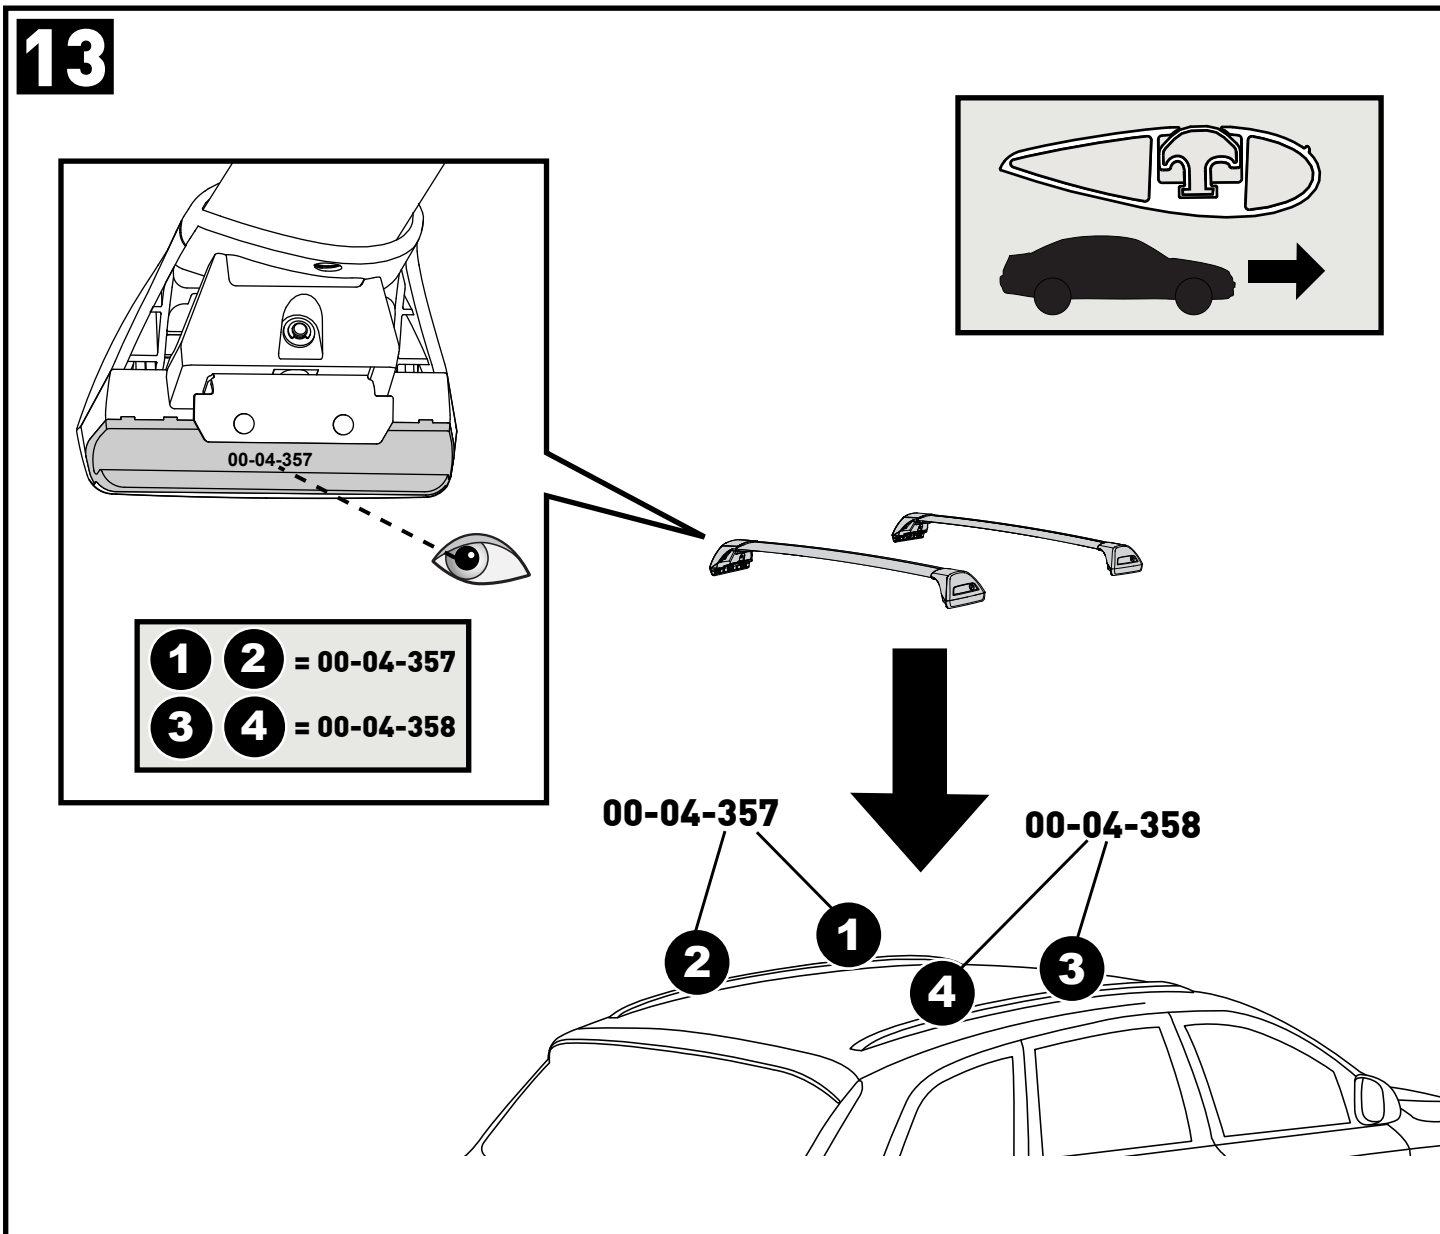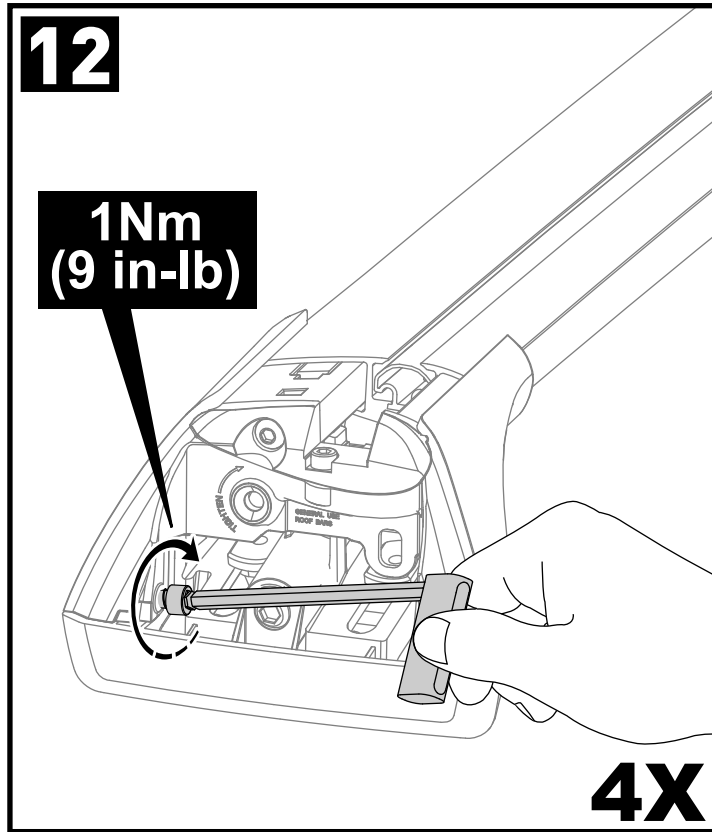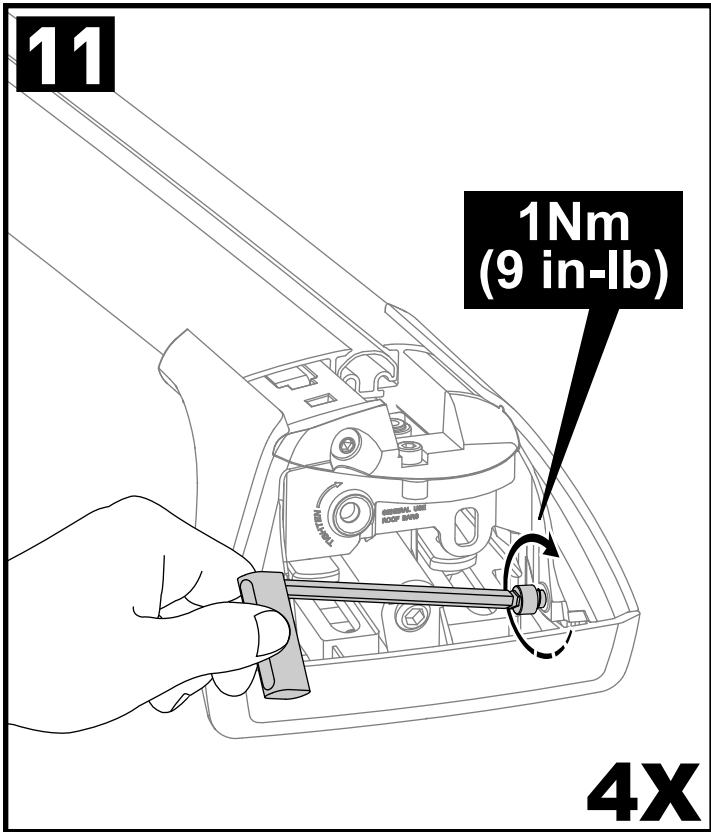


**14**

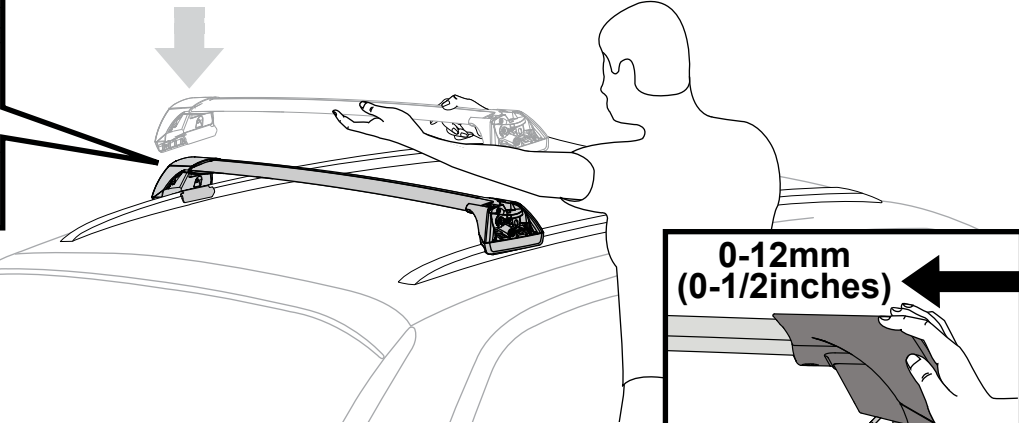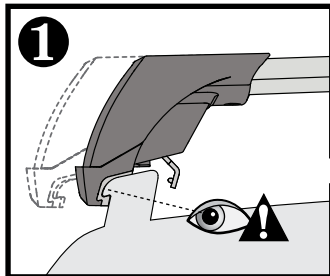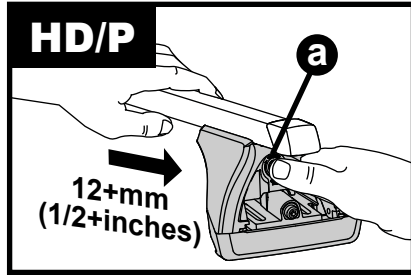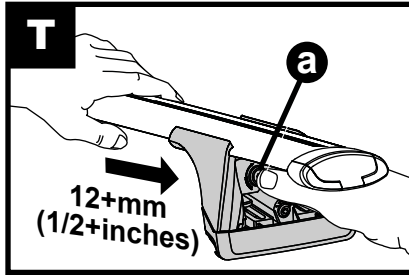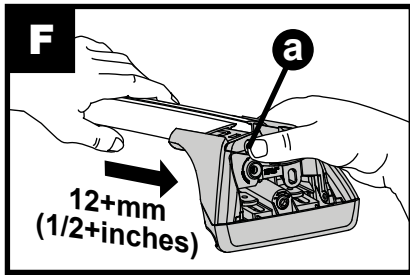


**2X**

**15**

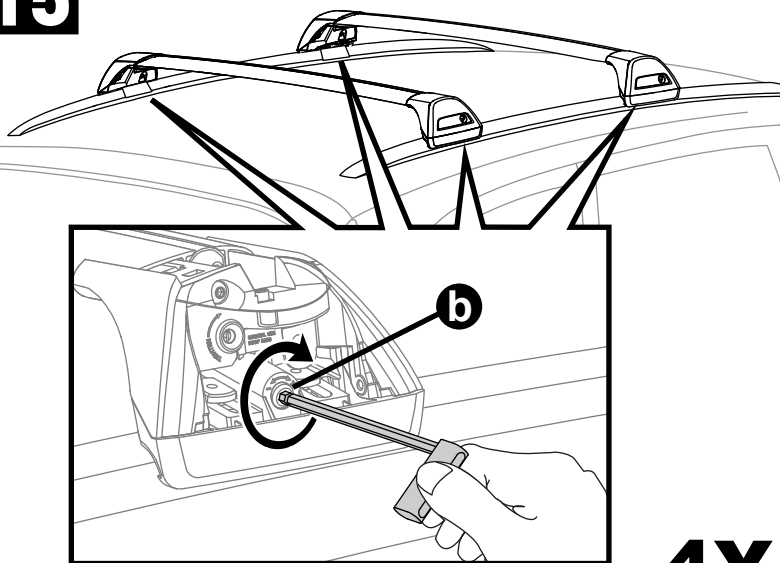


**4X**

**16**

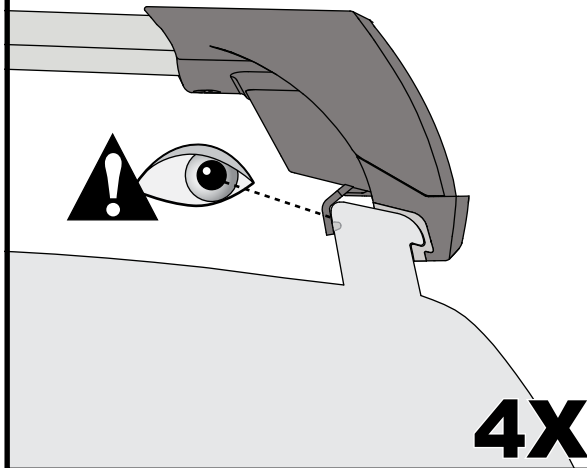

**4X**

**17**

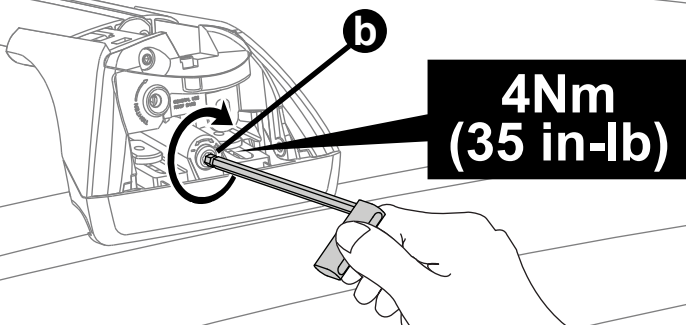


**4X**

18



3Nm  
(27 in-lb)

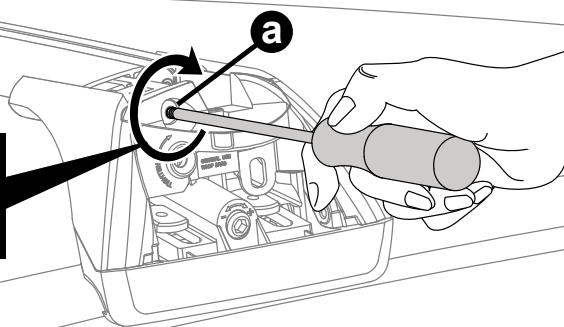

4X



19

F

T

HD




P

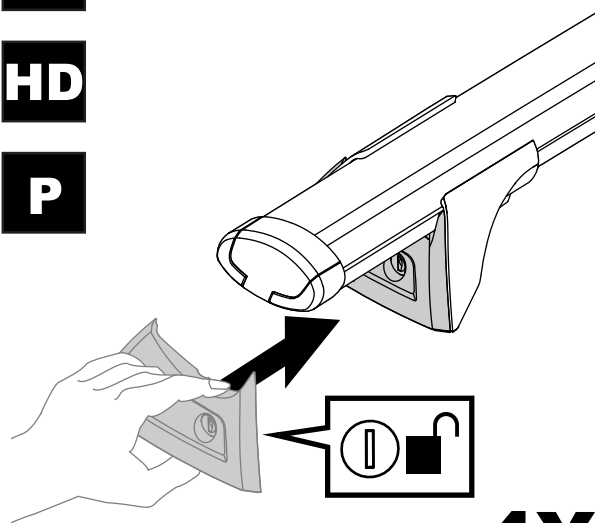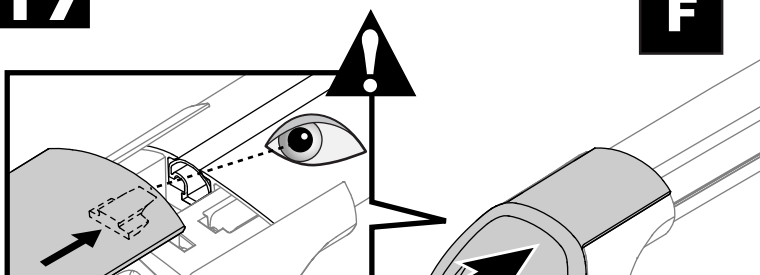

4X


20

21

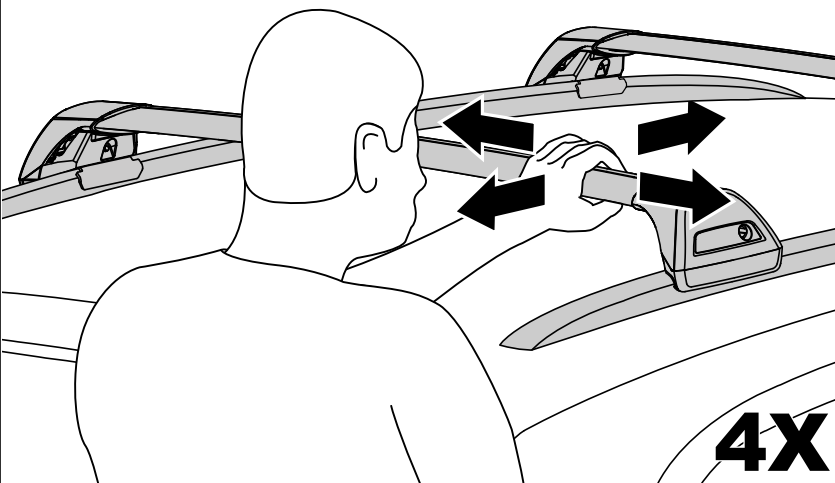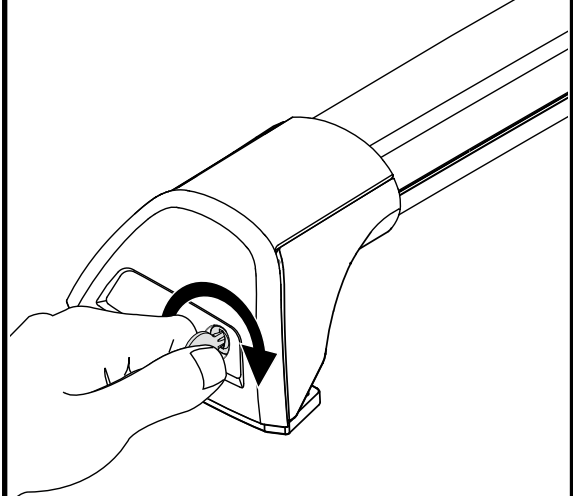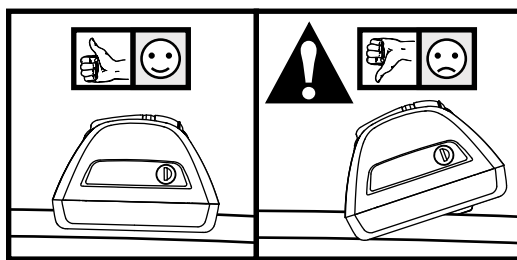

4X

4X

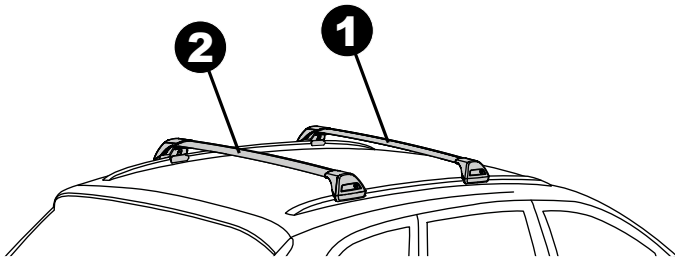







<b>K695</b>	<b>X 1</b>	<b>X 2</b>
<b>A3</b>	925mm/36 3/8"	880mm/34 5/8"
<b>A6</b>	940mm/37"	877mm/34 1/2"
<b>Q3</b>	920mm/36 1/4"	895mm/35 1/4"

**F**

**T**

**HD**

**P**

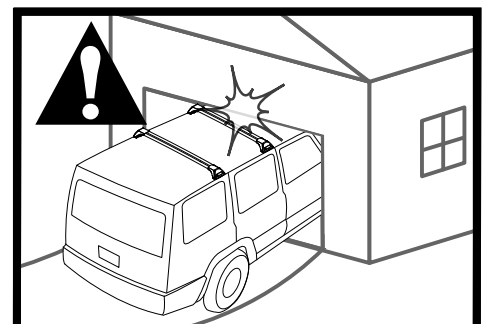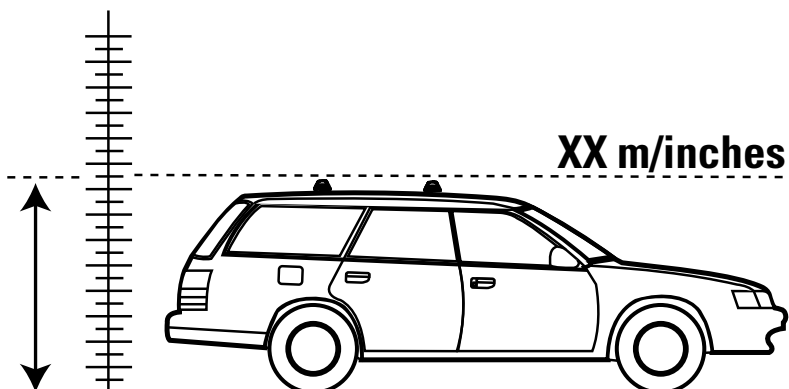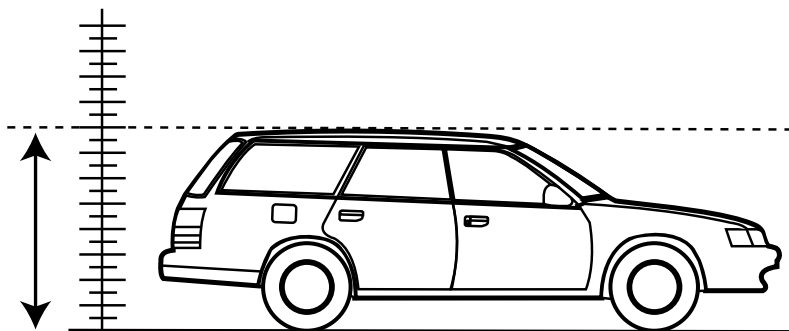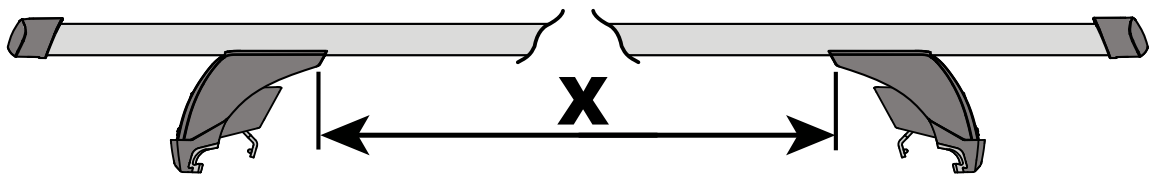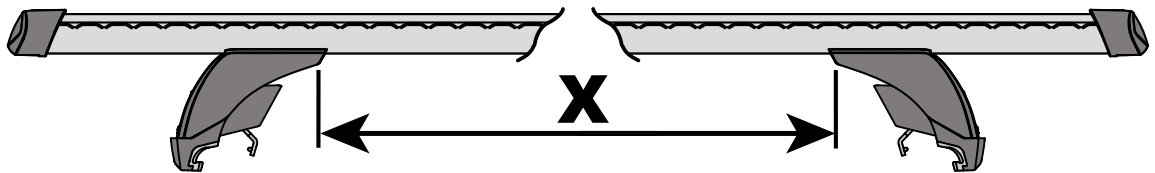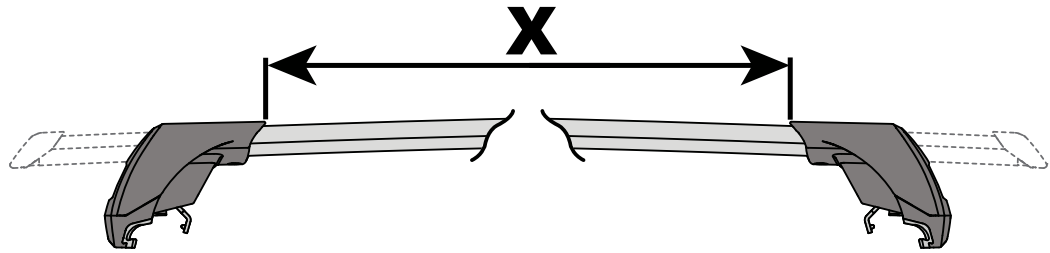

**Record Height Here.  
 Noter la hauteur ici.  
 Escriba aquí la altura.  
 Hier Größe eintragen.  
 Annotate qui l'altezza.**